 
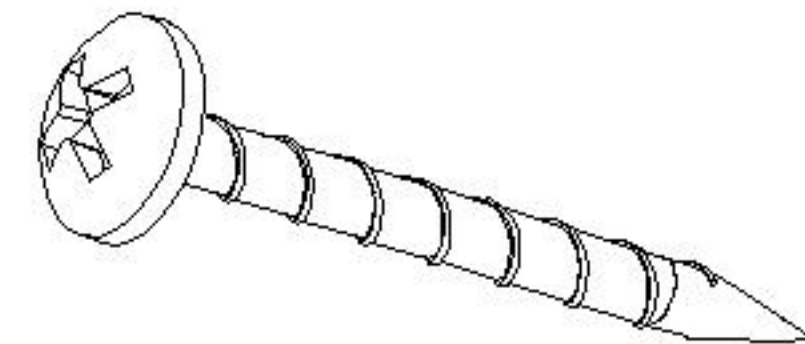 
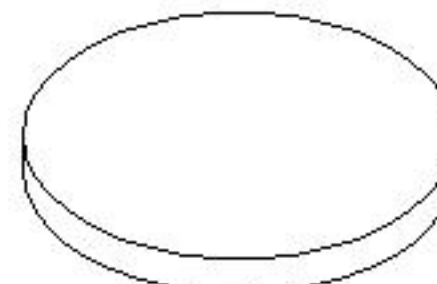 
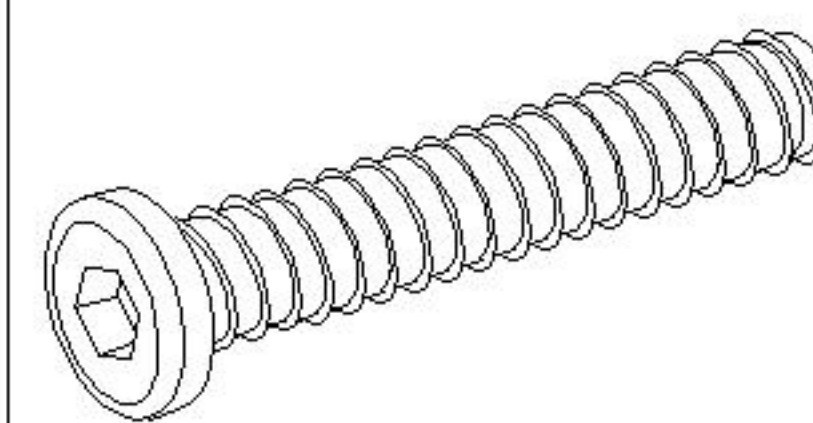 
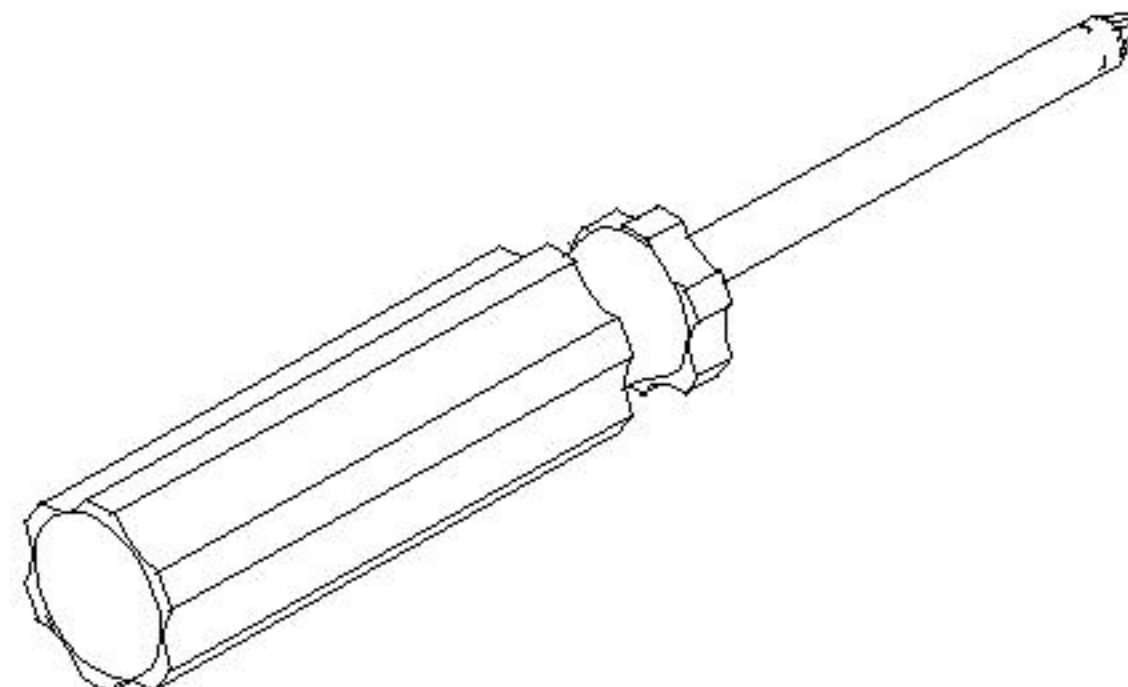 
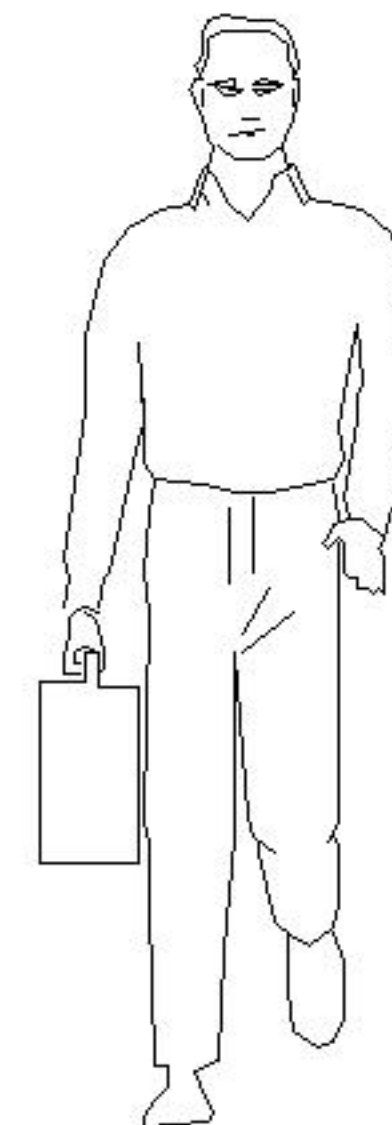 
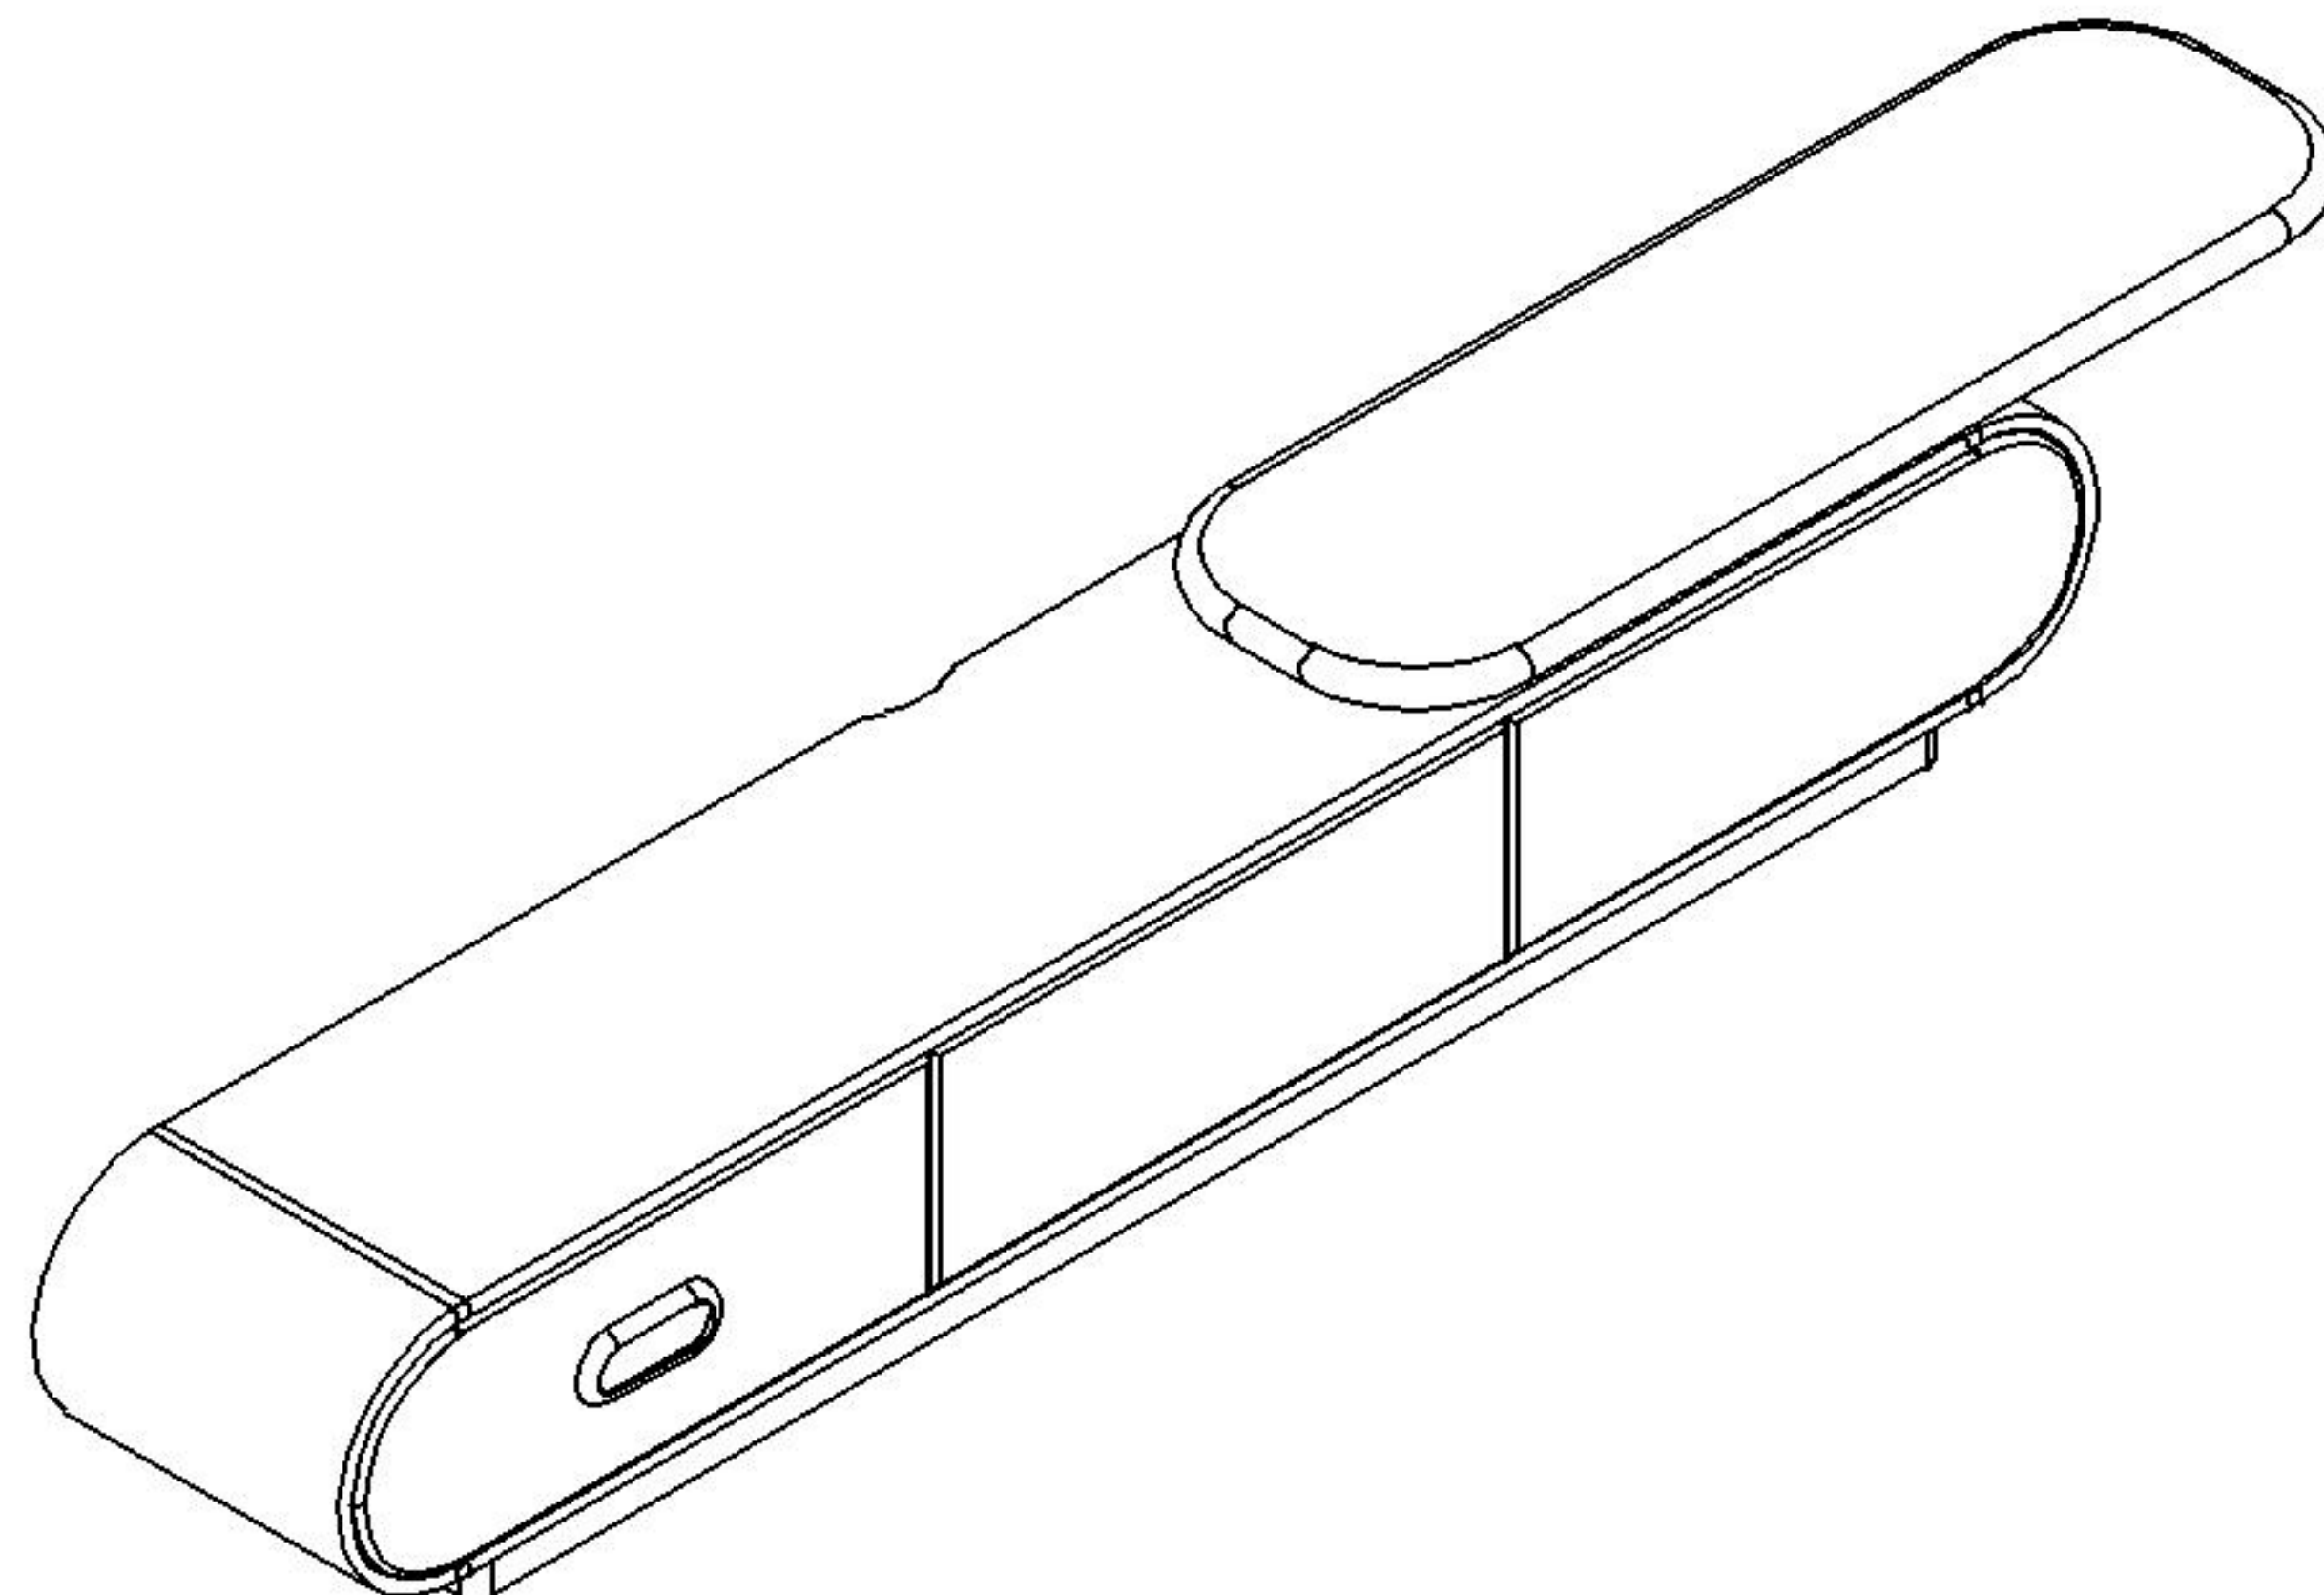 


LINSY 林氏家居		五金表/Hardware list				部件表/Parts List				
安装示意图/Assembly Instruction		 (A)*1 内六角扳手5mm Hexagon wrench  (B)*2 大扁白攻M4*25mm Flat head tapping screw  (C)*8 灰色毛毡垫 φ16*3 Foot pad  (D)*4 斜边内六角螺杆-M8x25 Beveled hexagon socket head screw	编号NO.	名称Name	规格 (mm) Specification	数量QTY	材质Material			
产品名称 Model NO.	YF1M-A(伸缩款电视柜)		①	整装柜子Packaged cabinet	2240*398*345	1	纤维板+欧松板 Fiberboard+Oriented Strand			
产品规格 Specification	2430~2830*413*388mm		1-1	柜体 cabinet	2240*398*300	1	纤维板 Fiberboard			
安装工具 Tool	安装人数 Installer		1-2	左抽屉面板Drawer's panel (L)	734*266*15	1	纤维板 Fiberboard			
  注：为保证设计效果，部分尺寸为定制尺寸，不影响使用。 			1-3	中抽屉面板Drawer's middle board	734*266*15	1	纤维板 Fiberboard			
			1-4	右抽屉面板Drawer's panel (R)	734*266*15	1	纤维板 Fiberboard			
			1-5	抽屉侧板Drawer's sideboard	290*206*15	6	欧松板 Oriented Strand			
			1-6	抽屉后板Drawer's Back board	548*206*15	2	欧松板 Oriented Strand			
			1-7	中抽屉后板Middle Drawer's back board	676*206*15	1	欧松板 Oriented Strand			
			1-8	抽屉底托条Drawer's bottom bracket	290*58*15	1	欧松板 Oriented Strand			
			1-9	抽屉底板Drawer's Bottom board	528*300*5	2	纤维板 Fiberboard			
			1-10	中抽屉底板Middle Drawer's bottom board	656*300*5	1	纤维板 Fiberboard			
			1-11	前脚条Front foot strip	1870*50*45	1	欧松板 Oriented Strand			
			1-12	侧脚条Side foot strip	308*45*15	4	欧松板 Oriented Strand			
			②	装饰条Decorative strip	180*80*15	1	白蜡木 Ash			
			③	右面板Board (R)	1262*394*40	1	白蜡木 Ash			

YF1M-A(伸缩款电视柜)	产品分解图/Exploded drawing	部件表/Parts List	
		编号NO.	名称Name
		①	整装柜子Packaged cabinet
		1-1	柜体 cabinet
		1-2	左抽屉面板Drawer's panel (L)
		1-3	中抽屉面板Drawer's middle board
		1-4	右抽屉面板Drawer's panel (R)
		1-5	抽屉侧板Drawer's sideboard
		1-6	抽屉后板Drawer's Back board
		1-7	中抽屉后板Middle Drawer's back board
		1-8	抽屉底托条Drawer's bottom bracket
		1-9	抽屉底板Drawer's Bottom board
		1-10	中抽屉底板Middle Drawer's bottom board
		1-11	前脚条Front foot strip
		1-12	侧脚条Side foot strip
		②	装饰条Decorative strip
③	右面板Board (R)		


YF1M-A (伸缩款电视柜)

安装方法/
Installation method

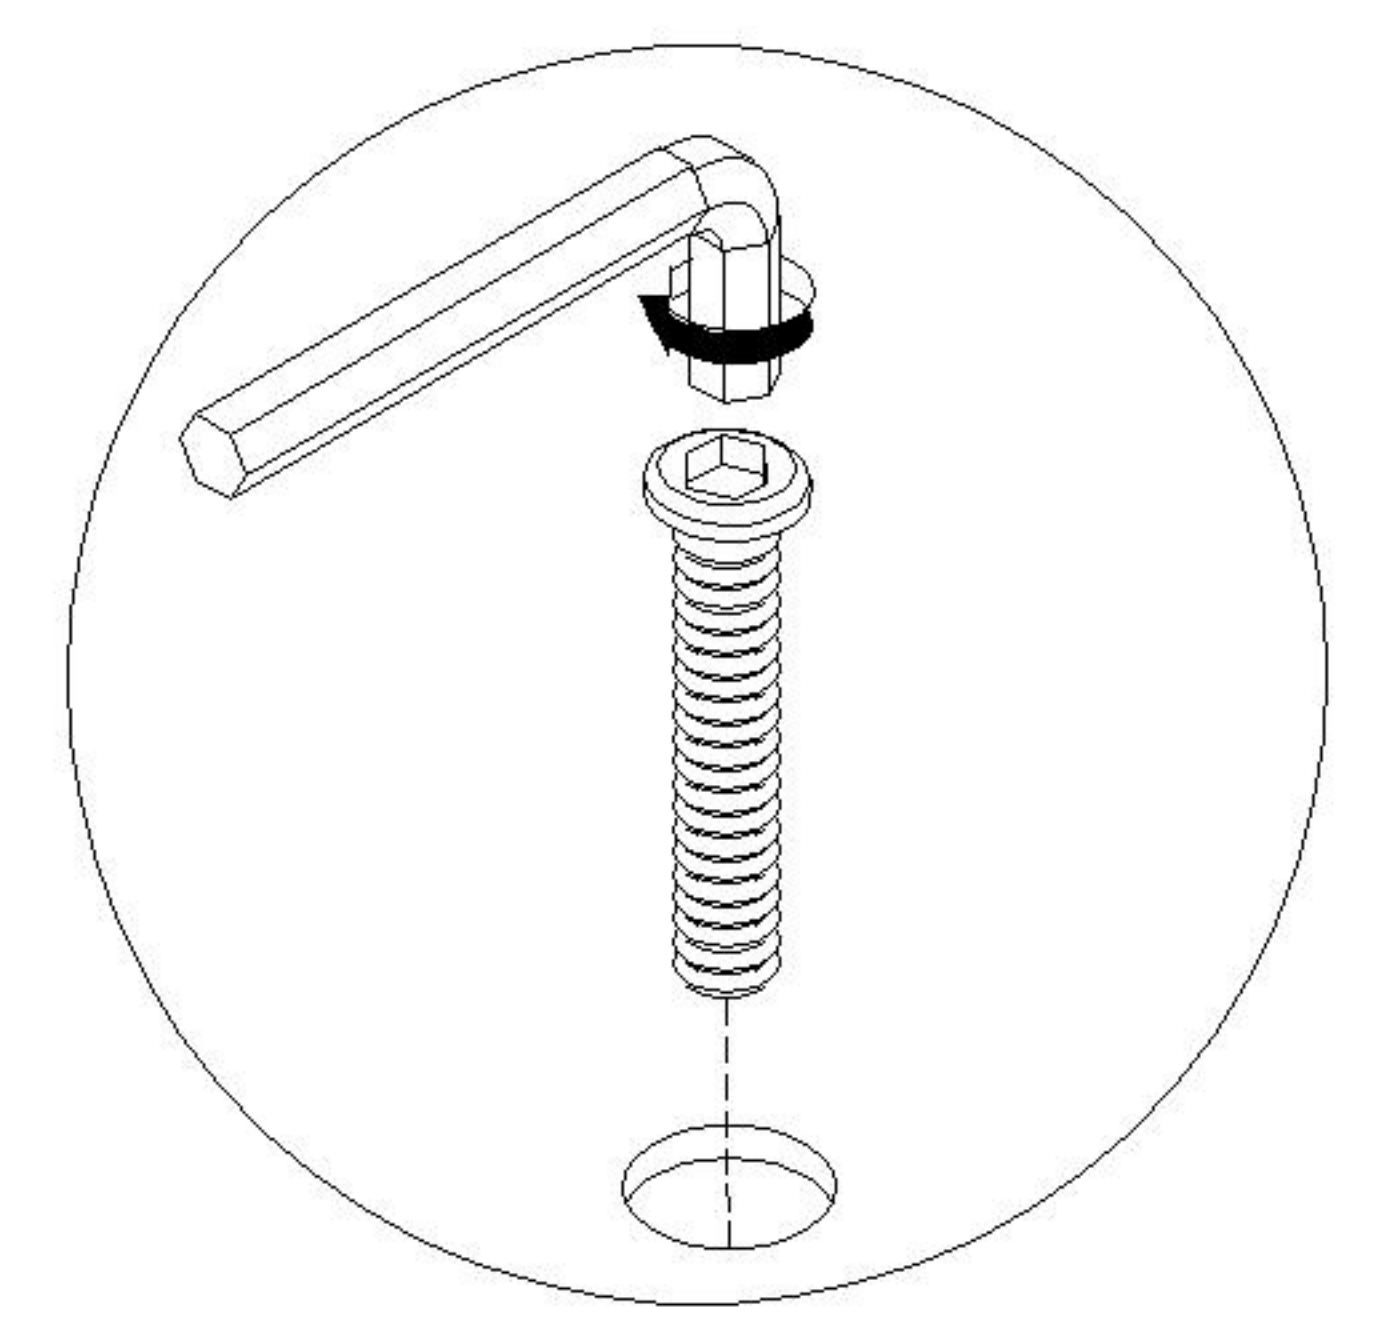


斜边内六角螺杆
Beveled hexagon socket head screw

 (C)*8

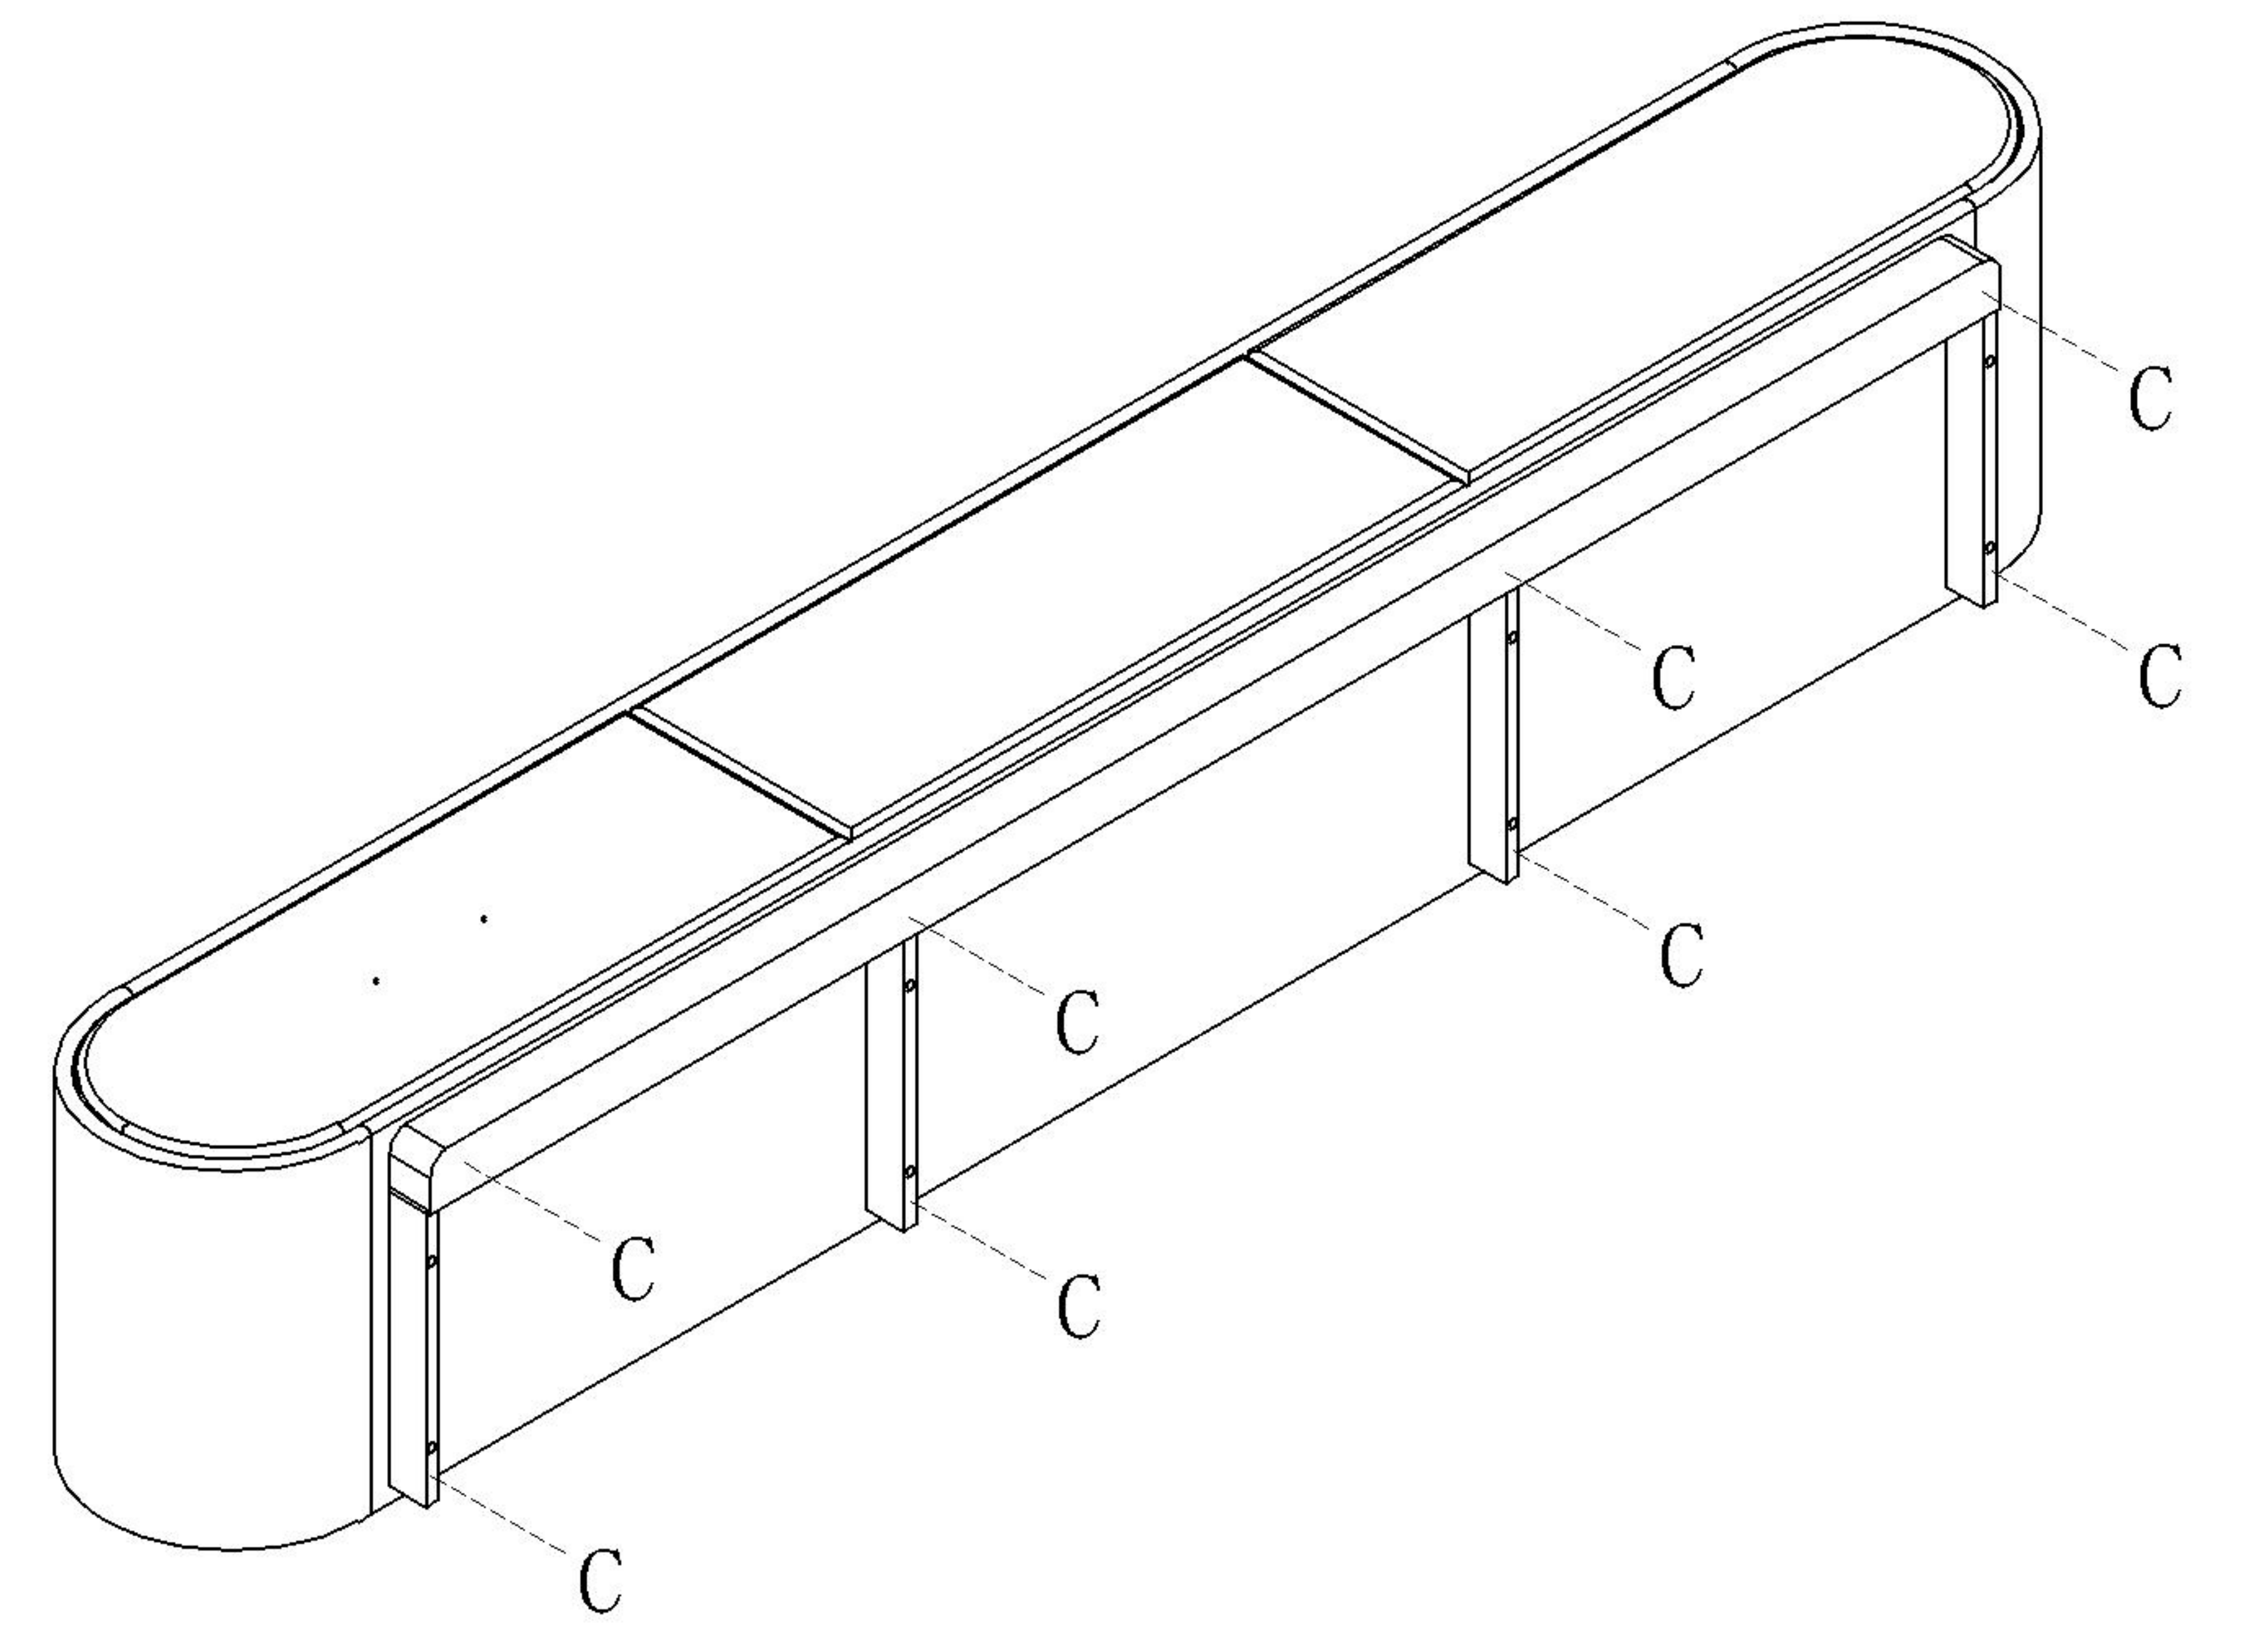

1


 
(B)*2

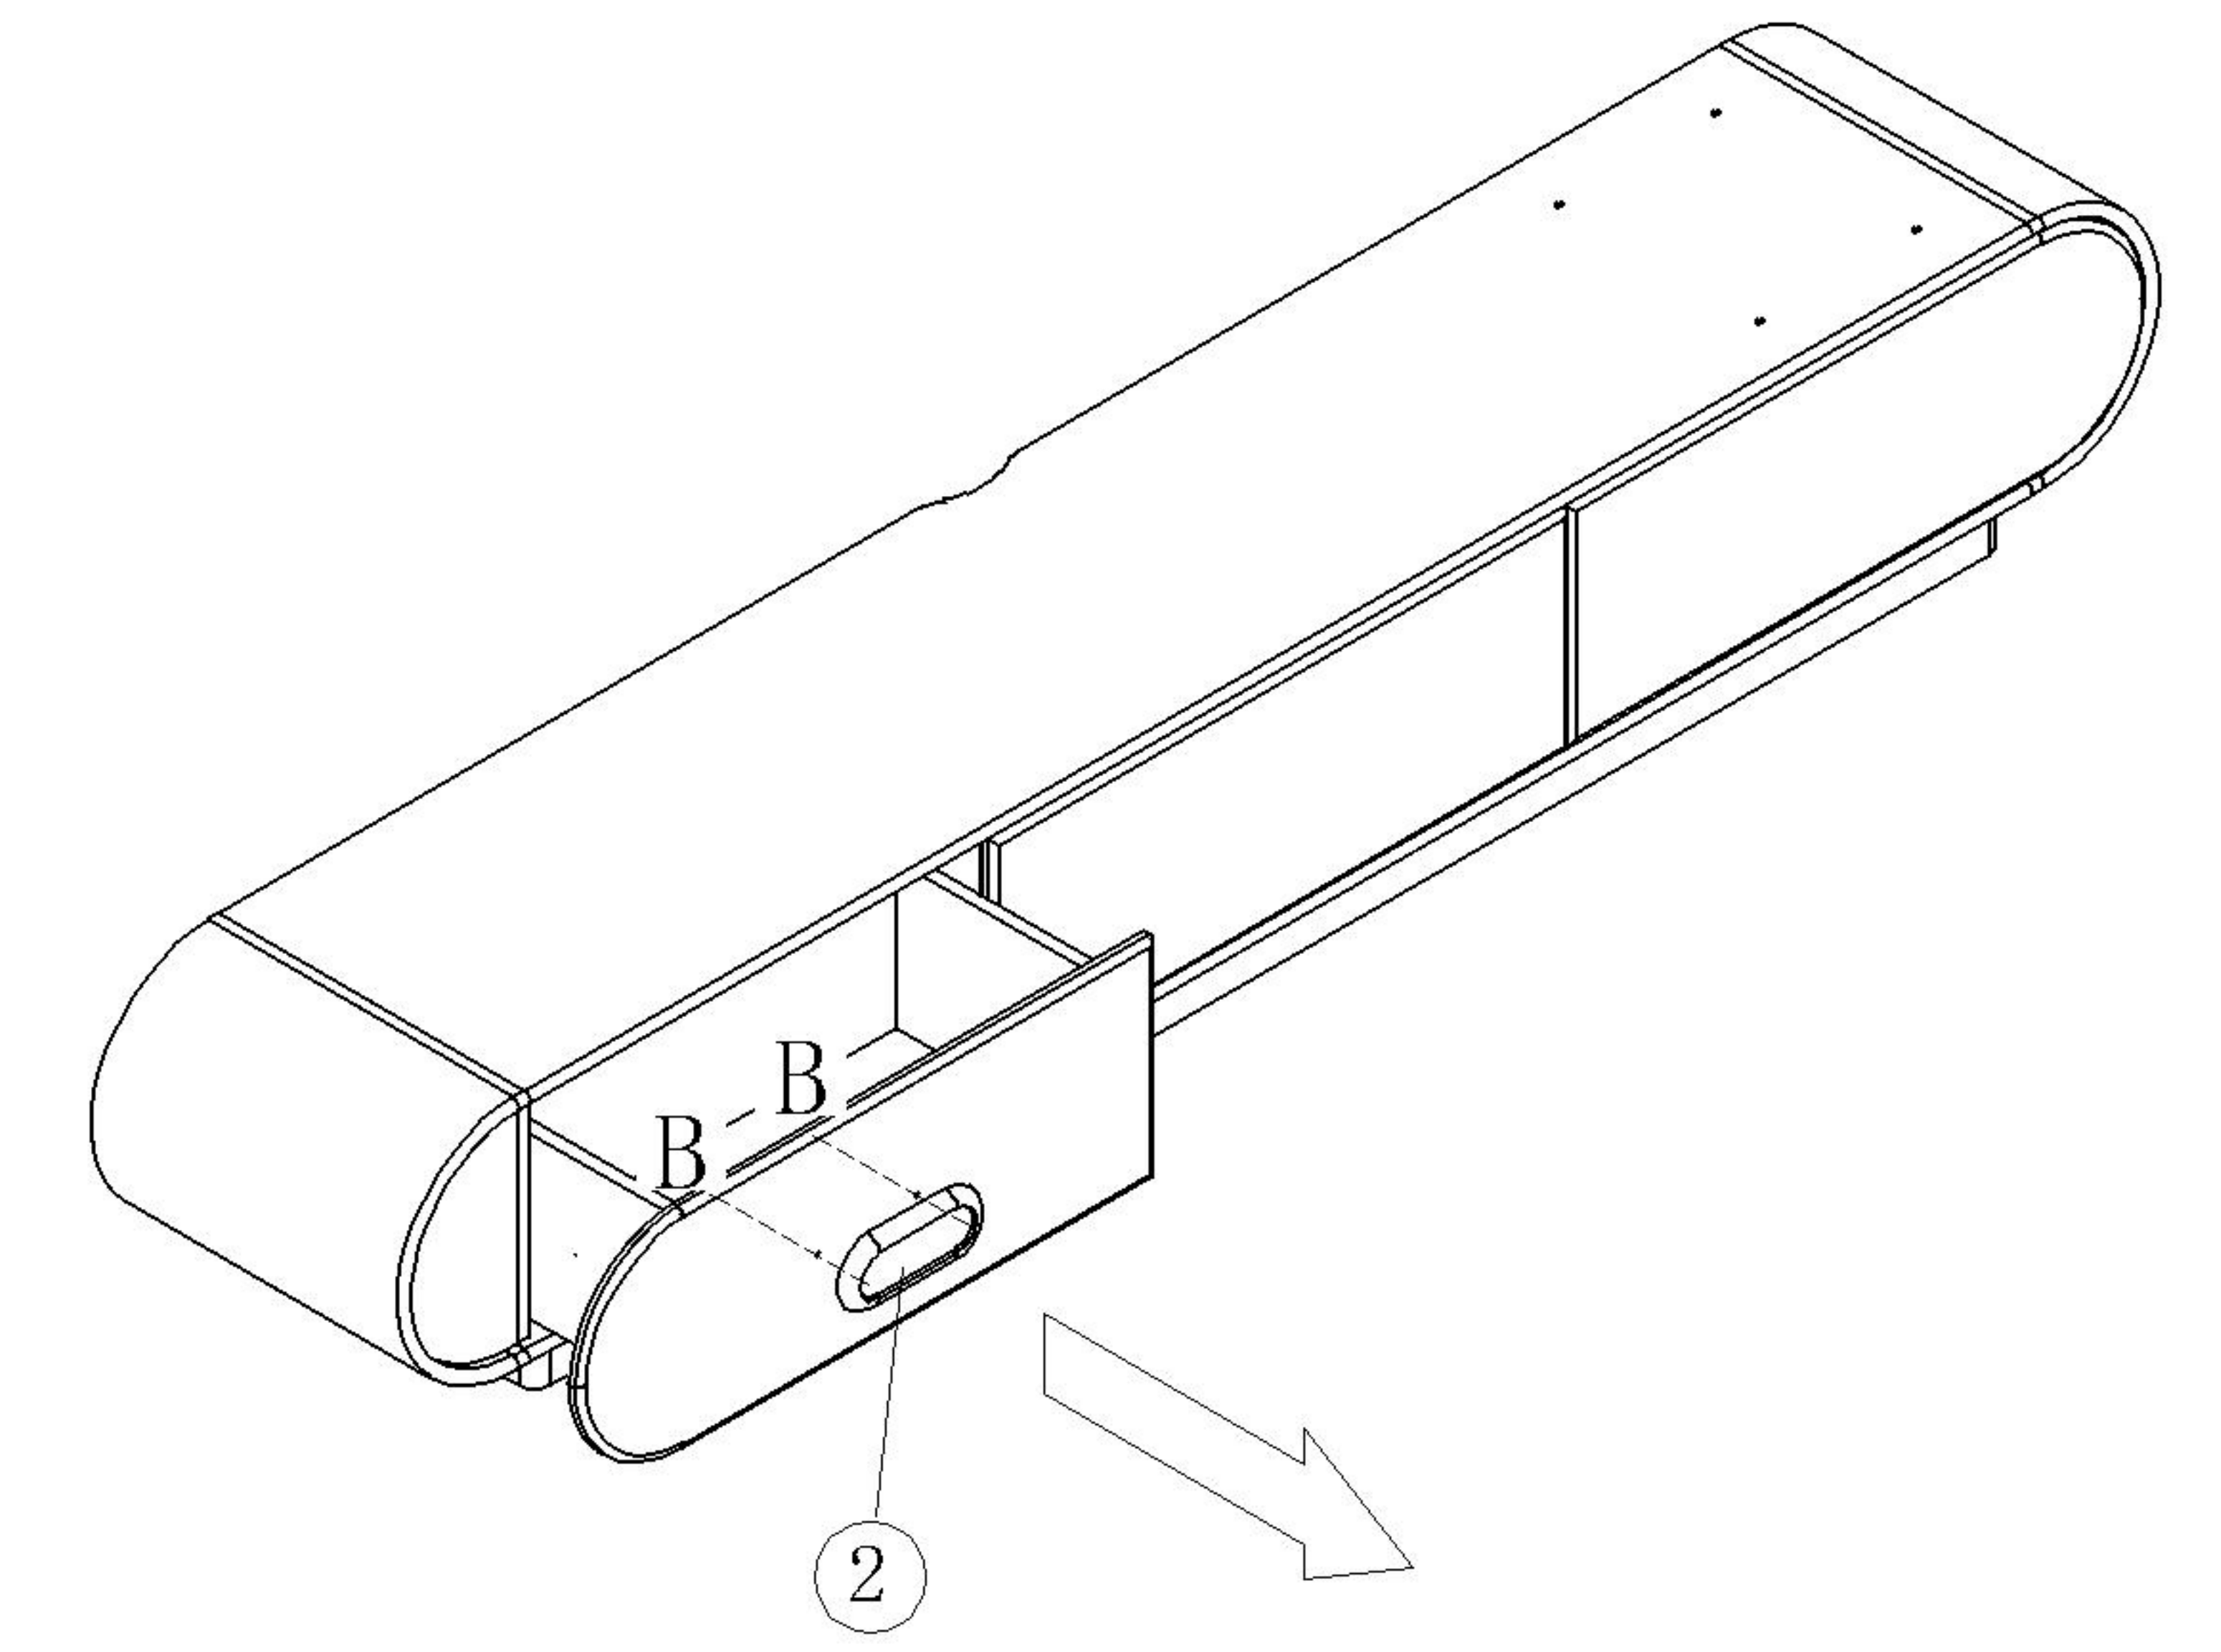







2






3

  
(D)*4
(A)*1

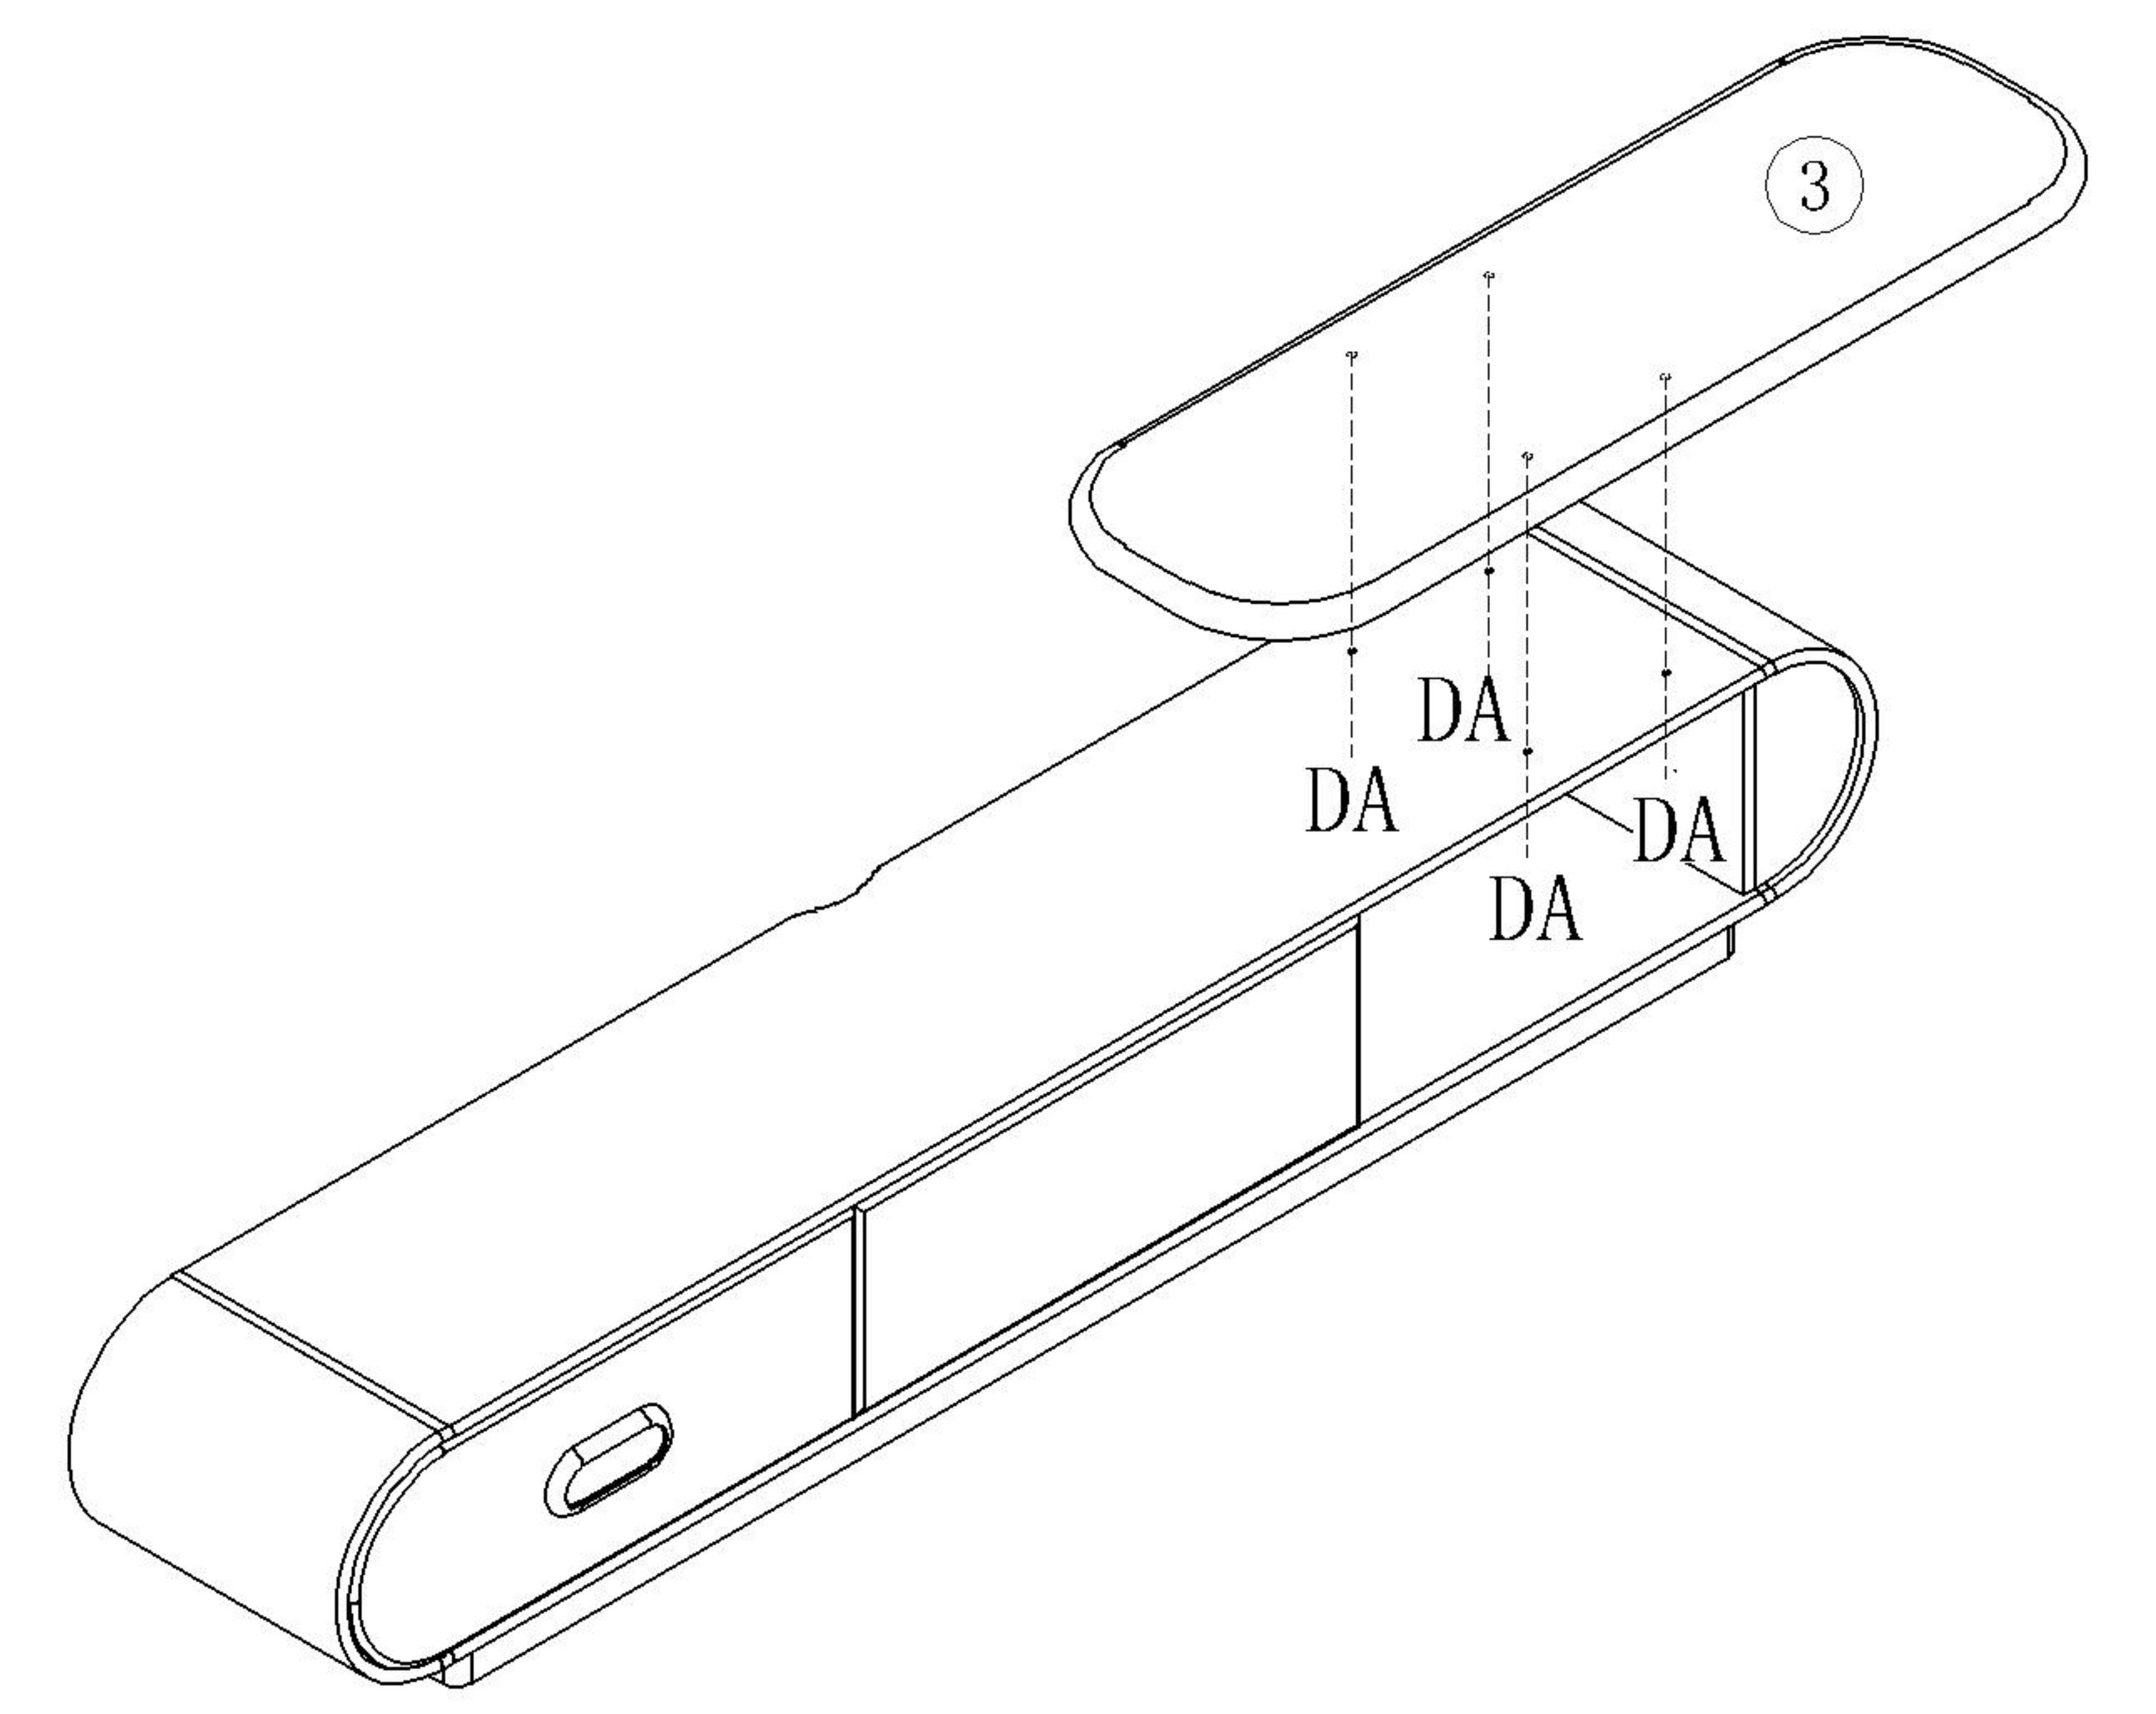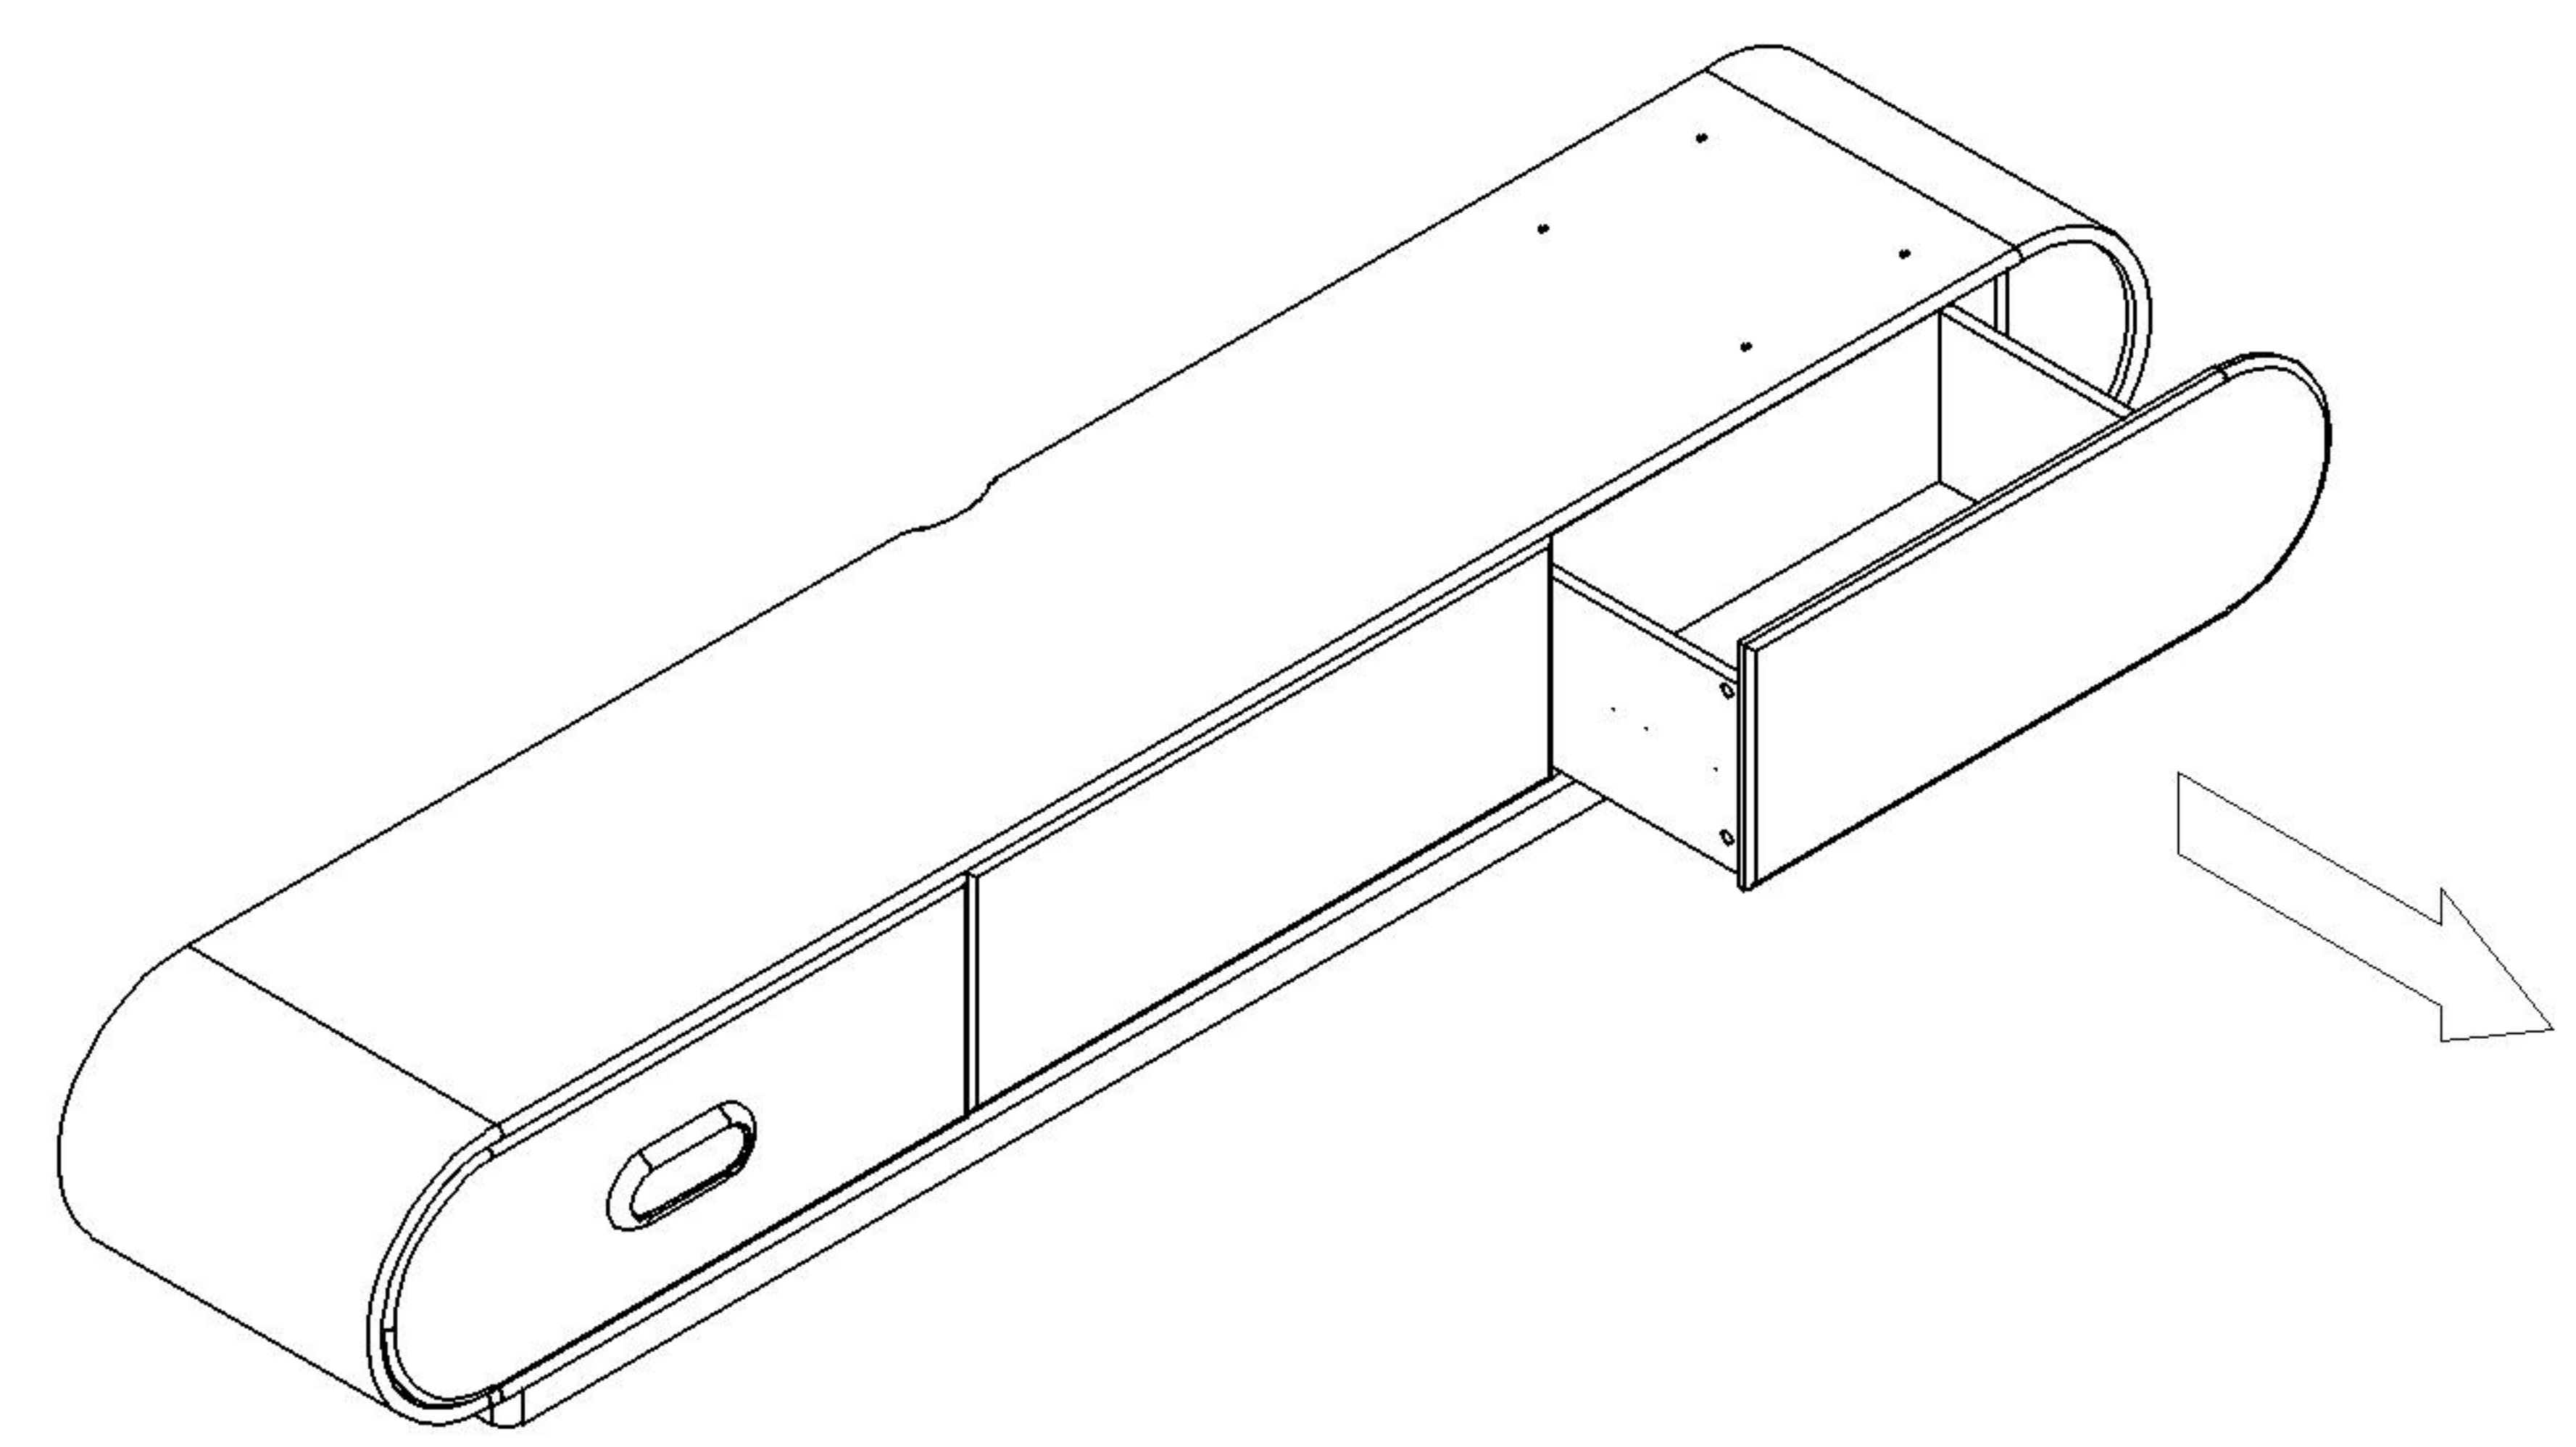

4

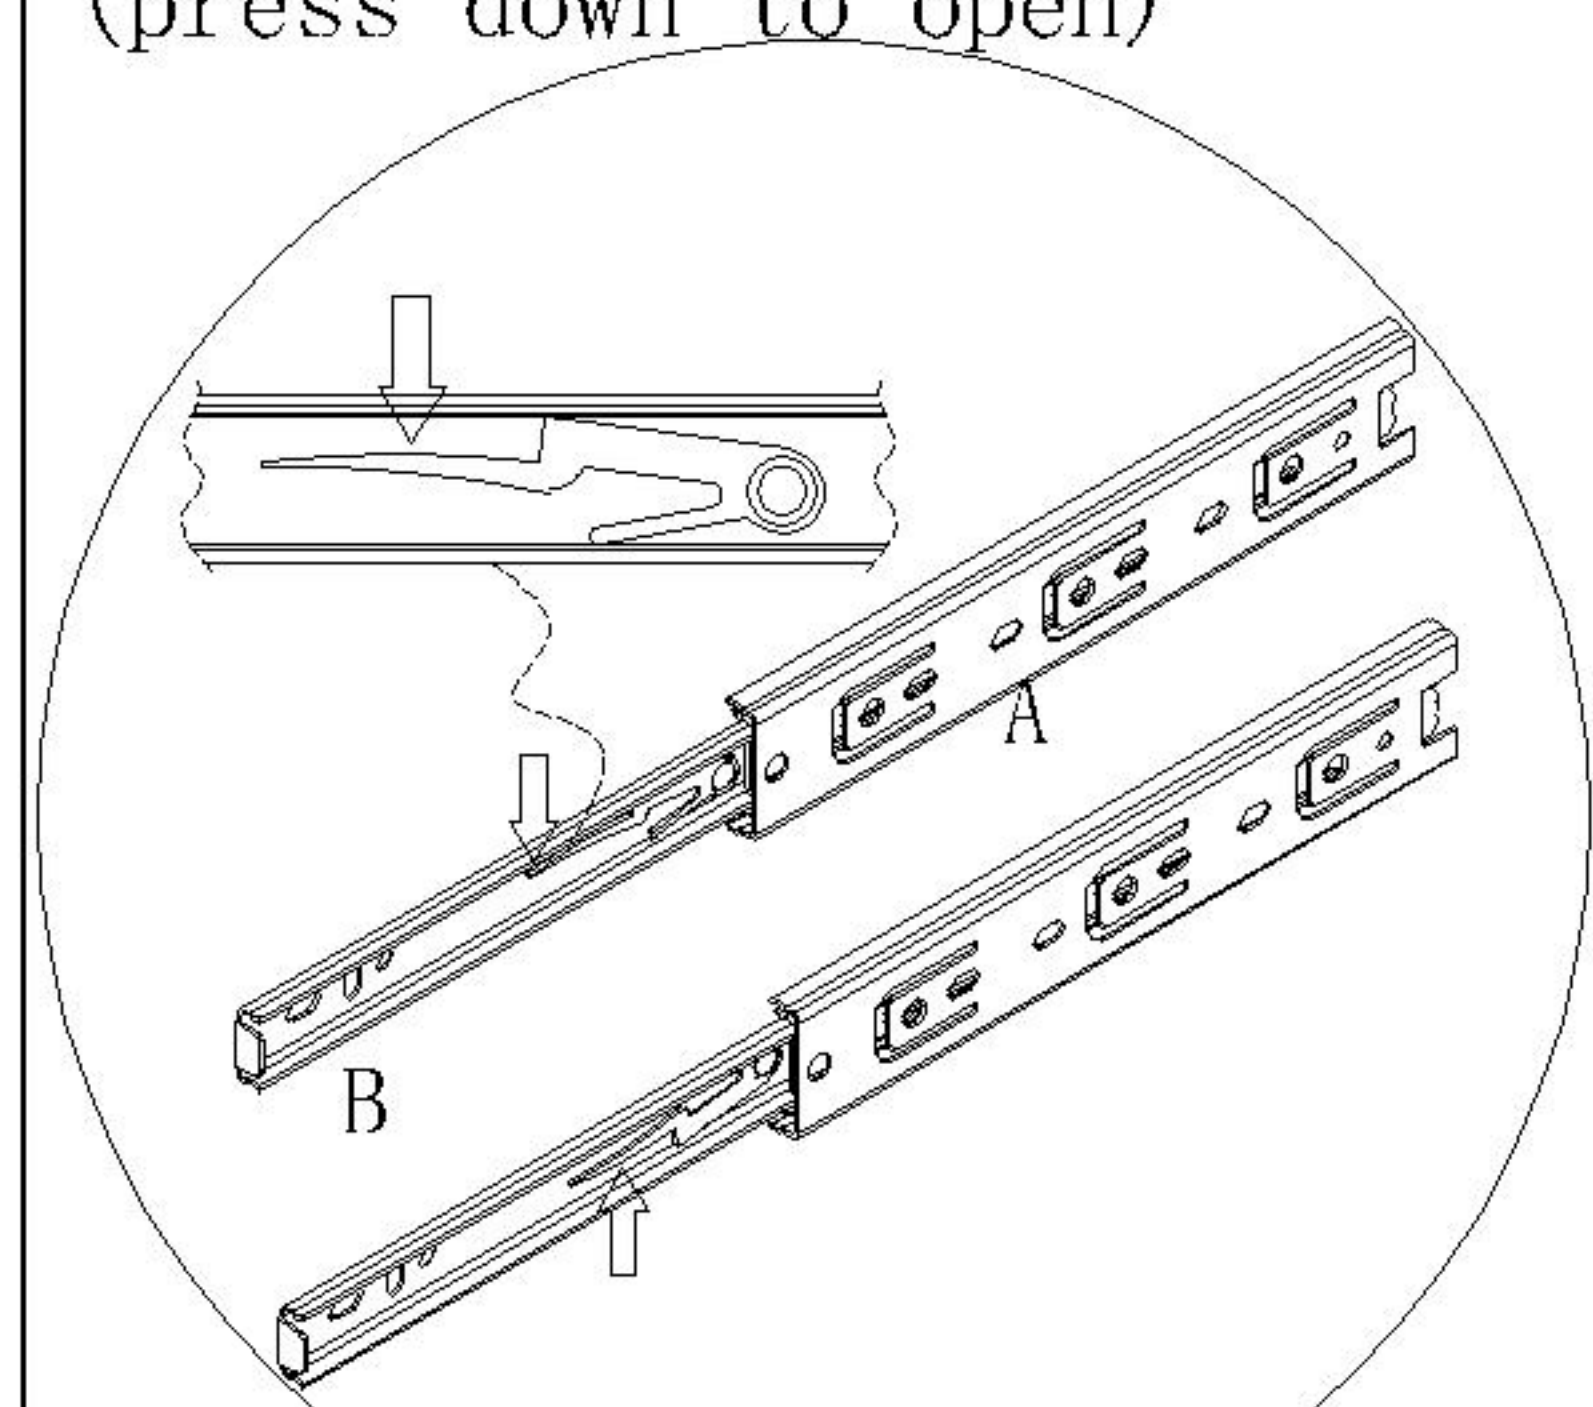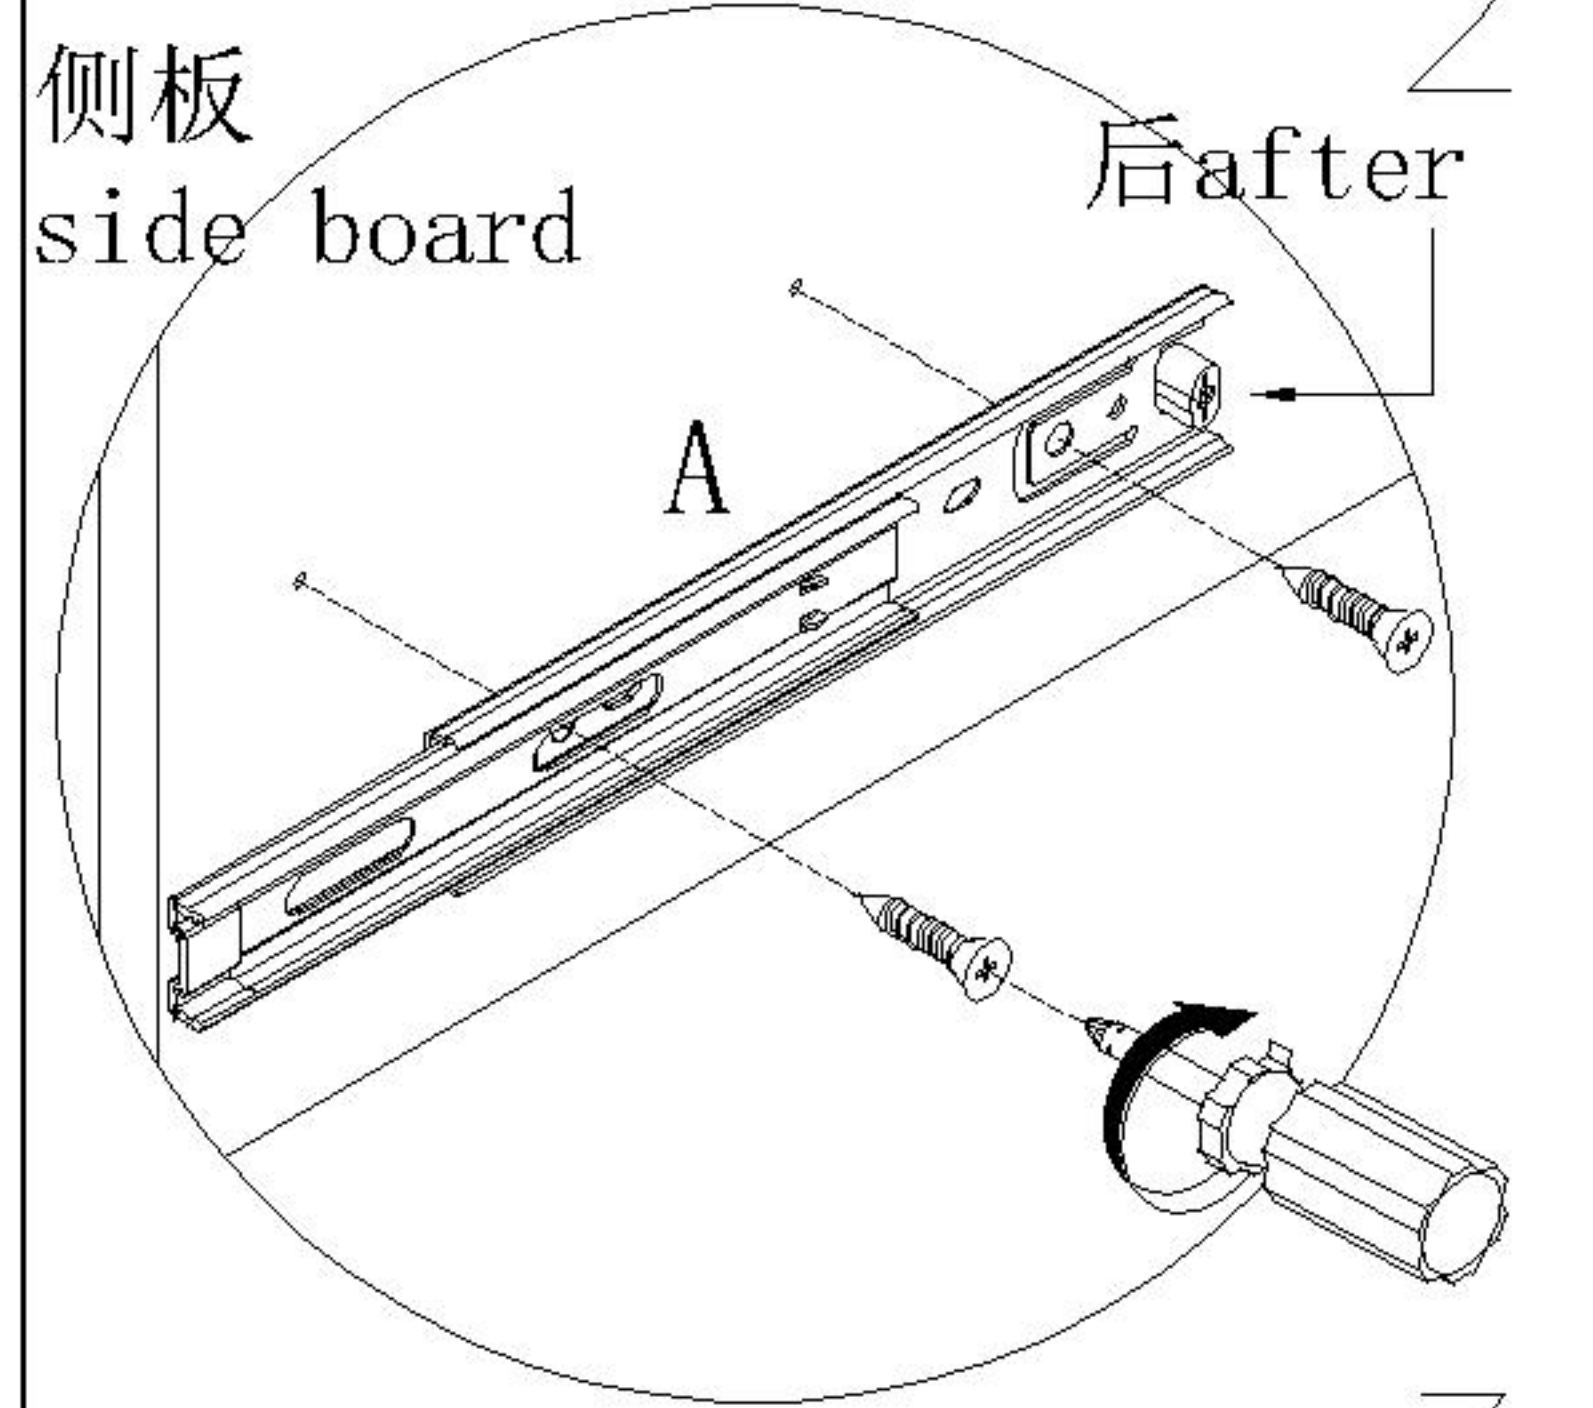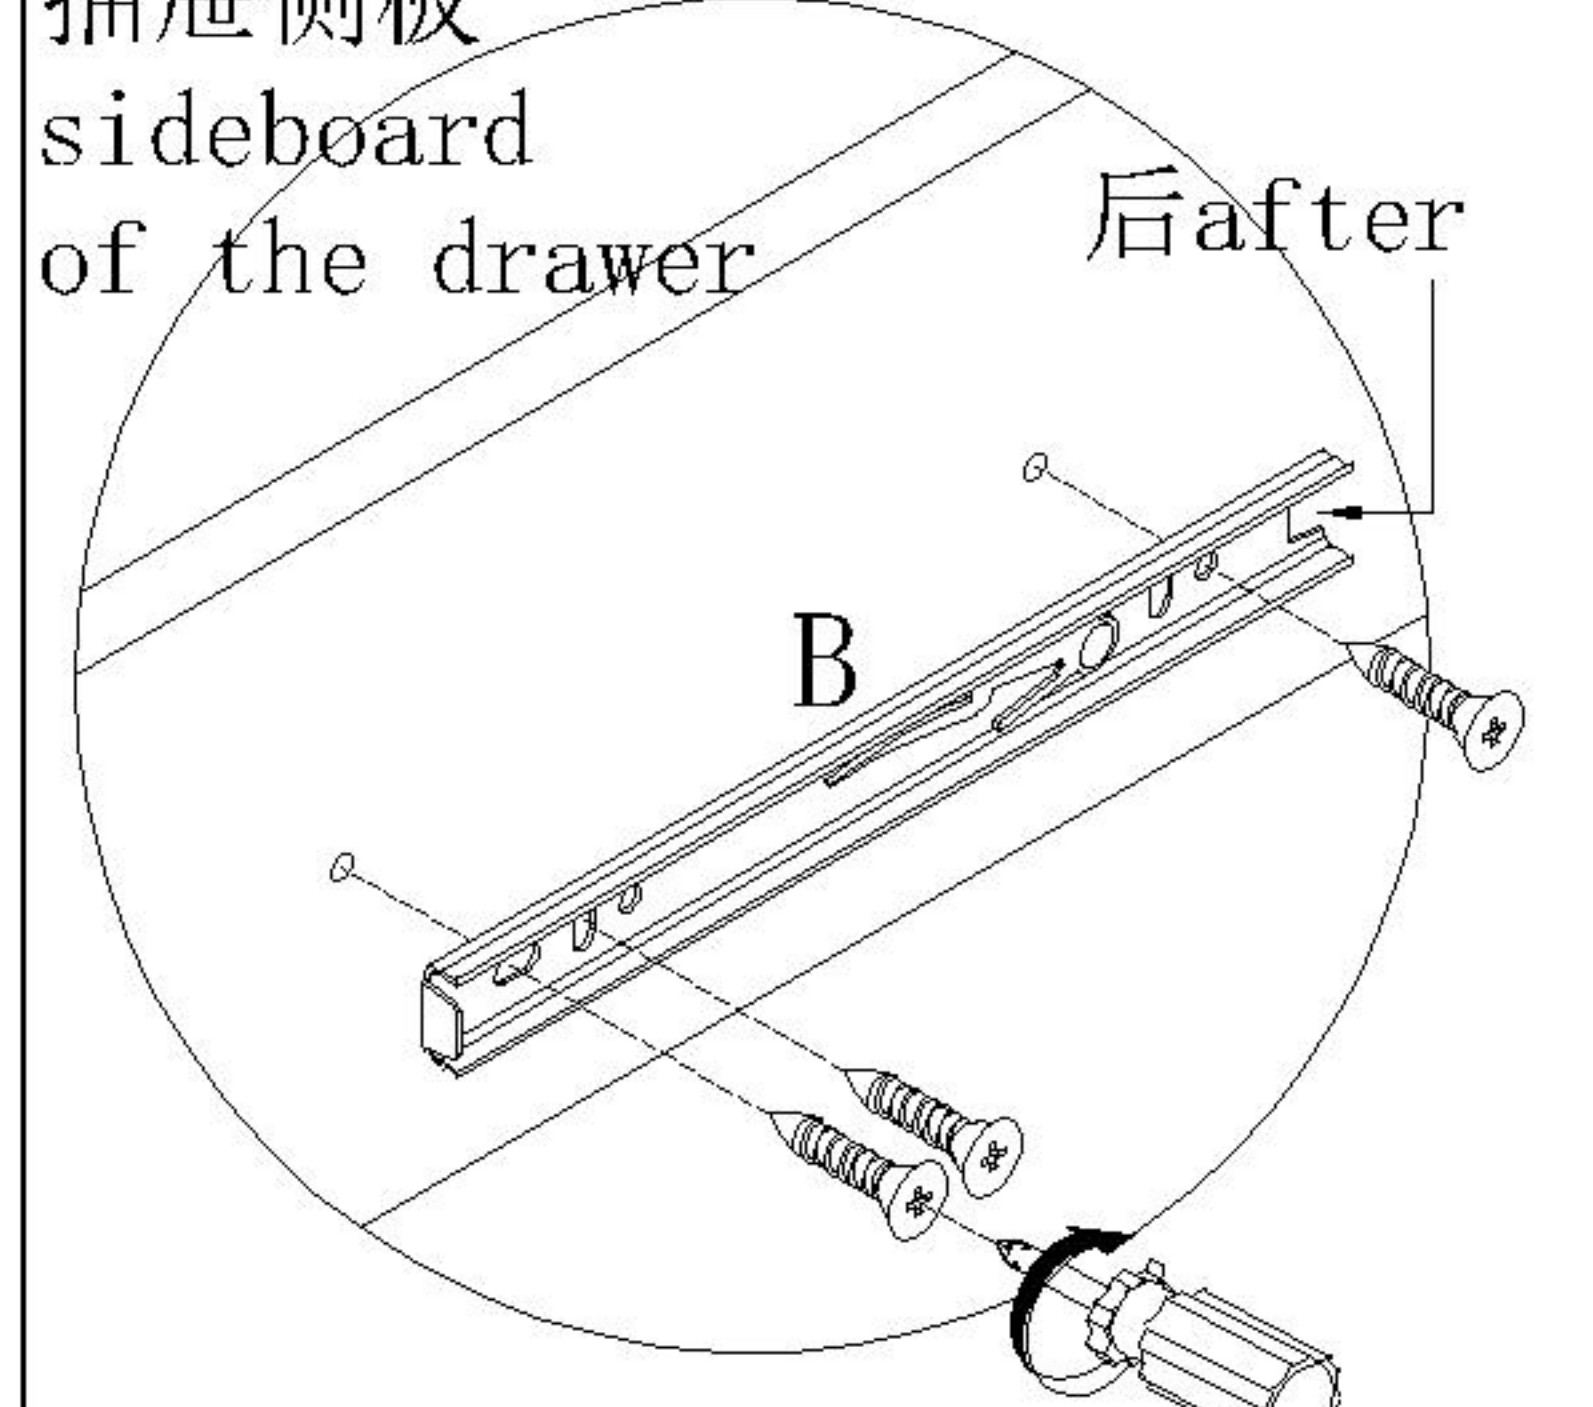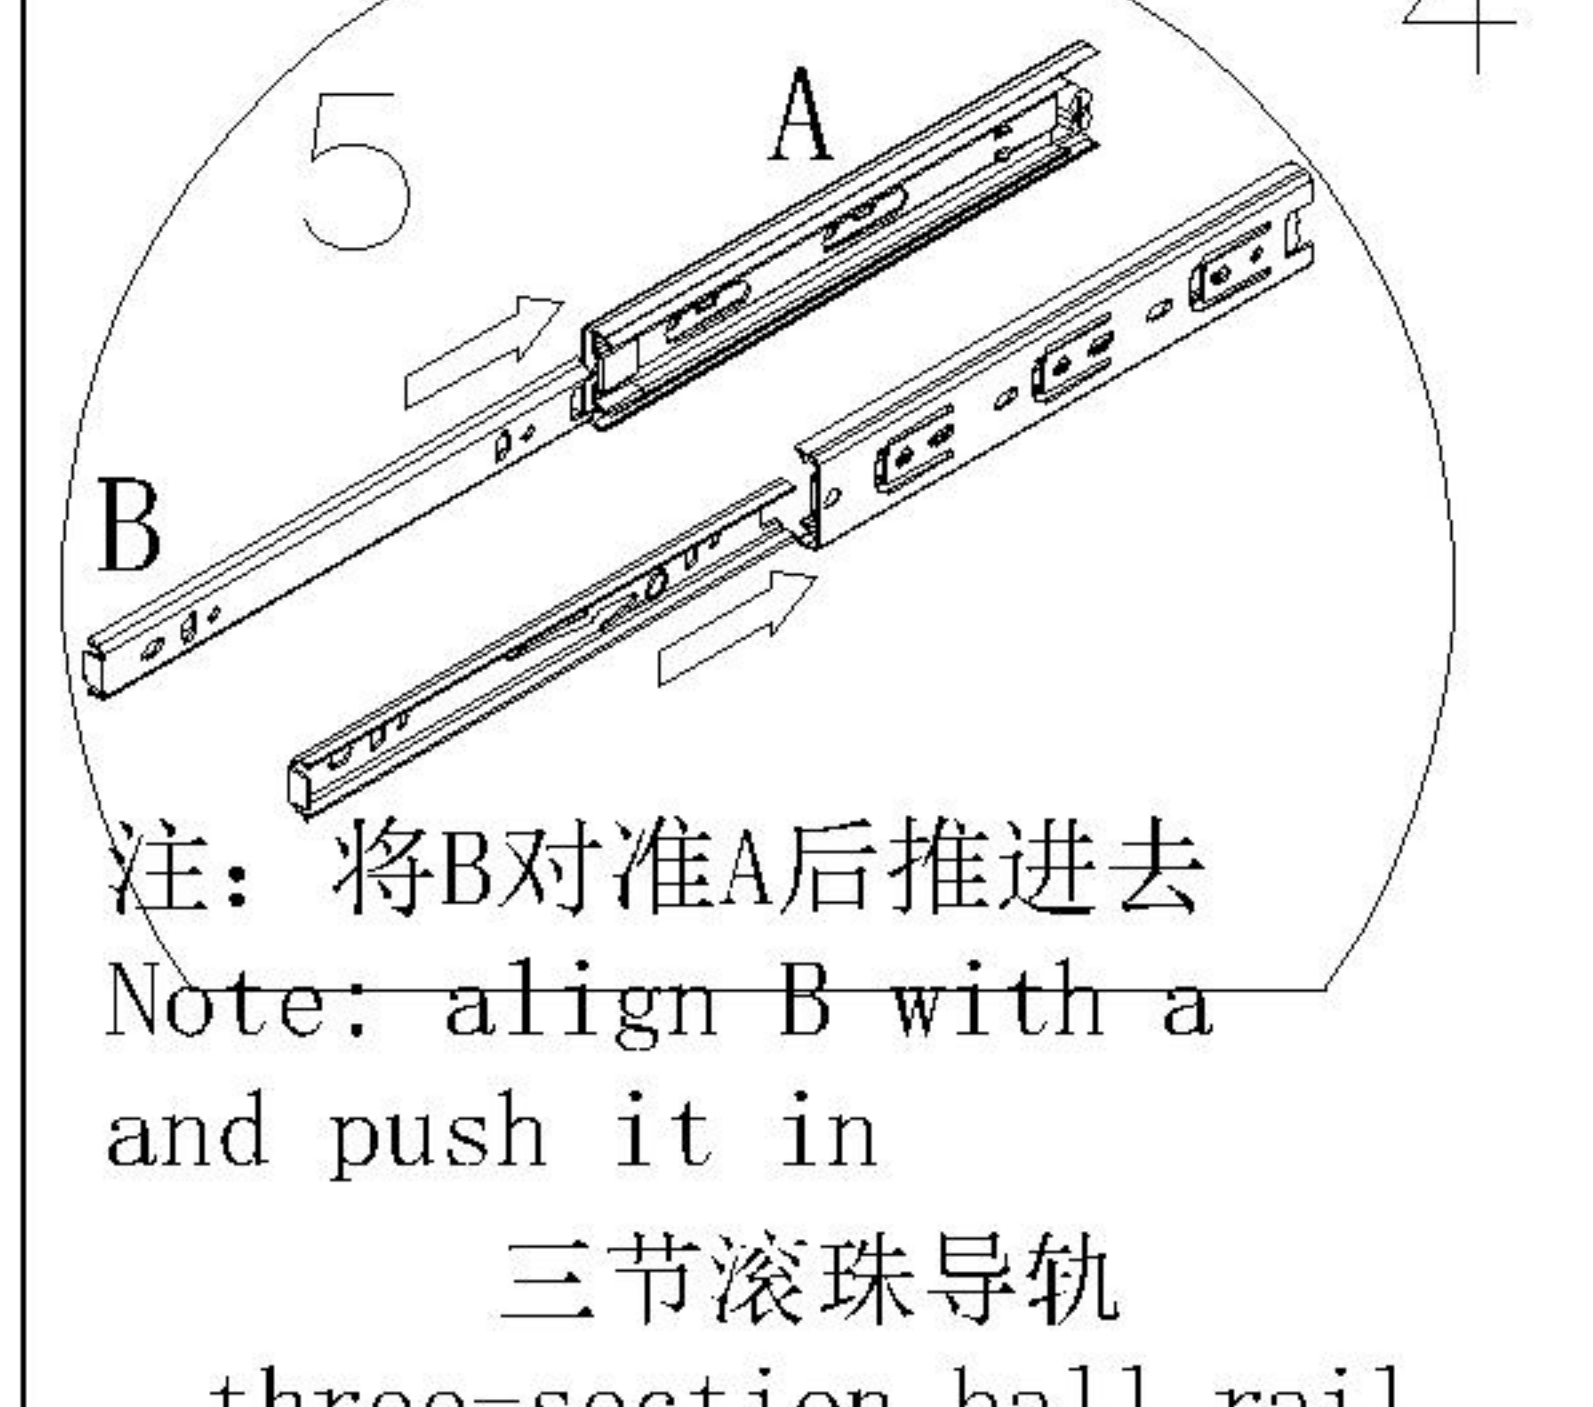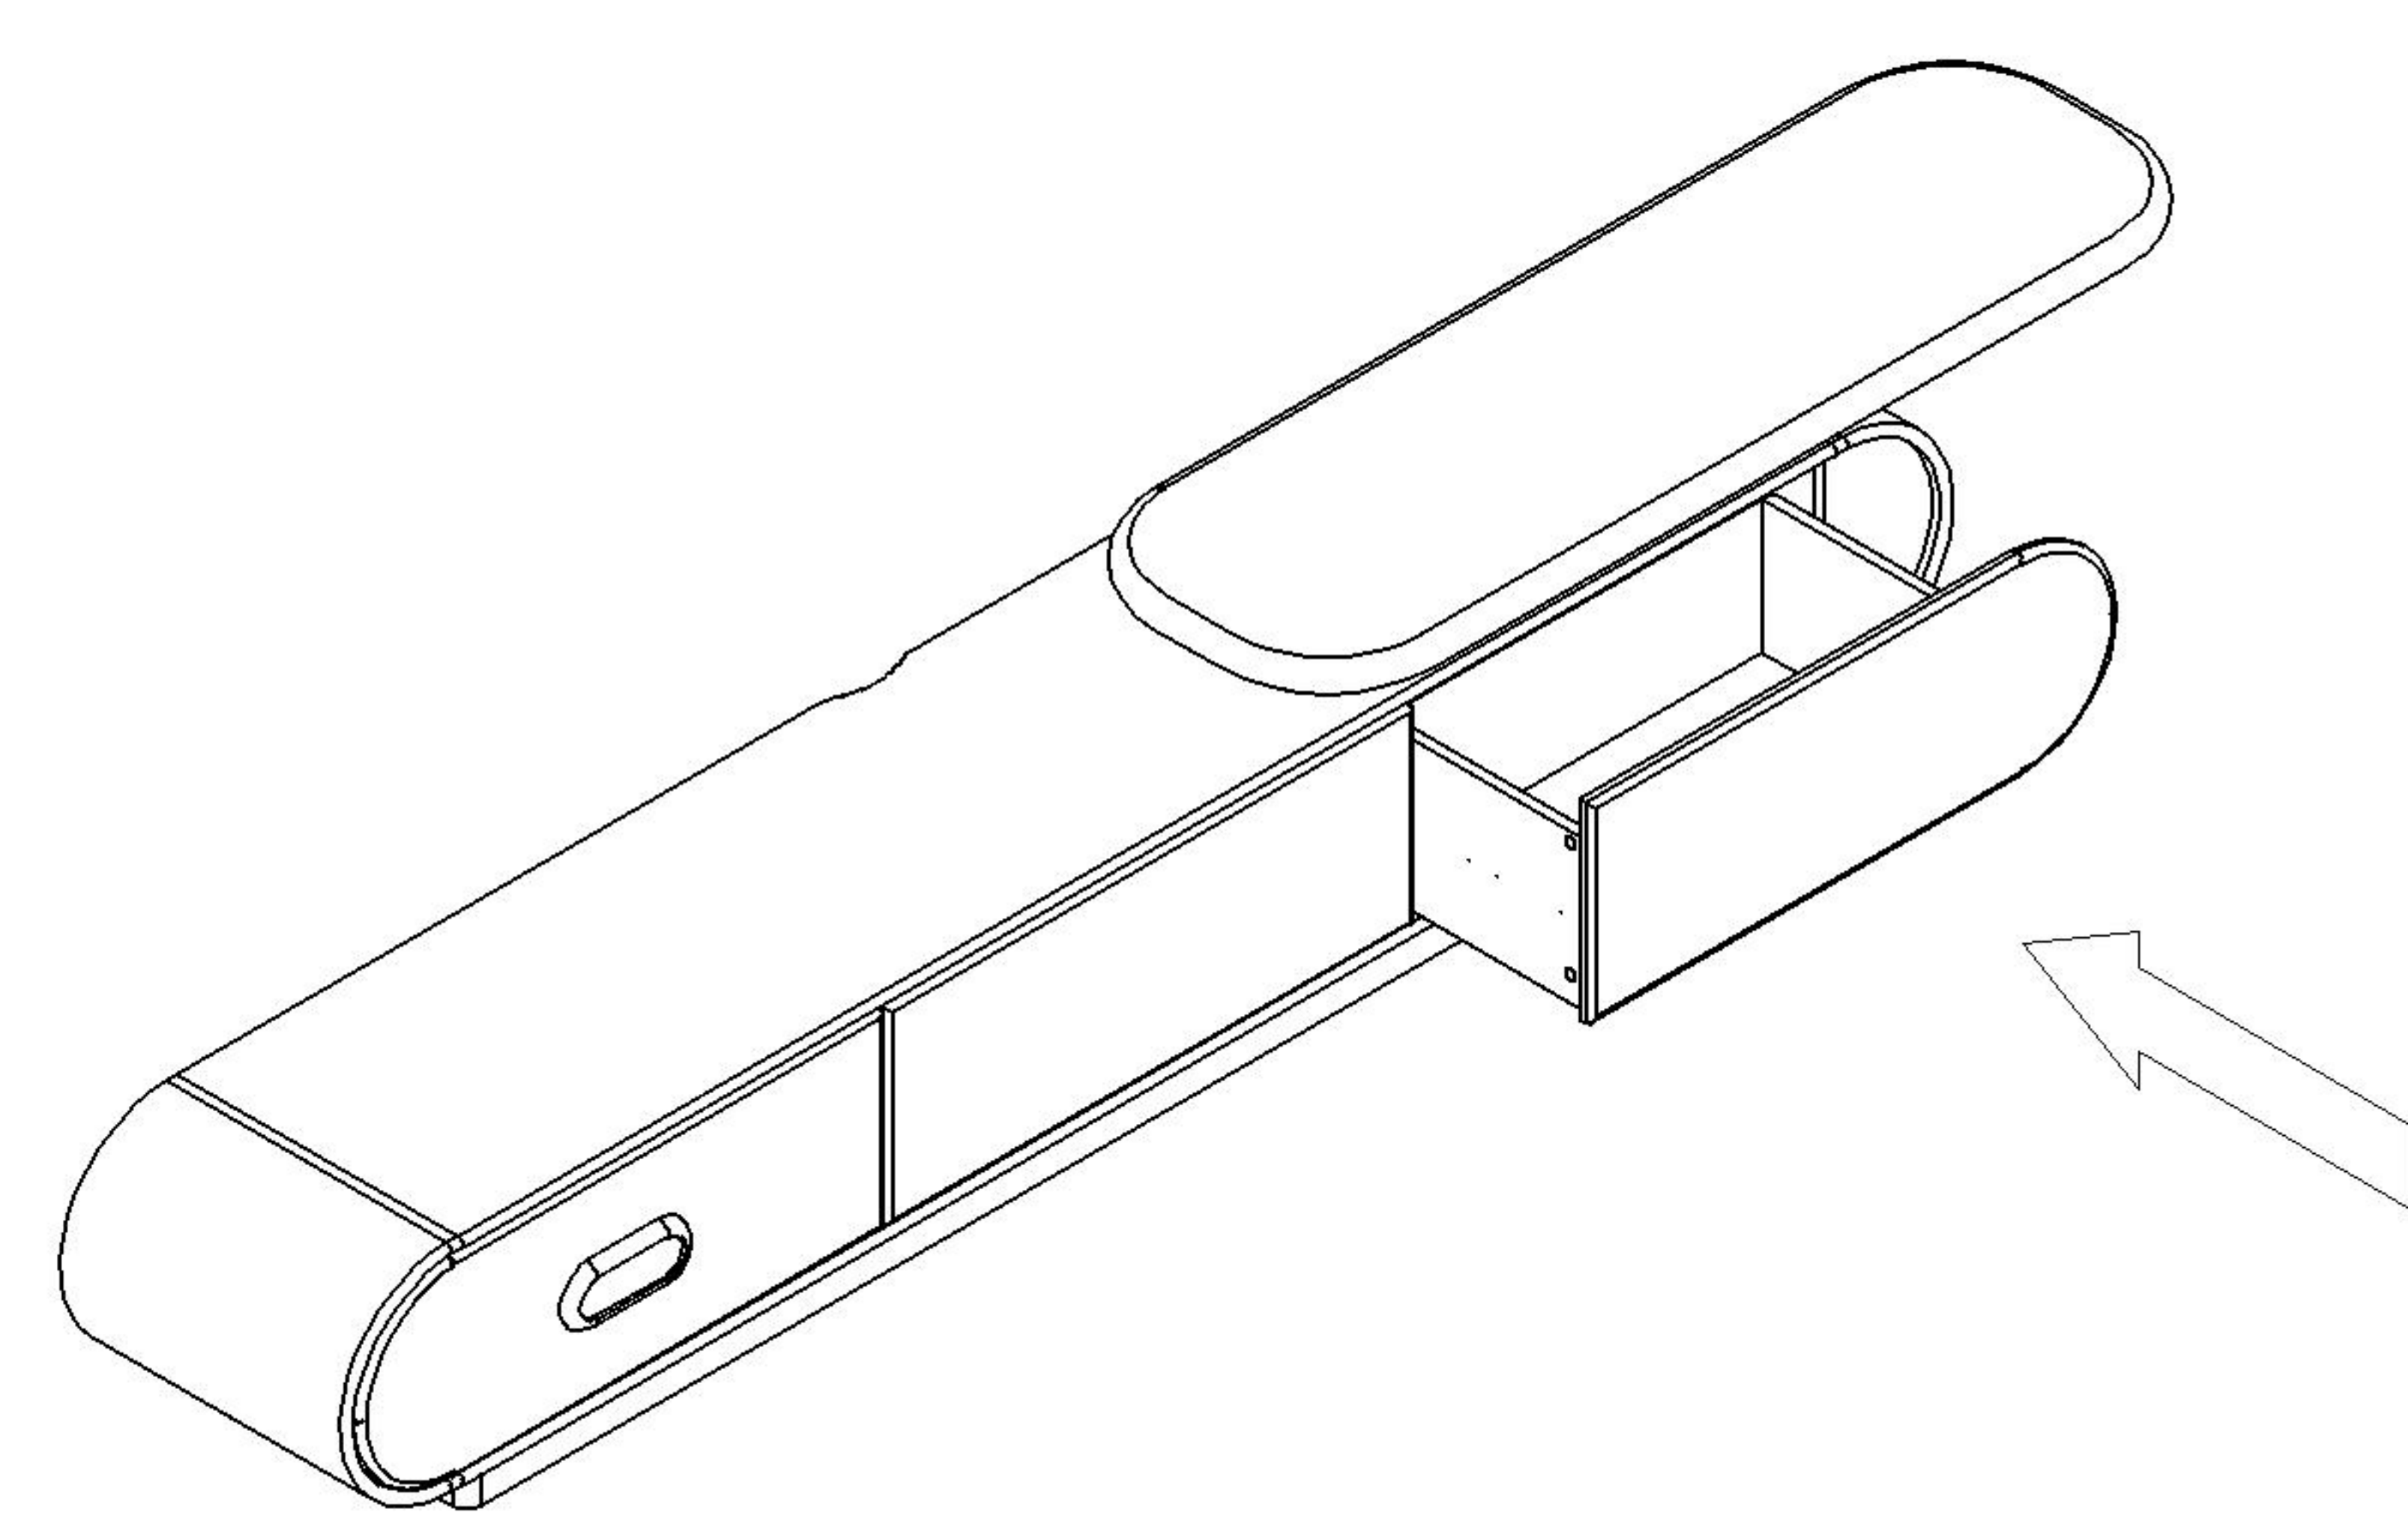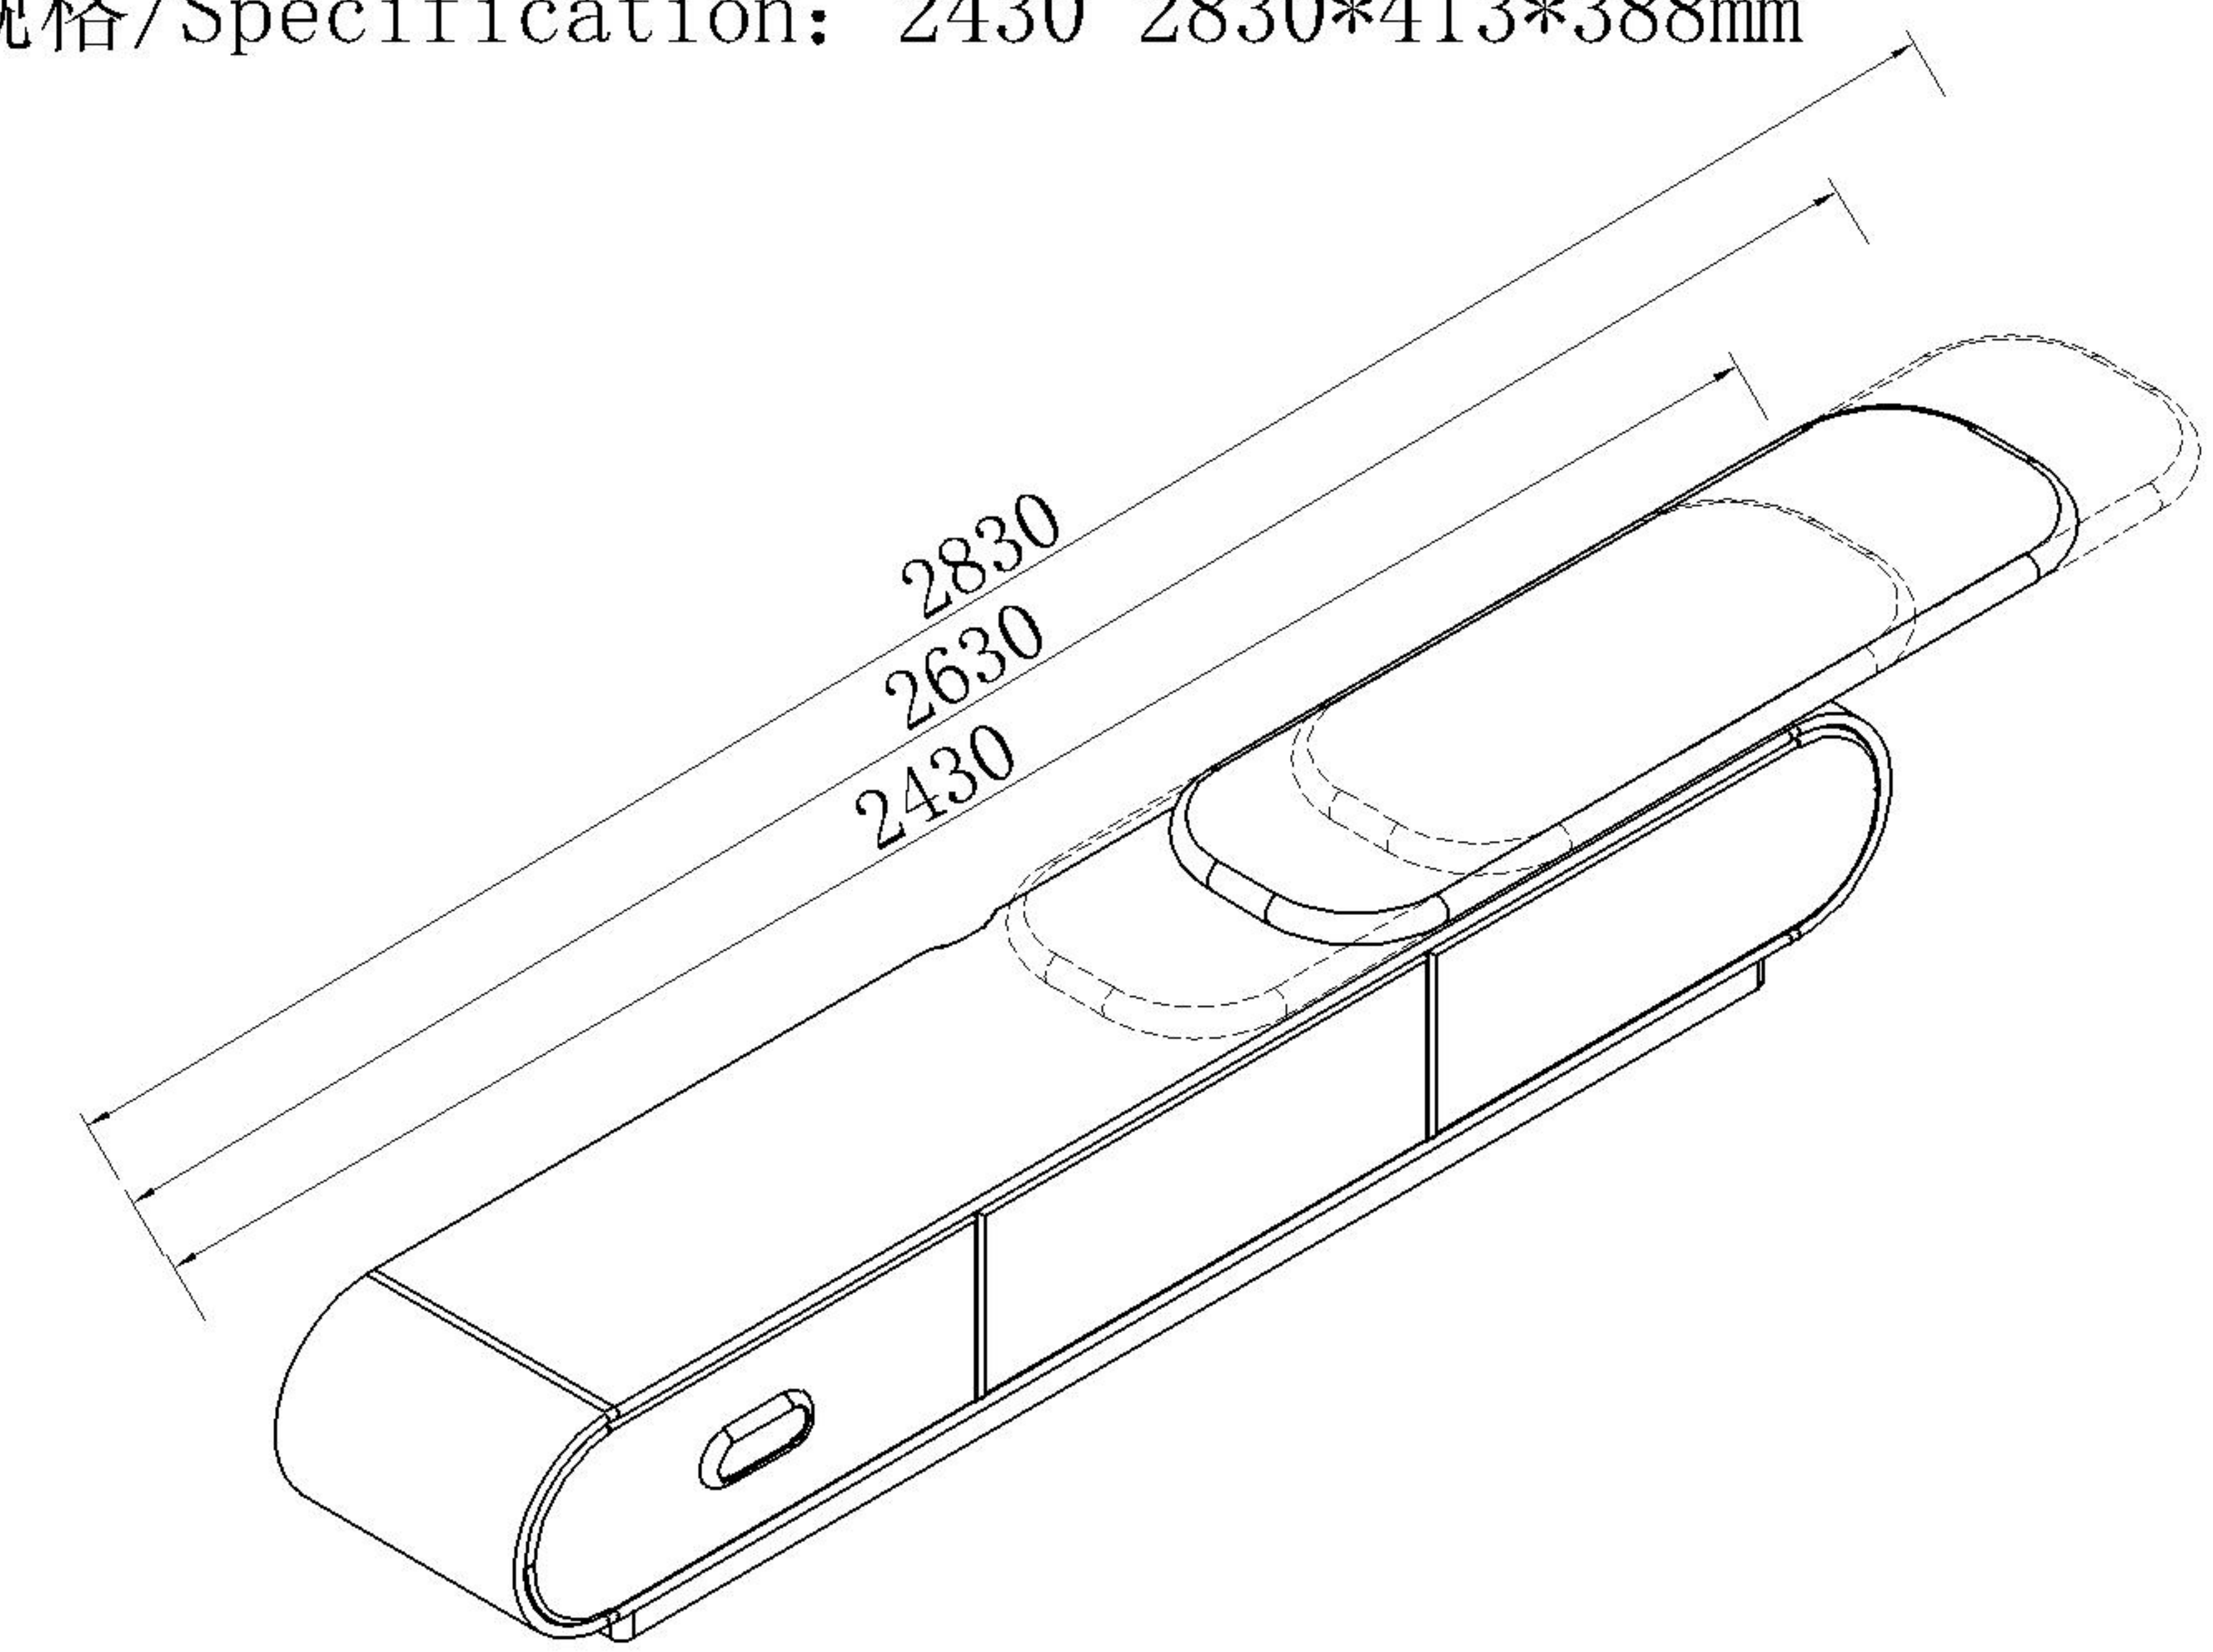      YF1M-A(伸缩款电视柜)	5	6 右面板可以三档调节 Adjustable panel 规格/Specification: 2430~2830*413*388mm
安装方法/ Installation method 阀门开关(下压为开) Valve switch (press down to open) 1  注: 先将A与B拆下来 Note: remove a and B first 侧板 side board 2  后after 3  后after 4  5 注: 将B对准A后推进去 Note: align B with a and push it in 三节滚珠导轨 three-section ball rail	7 	8 

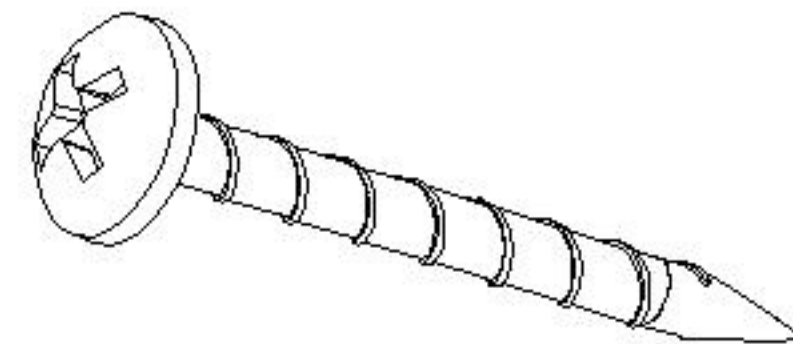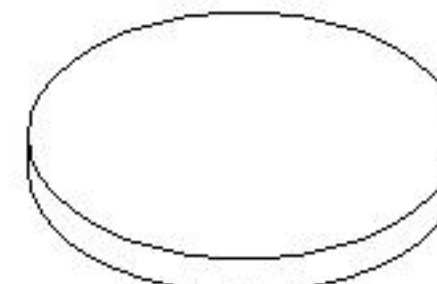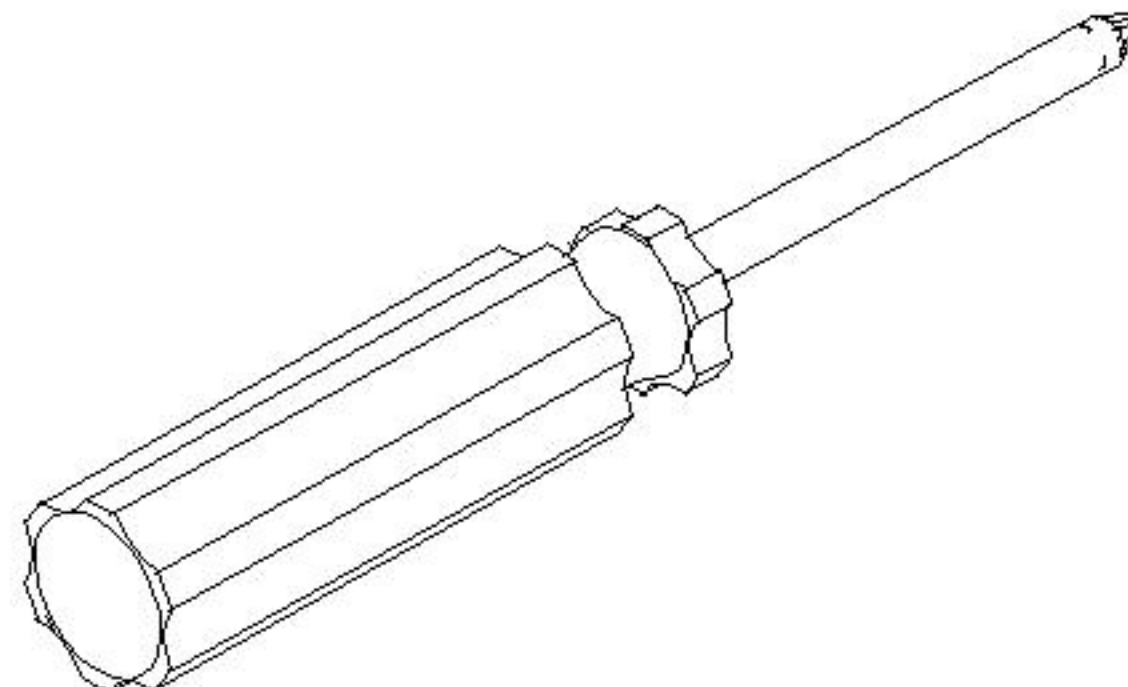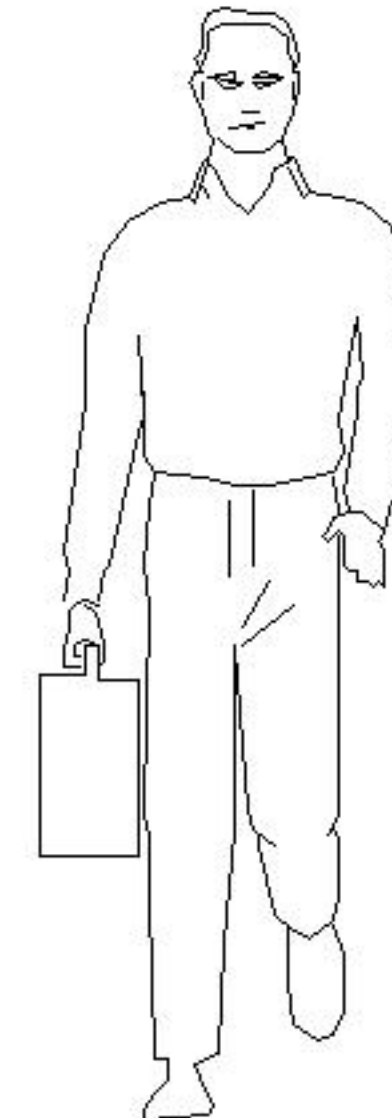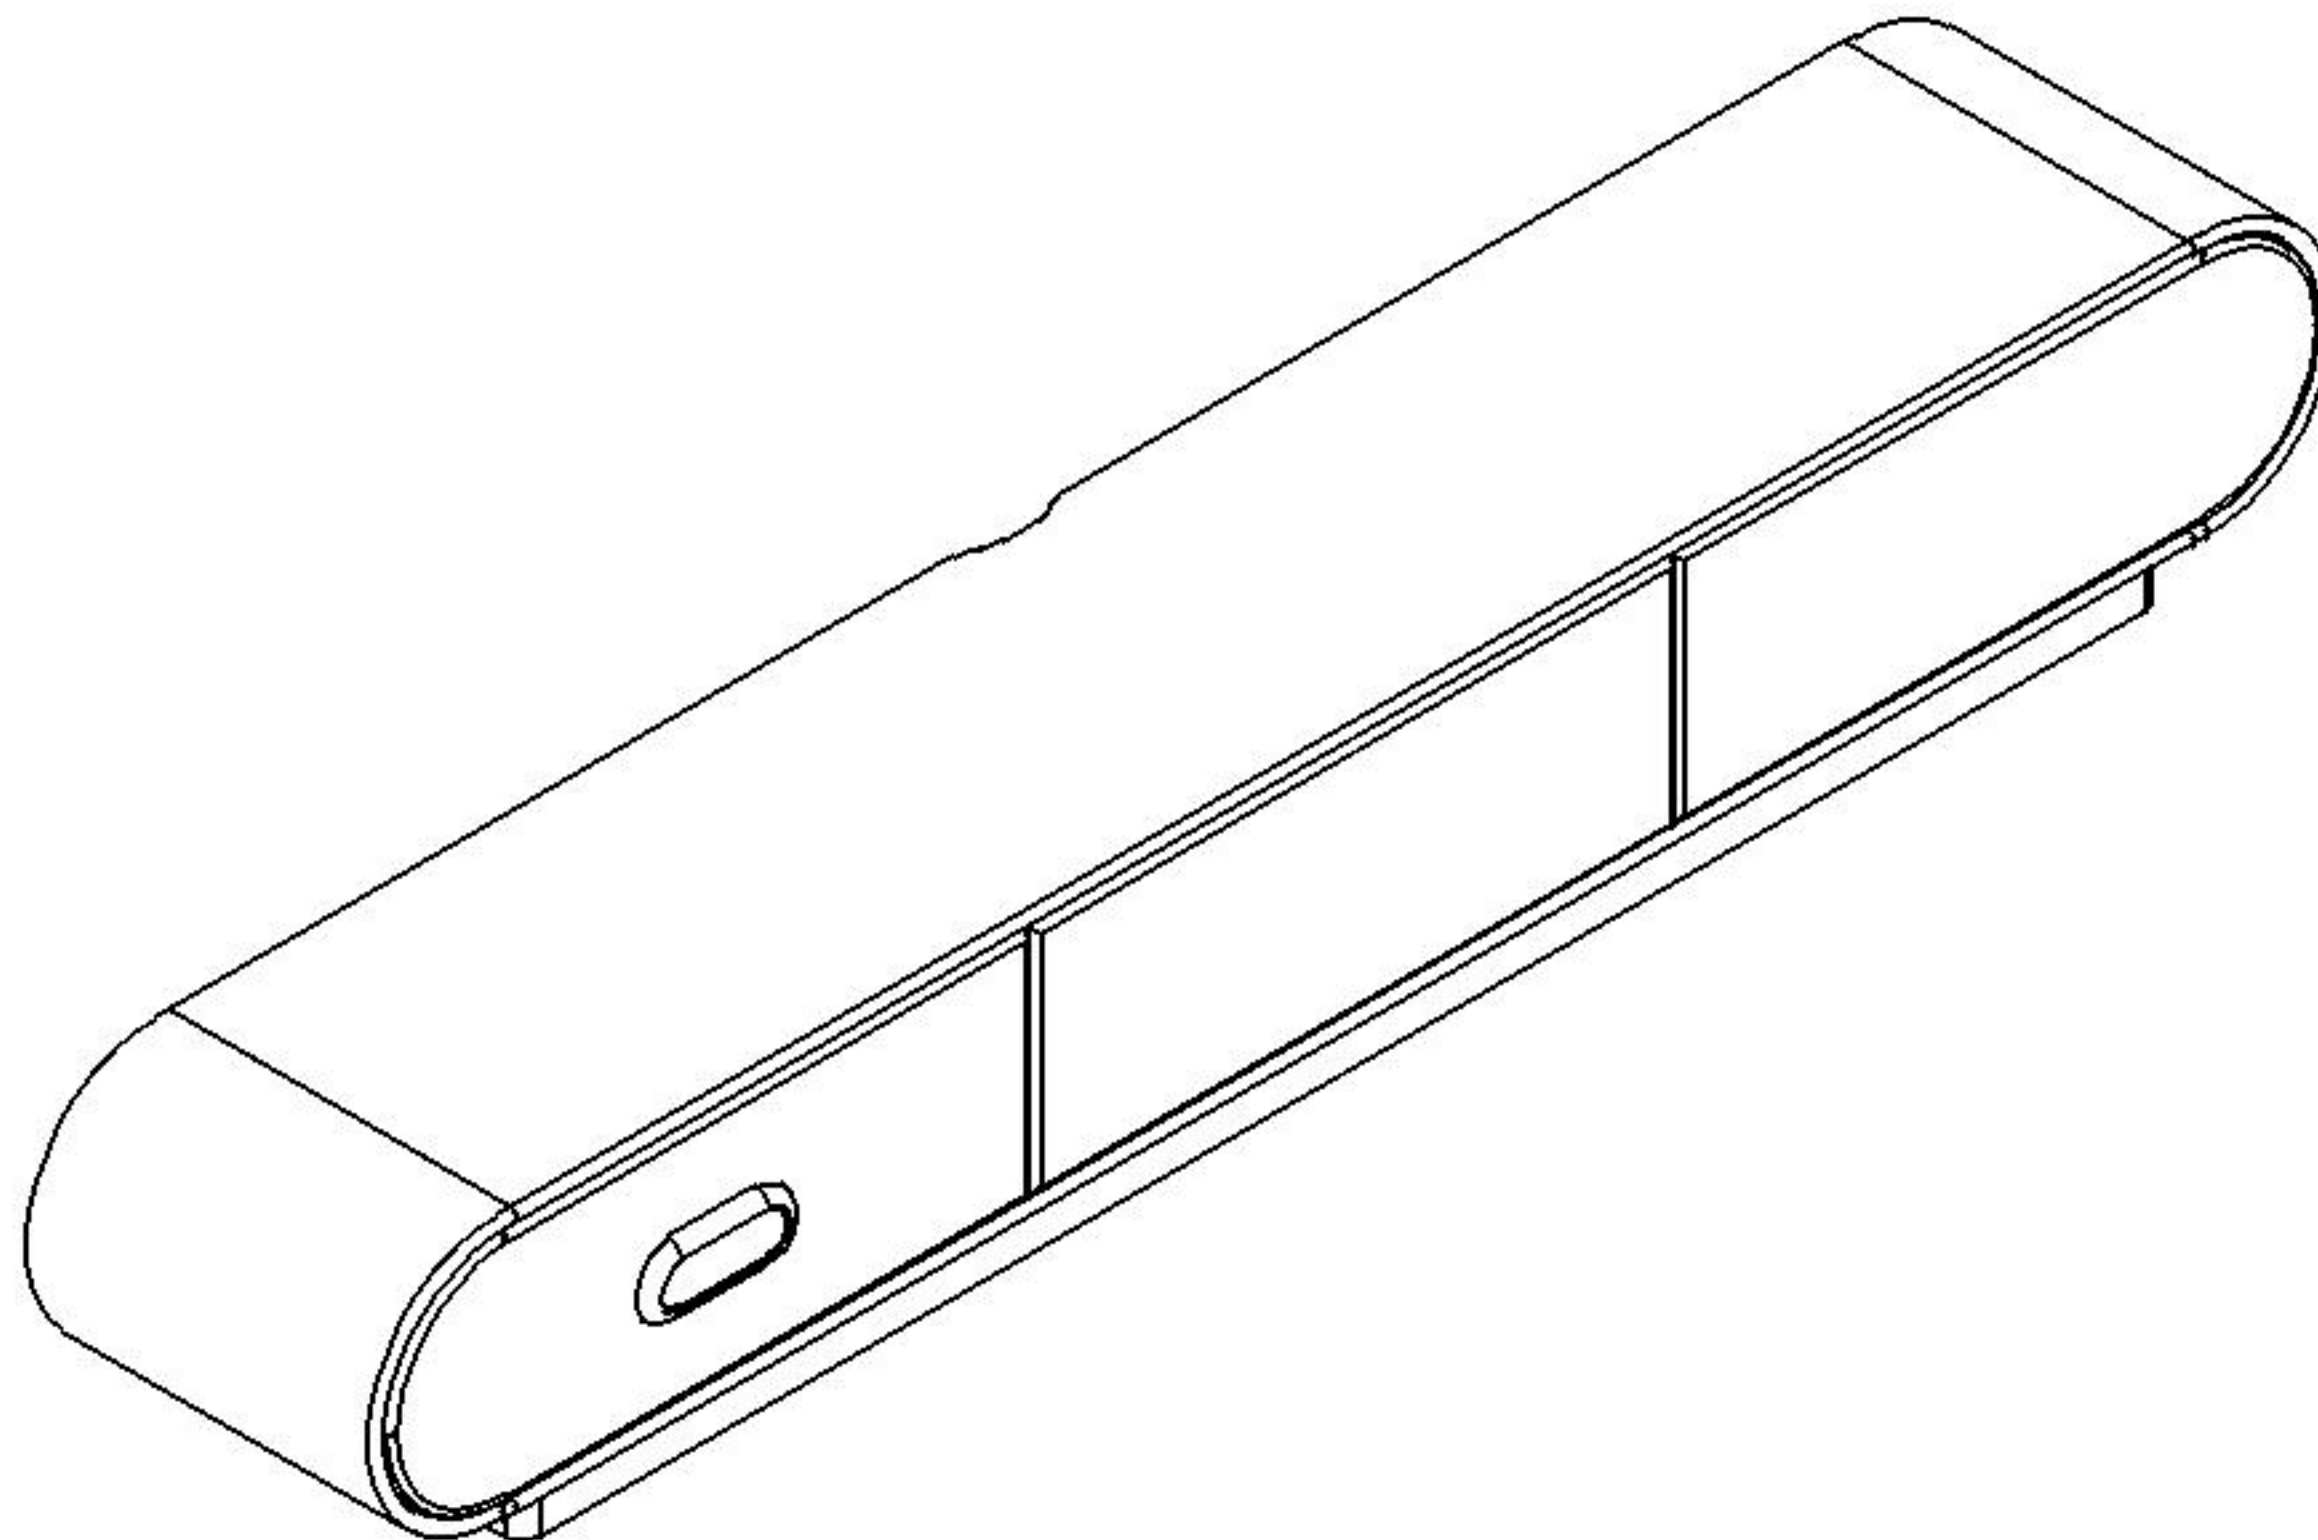     LINSY 林氏家居		五金表/Hardware list		部件表/Parts List				
安装示意图/Assembly Instruction		 (A)*2 大扁白攻M4*25mm Flat head tapping screw  (B)*8 灰色毛毡垫 φ16*3 Foot pad		编号NO.	名称Name	规格 (mm) Specification	数量QTY	材质Material
产品名称 Model NO.	YF1M-A (常规款电视柜)			①	整装柜子Packaged cabinet	2240*398*345	1	纤维板+欧松板 Fiberboard+Oriented Strand
产品规格 Specification	2240*413*388mm			1-1	柜体 cabinet	2240*398*300	1	纤维板 Fiberboard
安装工具 Tool	安装人数 Installer			1-2	左抽屉面板Drawer's panel (L)	734*266*15	1	纤维板 Fiberboard
 	注：为保证设计效果，部分尺寸为定制尺寸，不影响使用。 			1-3	中抽屉面板Drawer's middle board	734*266*15	1	纤维板 Fiberboard
		1-4	右抽屉面板Drawer's panel (R)	734*266*15	1	纤维板 Fiberboard		
		1-5	抽屉侧板Drawer's sideboard	290*206*15	6	欧松板 Oriented Strand		
		1-6	抽屉后板Drawer's Back board	548*206*15	2	欧松板 Oriented Strand		
		1-7	中抽屉后板Middle Drawer's back board	676*206*15	1	欧松板 Oriented Strand		
		1-8	抽屉底托条Drawer's bottom bracket	290*58*15	1	欧松板 Oriented Strand		
		1-9	抽屉底板Drawer's Bottom board	528*300*5	2	纤维板 Fiberboard		
		1-10	中抽屉底板Middle Drawer's bottom board	656*300*5	1	纤维板 Fiberboard		
		1-11	前脚条Front foot strip	1870*50*45	1	欧松板 Oriented Strand		
		1-12	侧脚条Side foot strip	308*45*15	4	欧松板 Oriented Strand		
		②	装饰条Decorative strip	180*80*15	1	白蜡木 Ash		

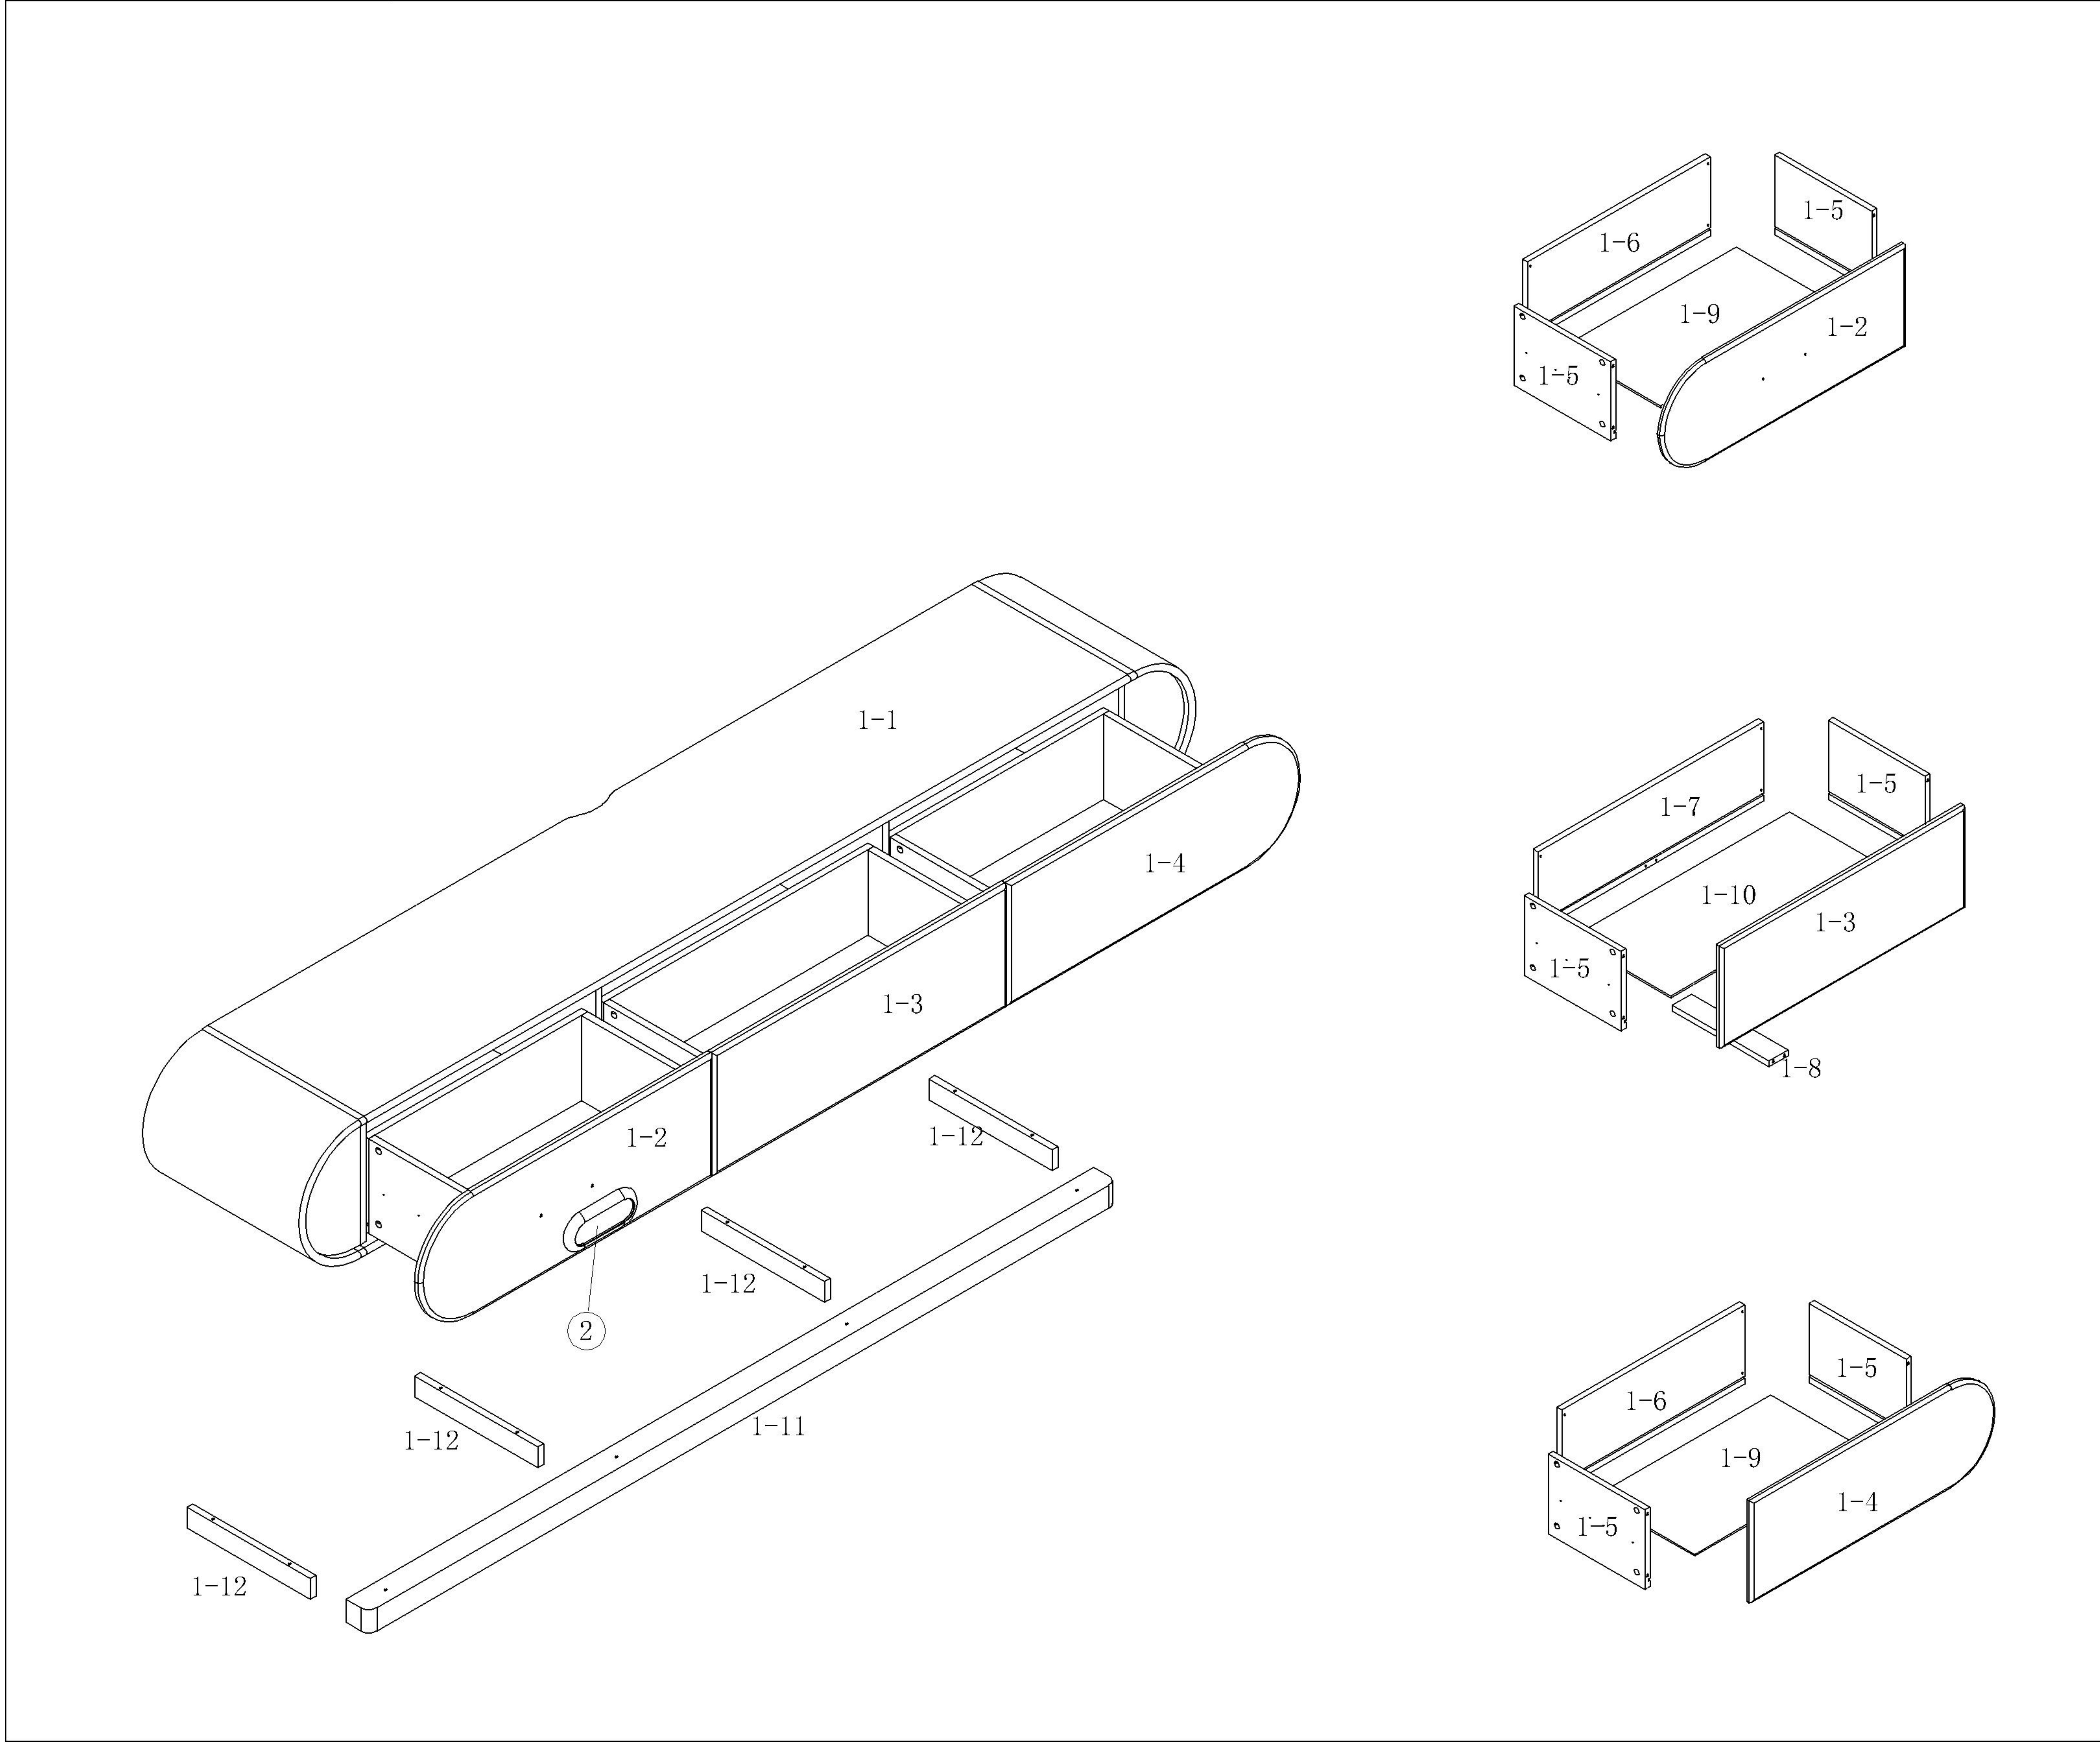 
YF1M-A(常规款电视柜)	产品分解图/Exploded drawing	部件表/Parts List	
		编号NO.	名称Name
		①	整装柜子Packaged cabinet
		1-1	柜体 cabinet
		1-2	左抽屉面板Drawer's panel (L)
		1-3	中抽屉面板Drawer's middle board
		1-4	右抽屉面板Drawer's panel (R)
		1-5	抽屉侧板Drawer's sideboard
		1-6	抽屉后板Drawer's Back board
		1-7	中抽屉后板Middle Drawer's back board
		1-8	抽屉底托条Drawer's bottom bracket
		1-9	抽屉底板Drawer's Bottom board
		1-10	中抽屉底板Middle Drawer's bottom board
		1-11	前脚条Front foot strip
		1-12	侧脚条Side foot strip
		②	装饰条Decorative strip

YF1M-A(常规款电视柜)

安装方法/
Installation method

阀门开关(下压为开)
Valve switch
(press down to open)

 1

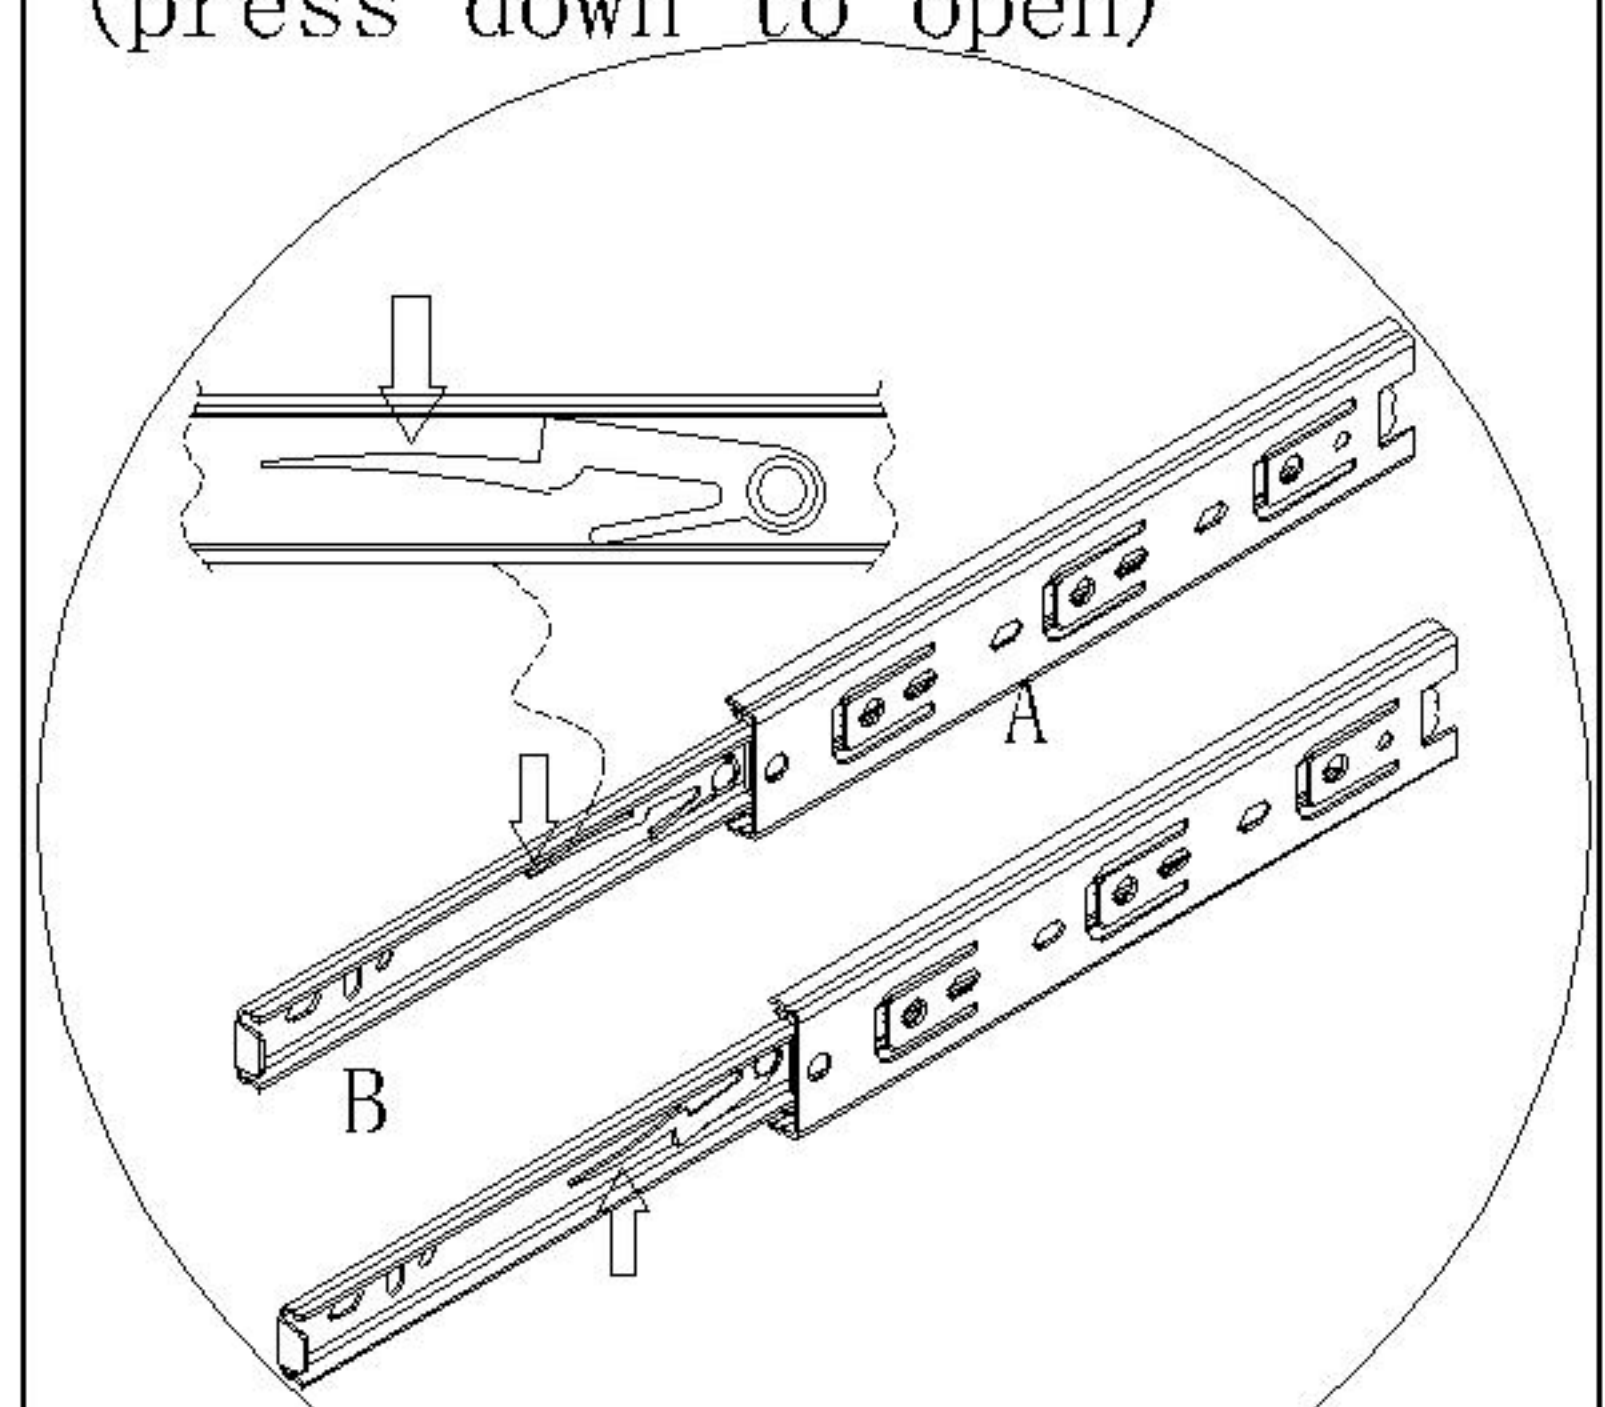


注: 先将A与B拆下来
Note: remove a and B first

侧板
side board

后after

 
2

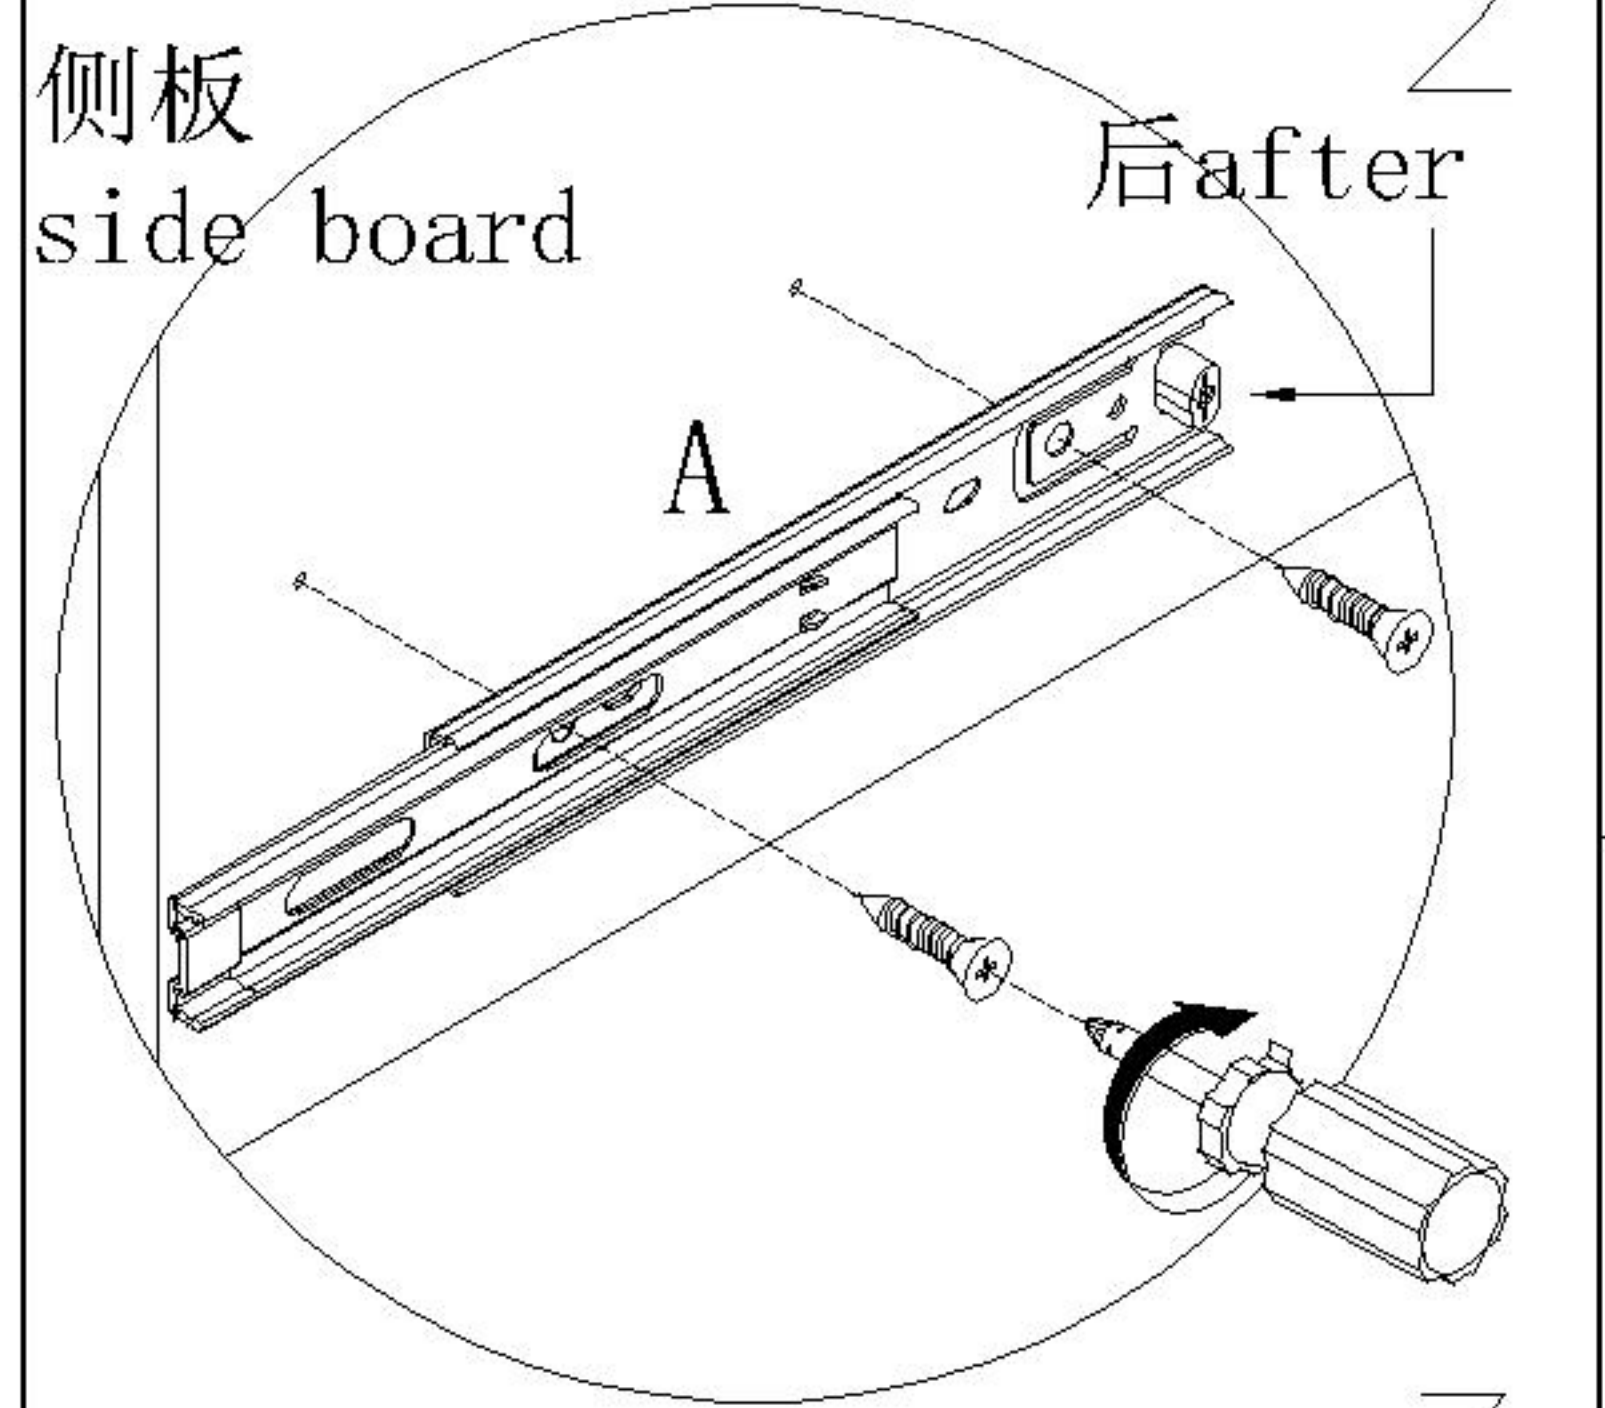

抽屉侧板
sideboard
of the drawer

后after

 3

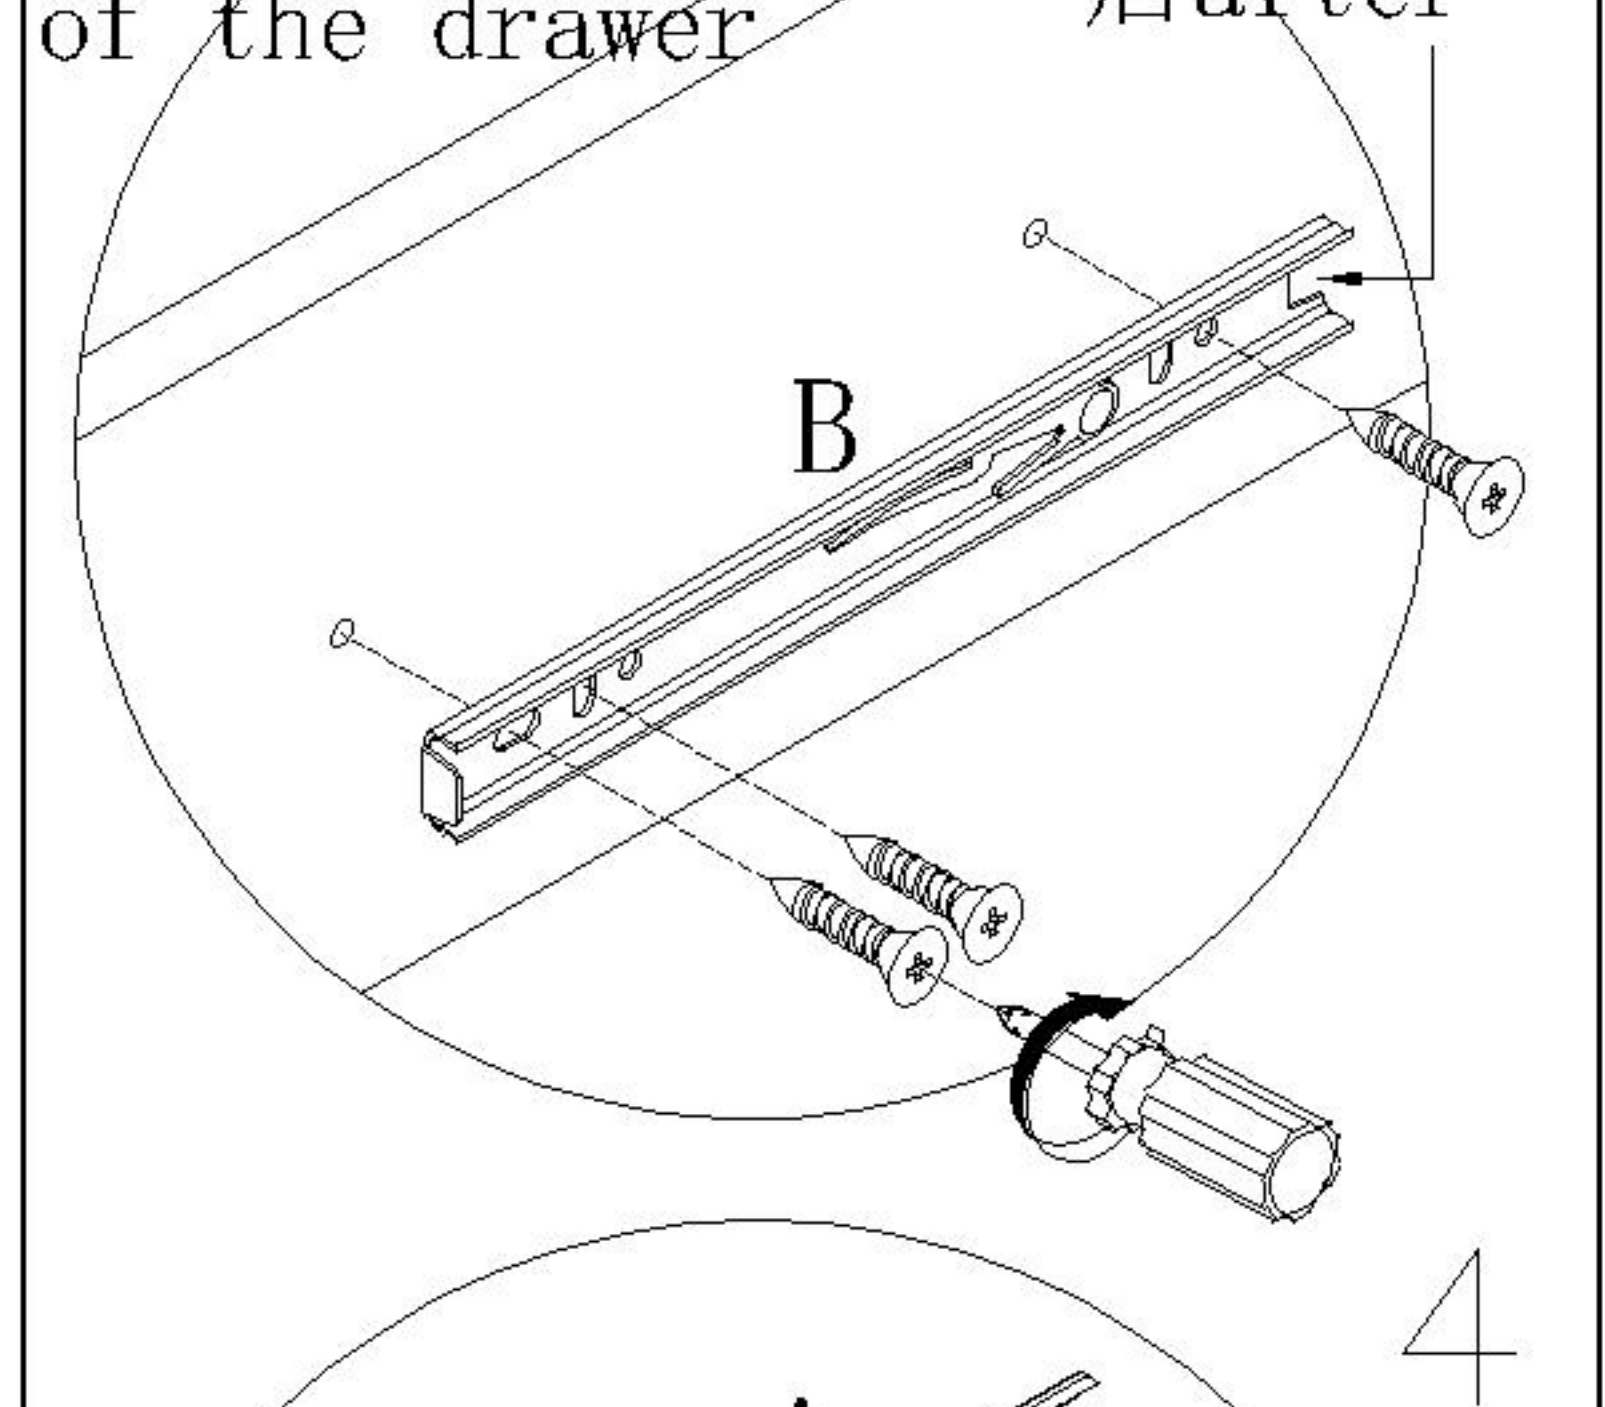

5

 
A

B

注: 将B对准A后推进去
Note: align B with a
and push it in


三节滚珠导轨
three-section ball rail

4

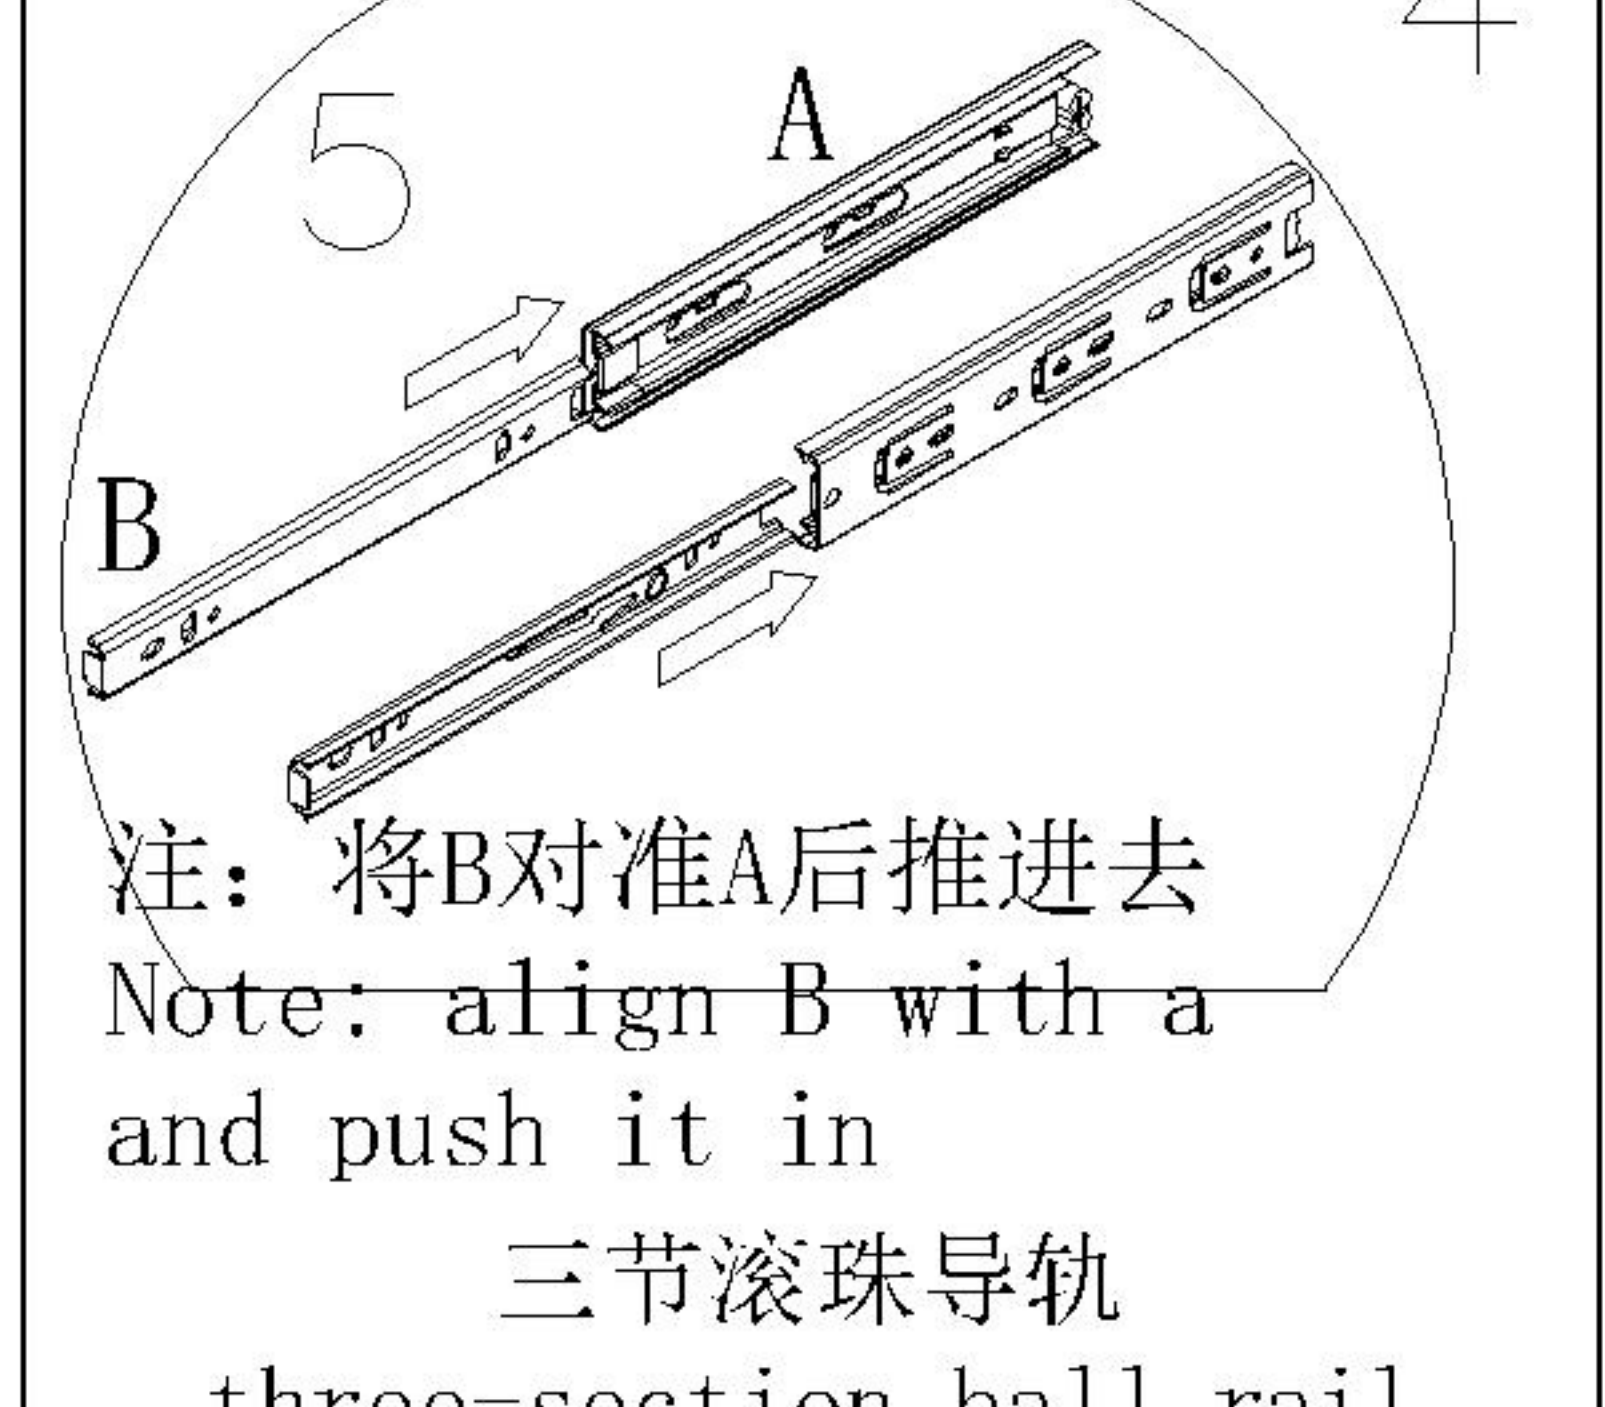

(B)*8

 1

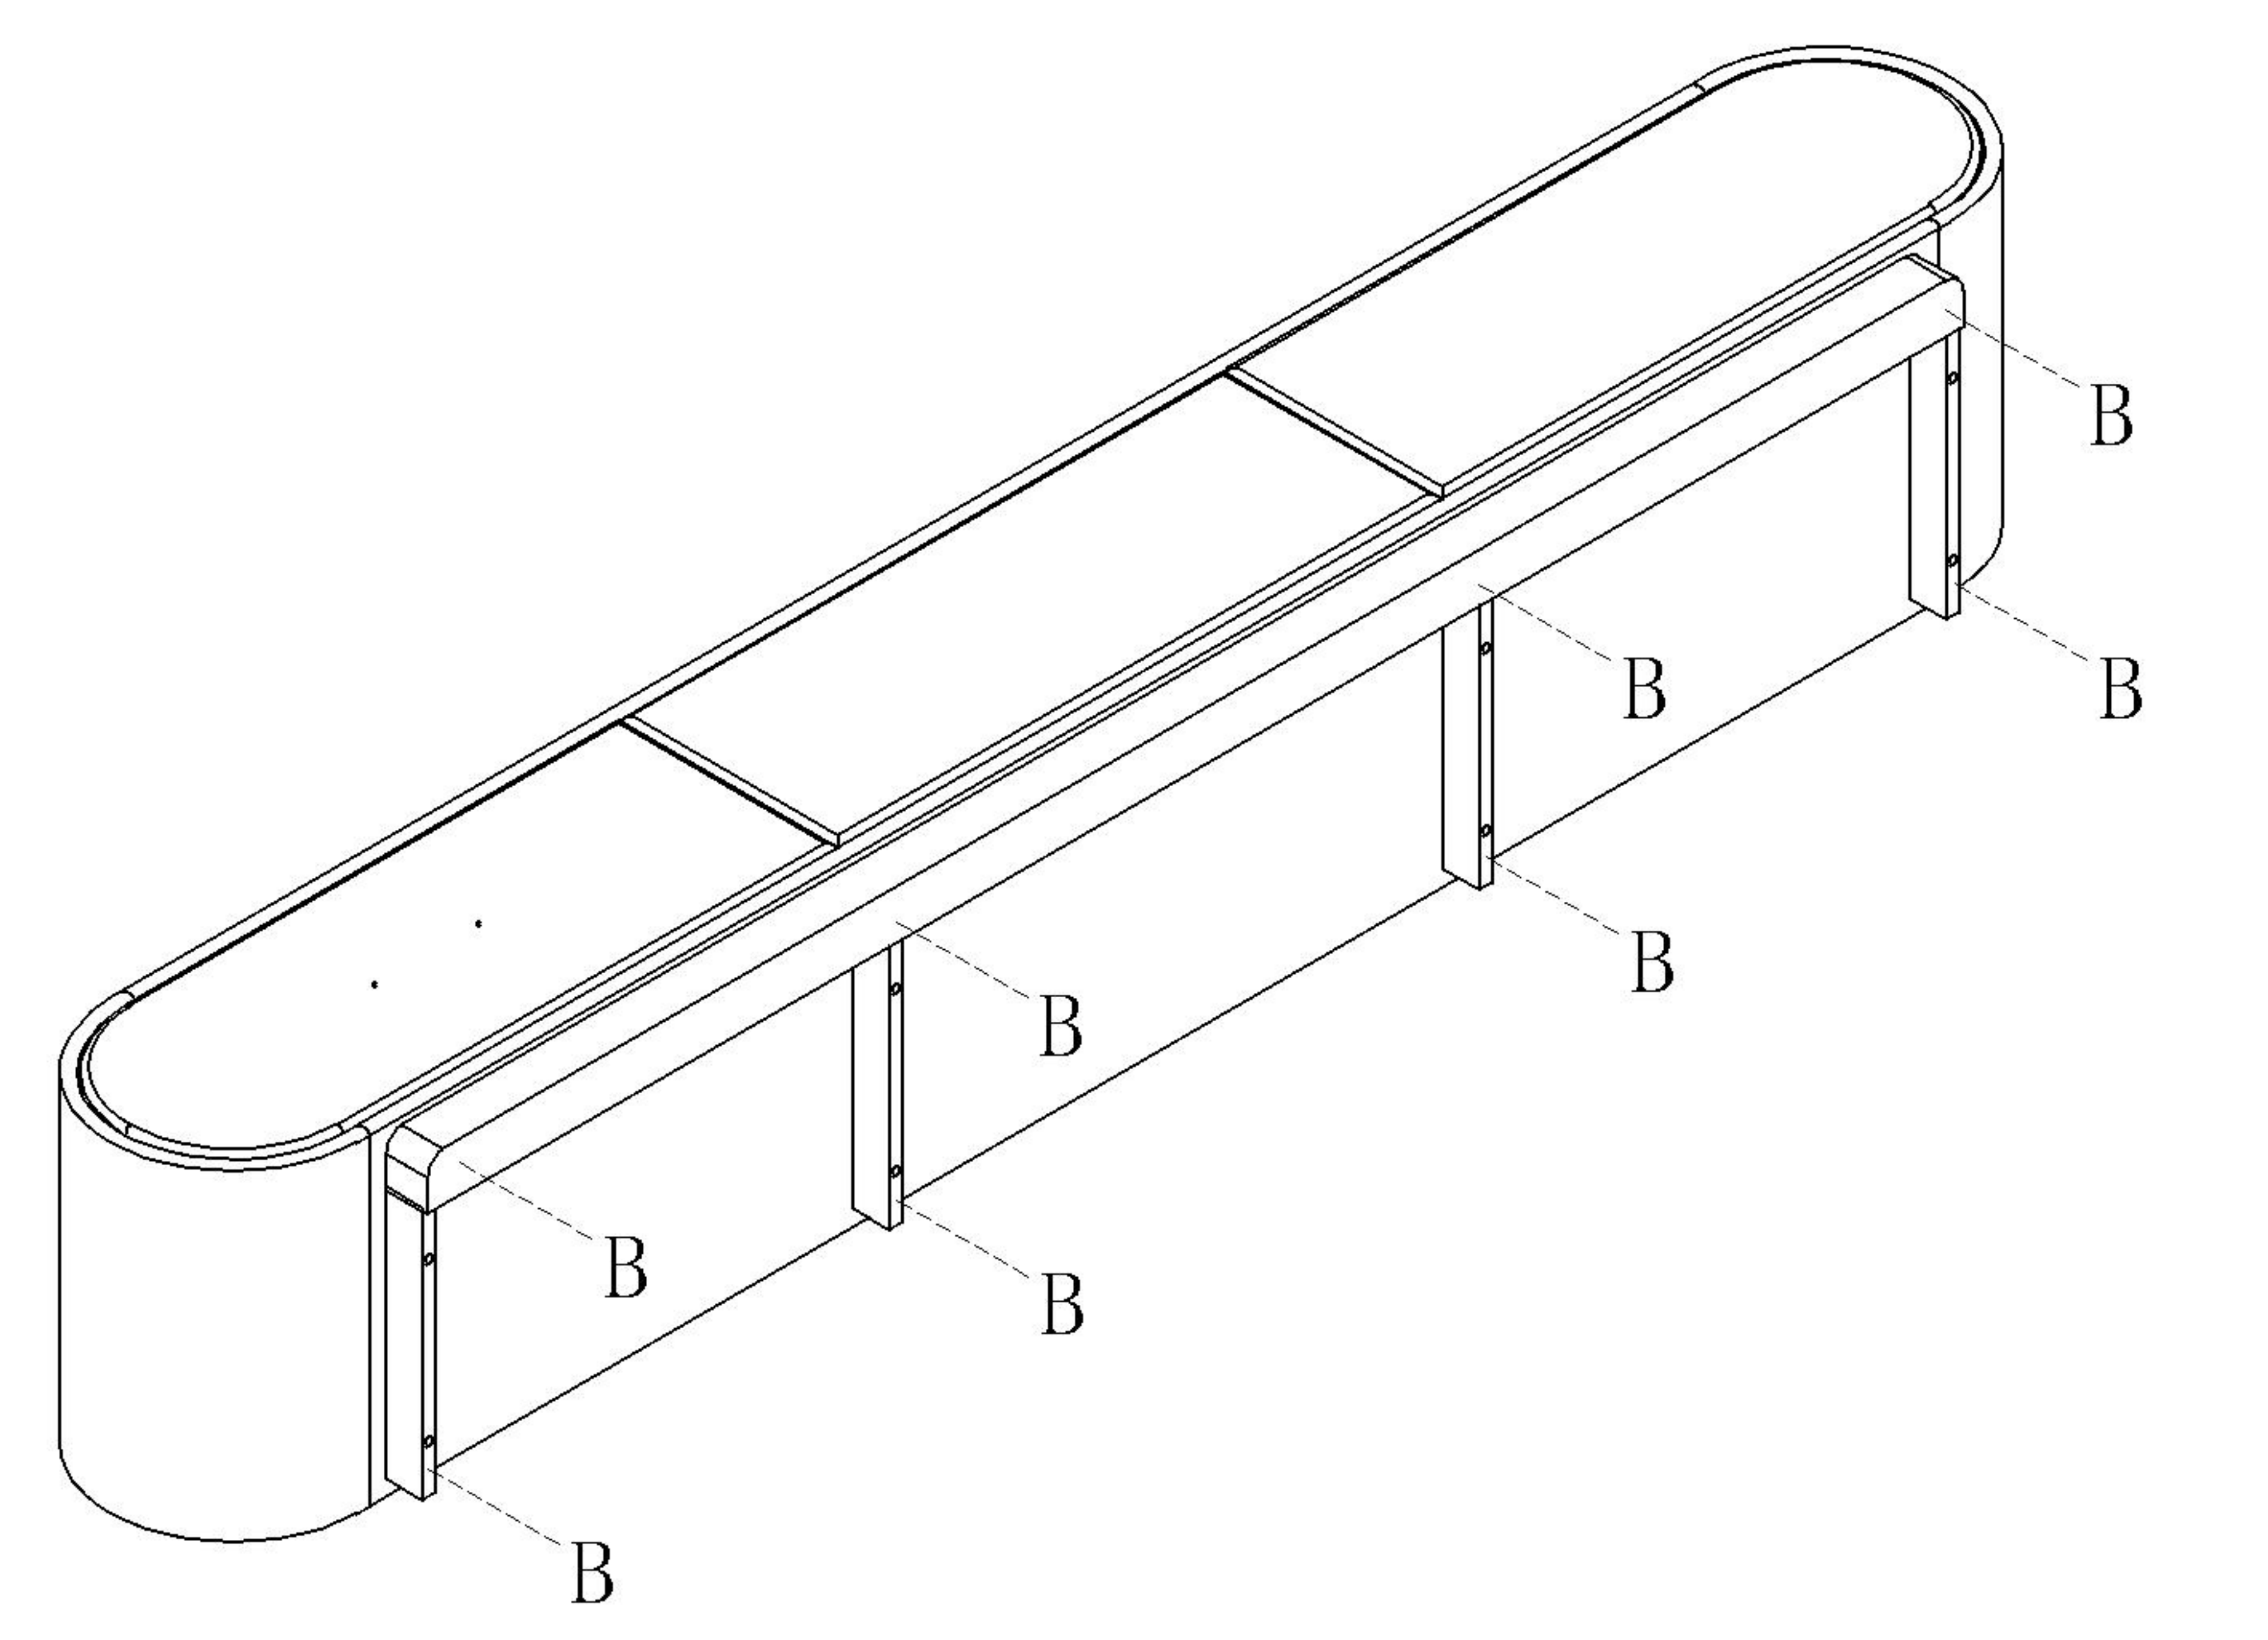


3



(A)*2

 2

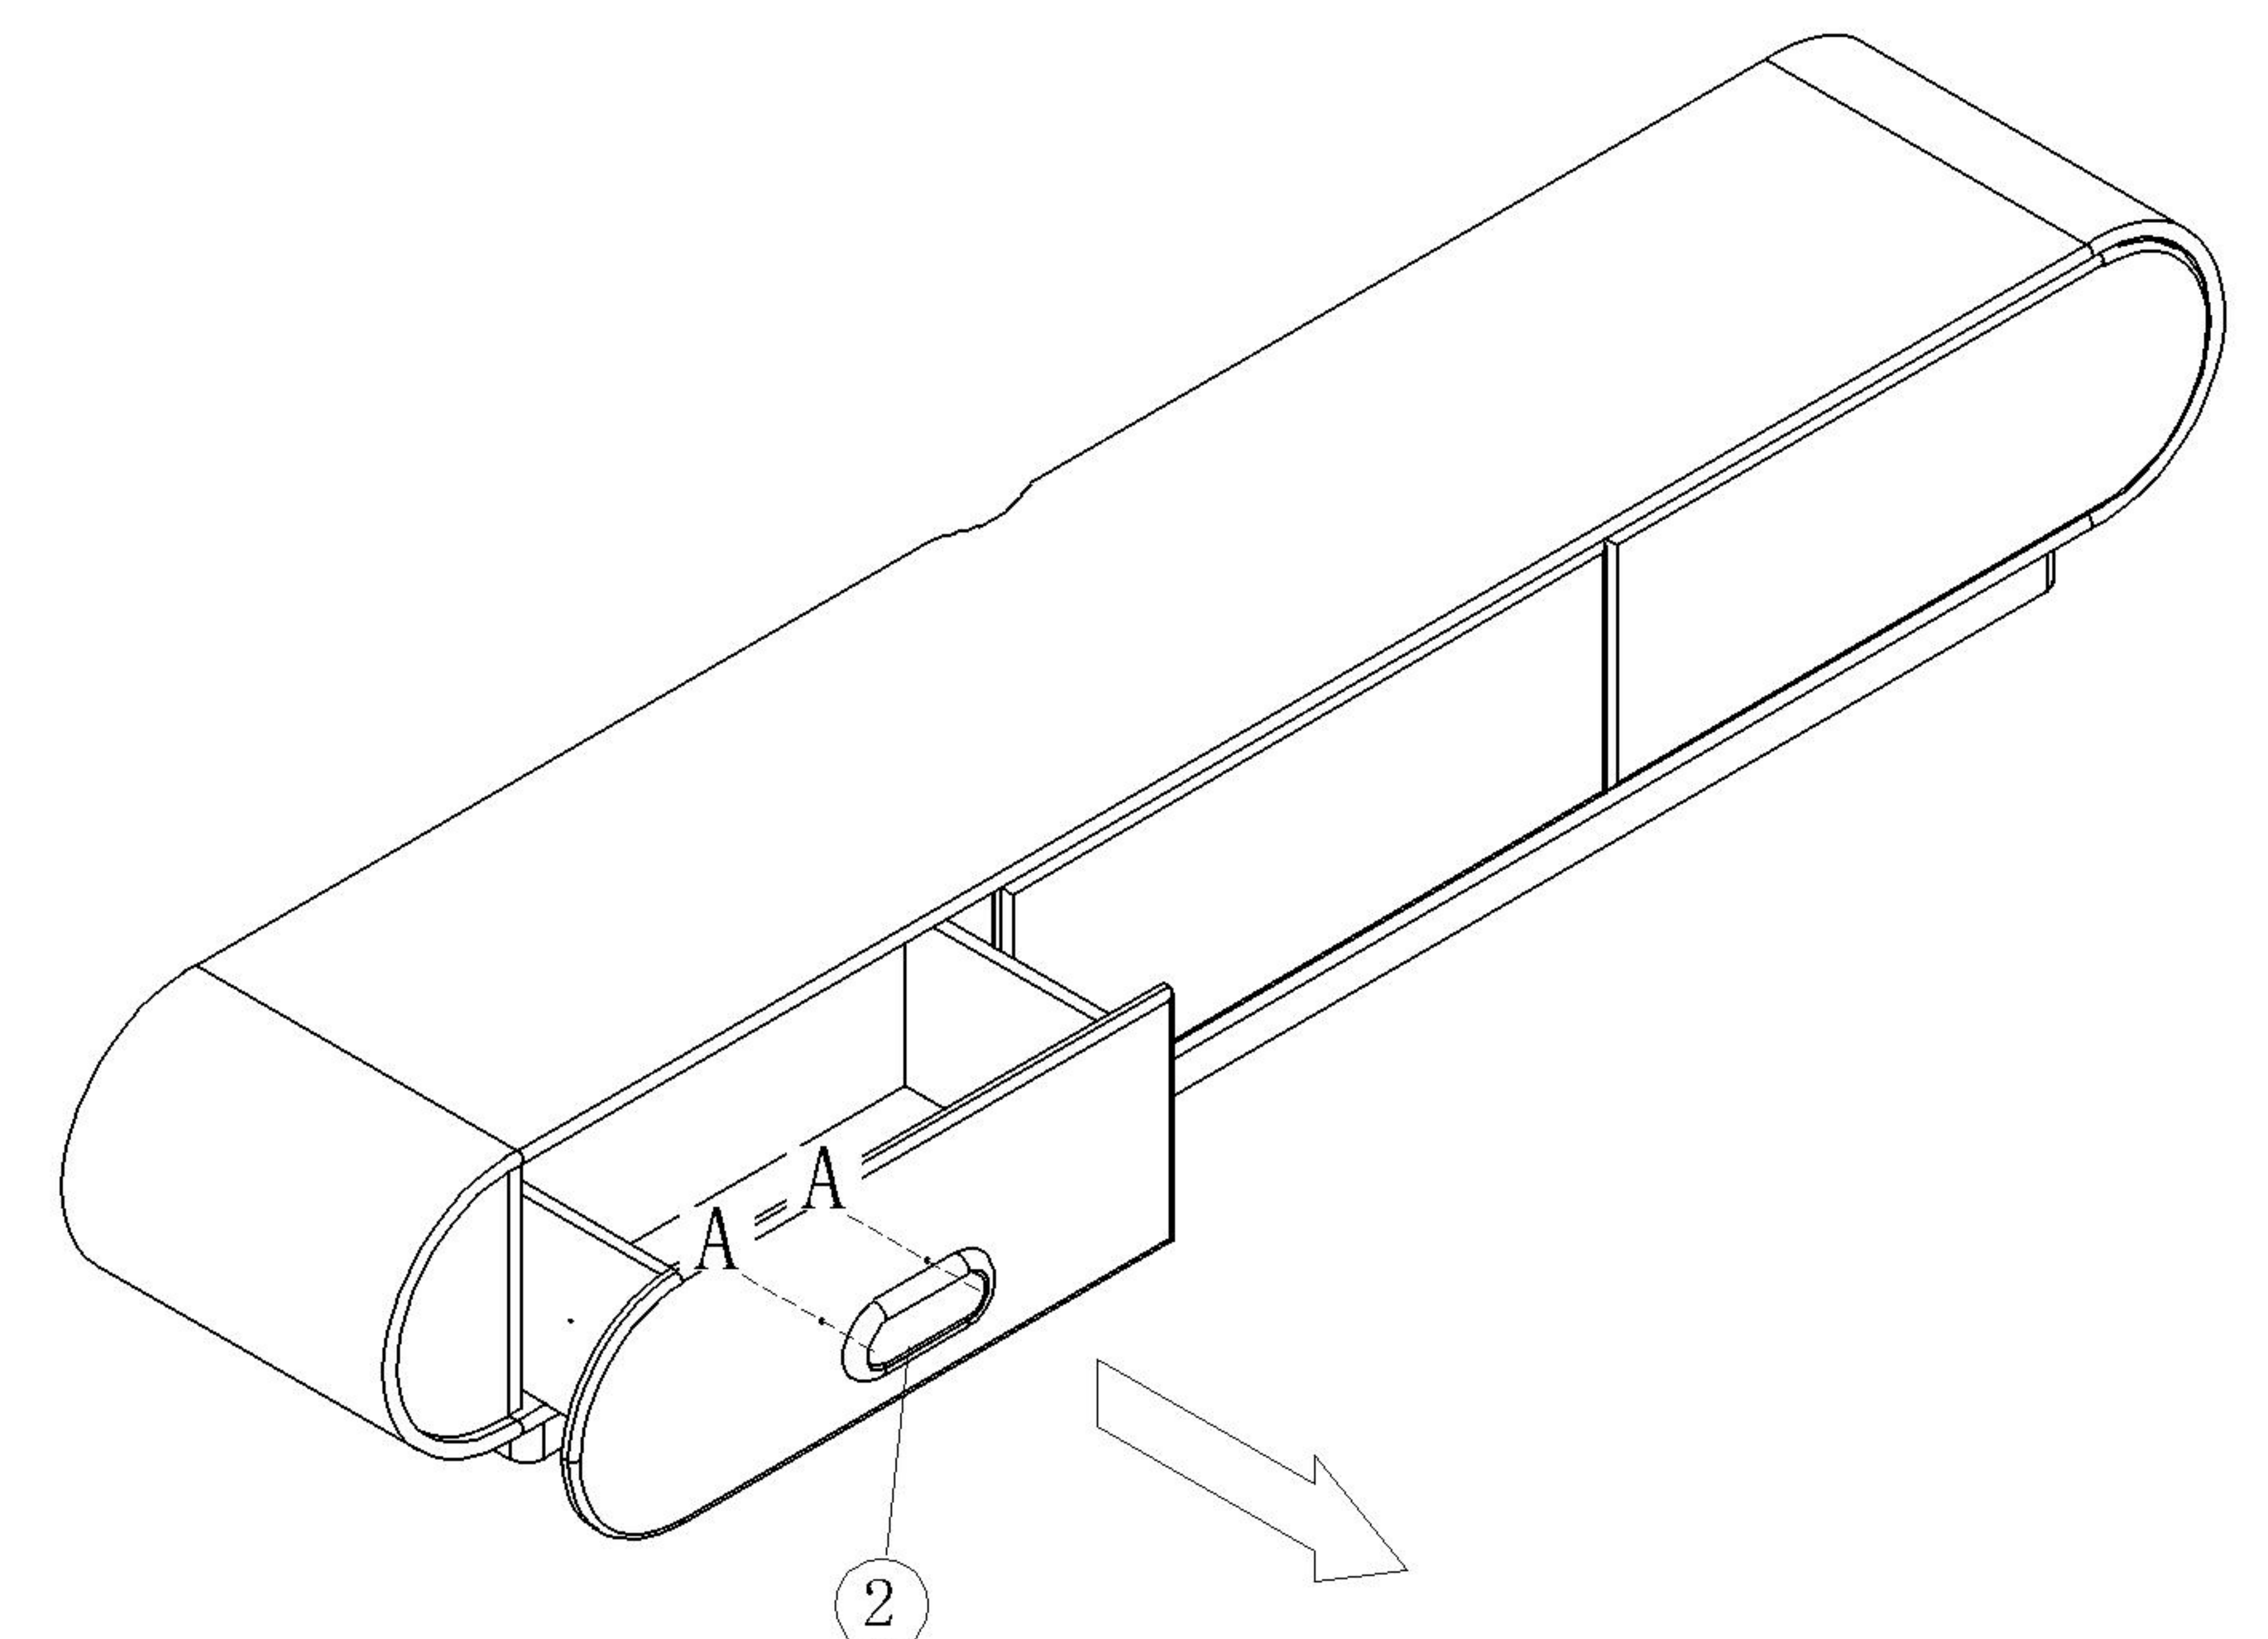

4



3/3