



YR1V-A 0.9M

安装方法/ Installation method

阀门开关(下压为开)
Valve switch
(press down to open)

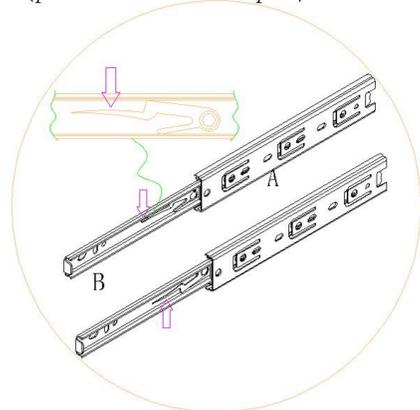


注: 先将A与B拆下来
Note: remove a and B first

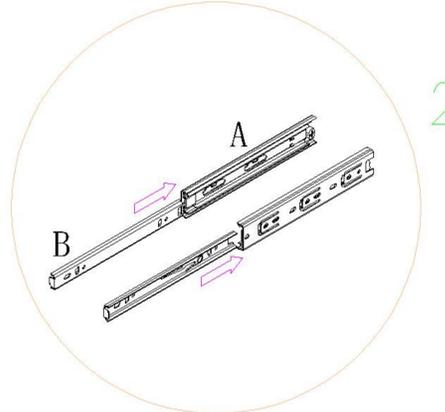

注: 将B对准A后推进去
Note: align B with a and push it in


三节滚珠导轨
three-section ball rail

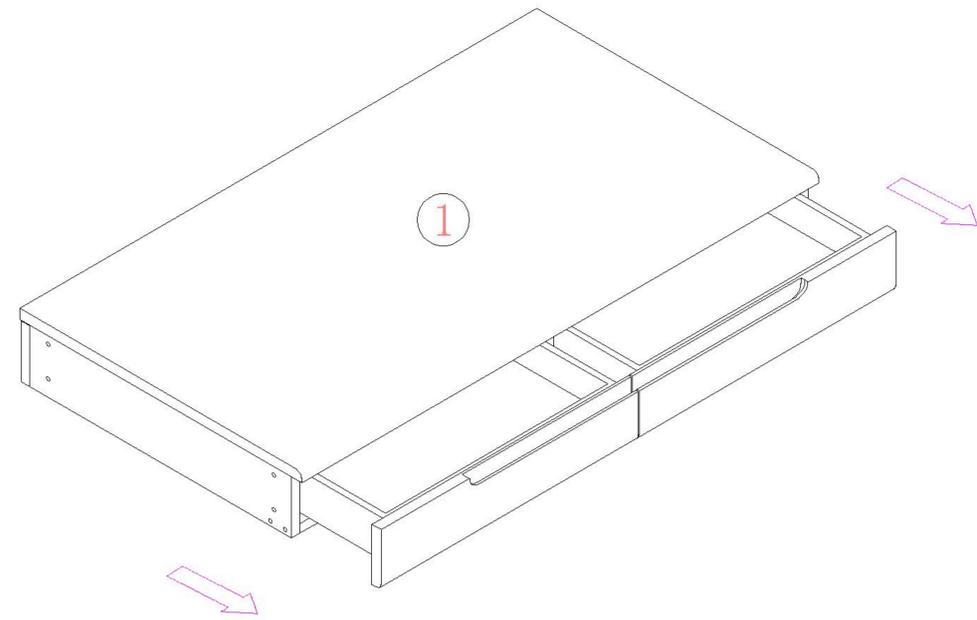

1


- (A)*2
- (B)*4
- (F)*1

2

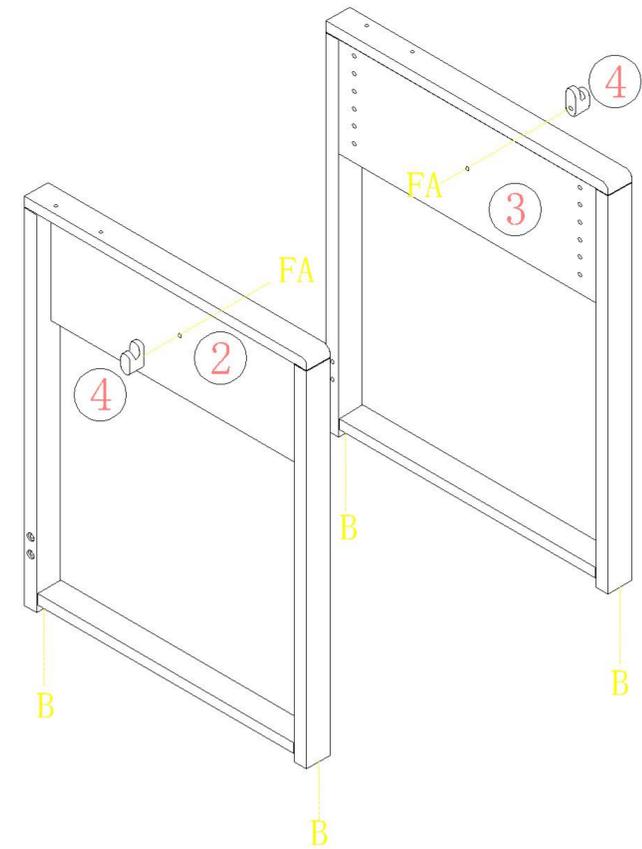

- (A)*8
- (C)*8
- (F)*1


3

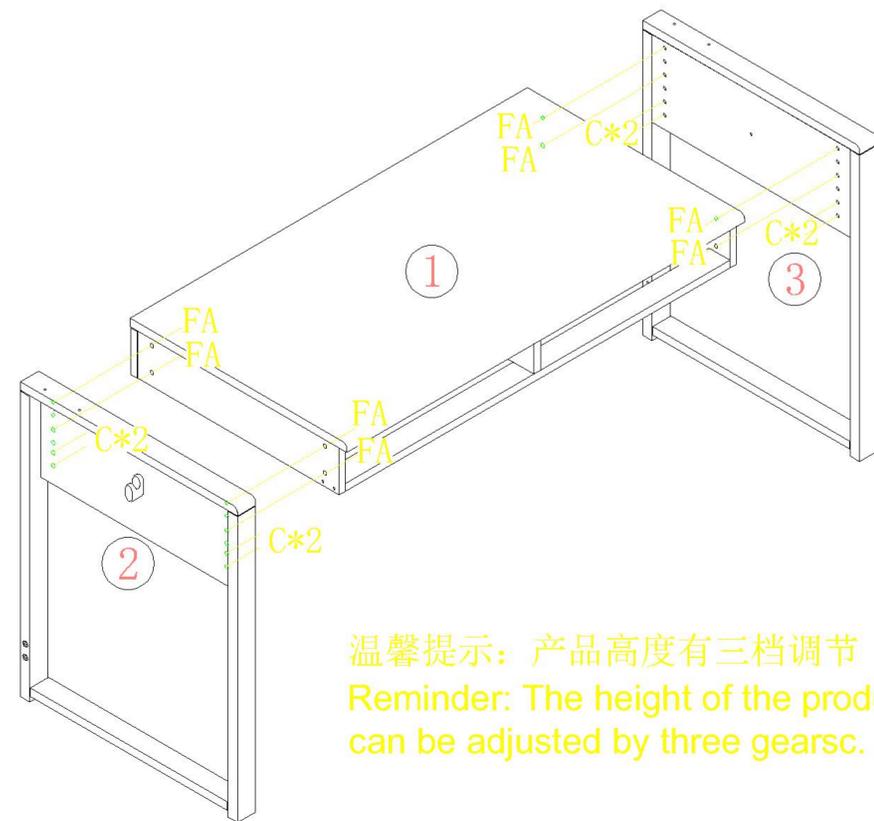



温馨提示: 产品高度有三档调节
Reminder: The height of the product can be adjusted by three gears.

- (C)*4
- (D)*4
- (E)*4
- (F)*1

4

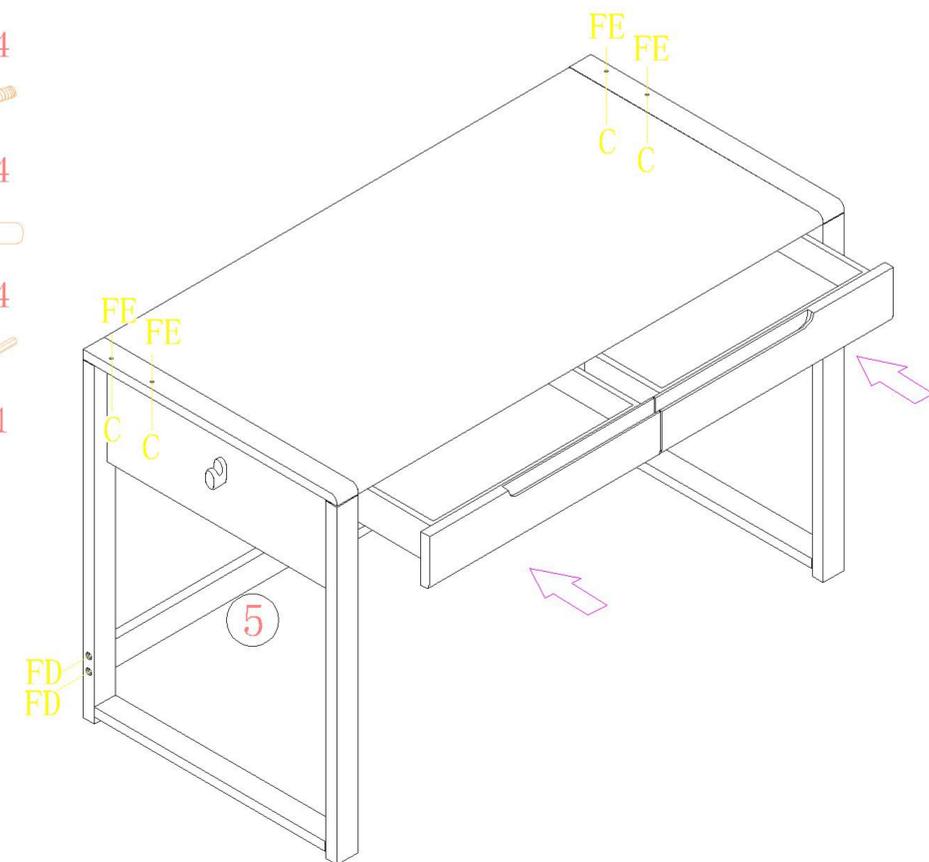

安装方法/
Installation method

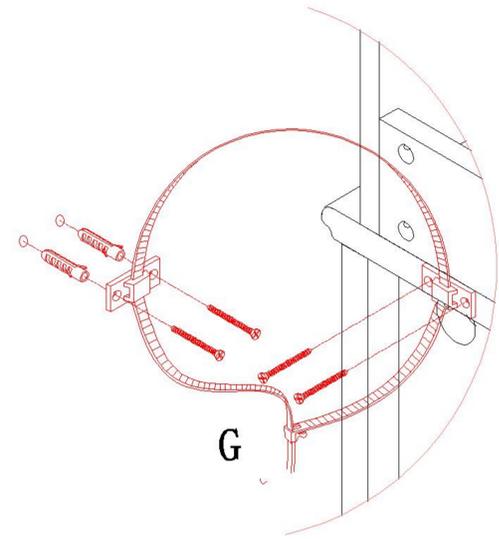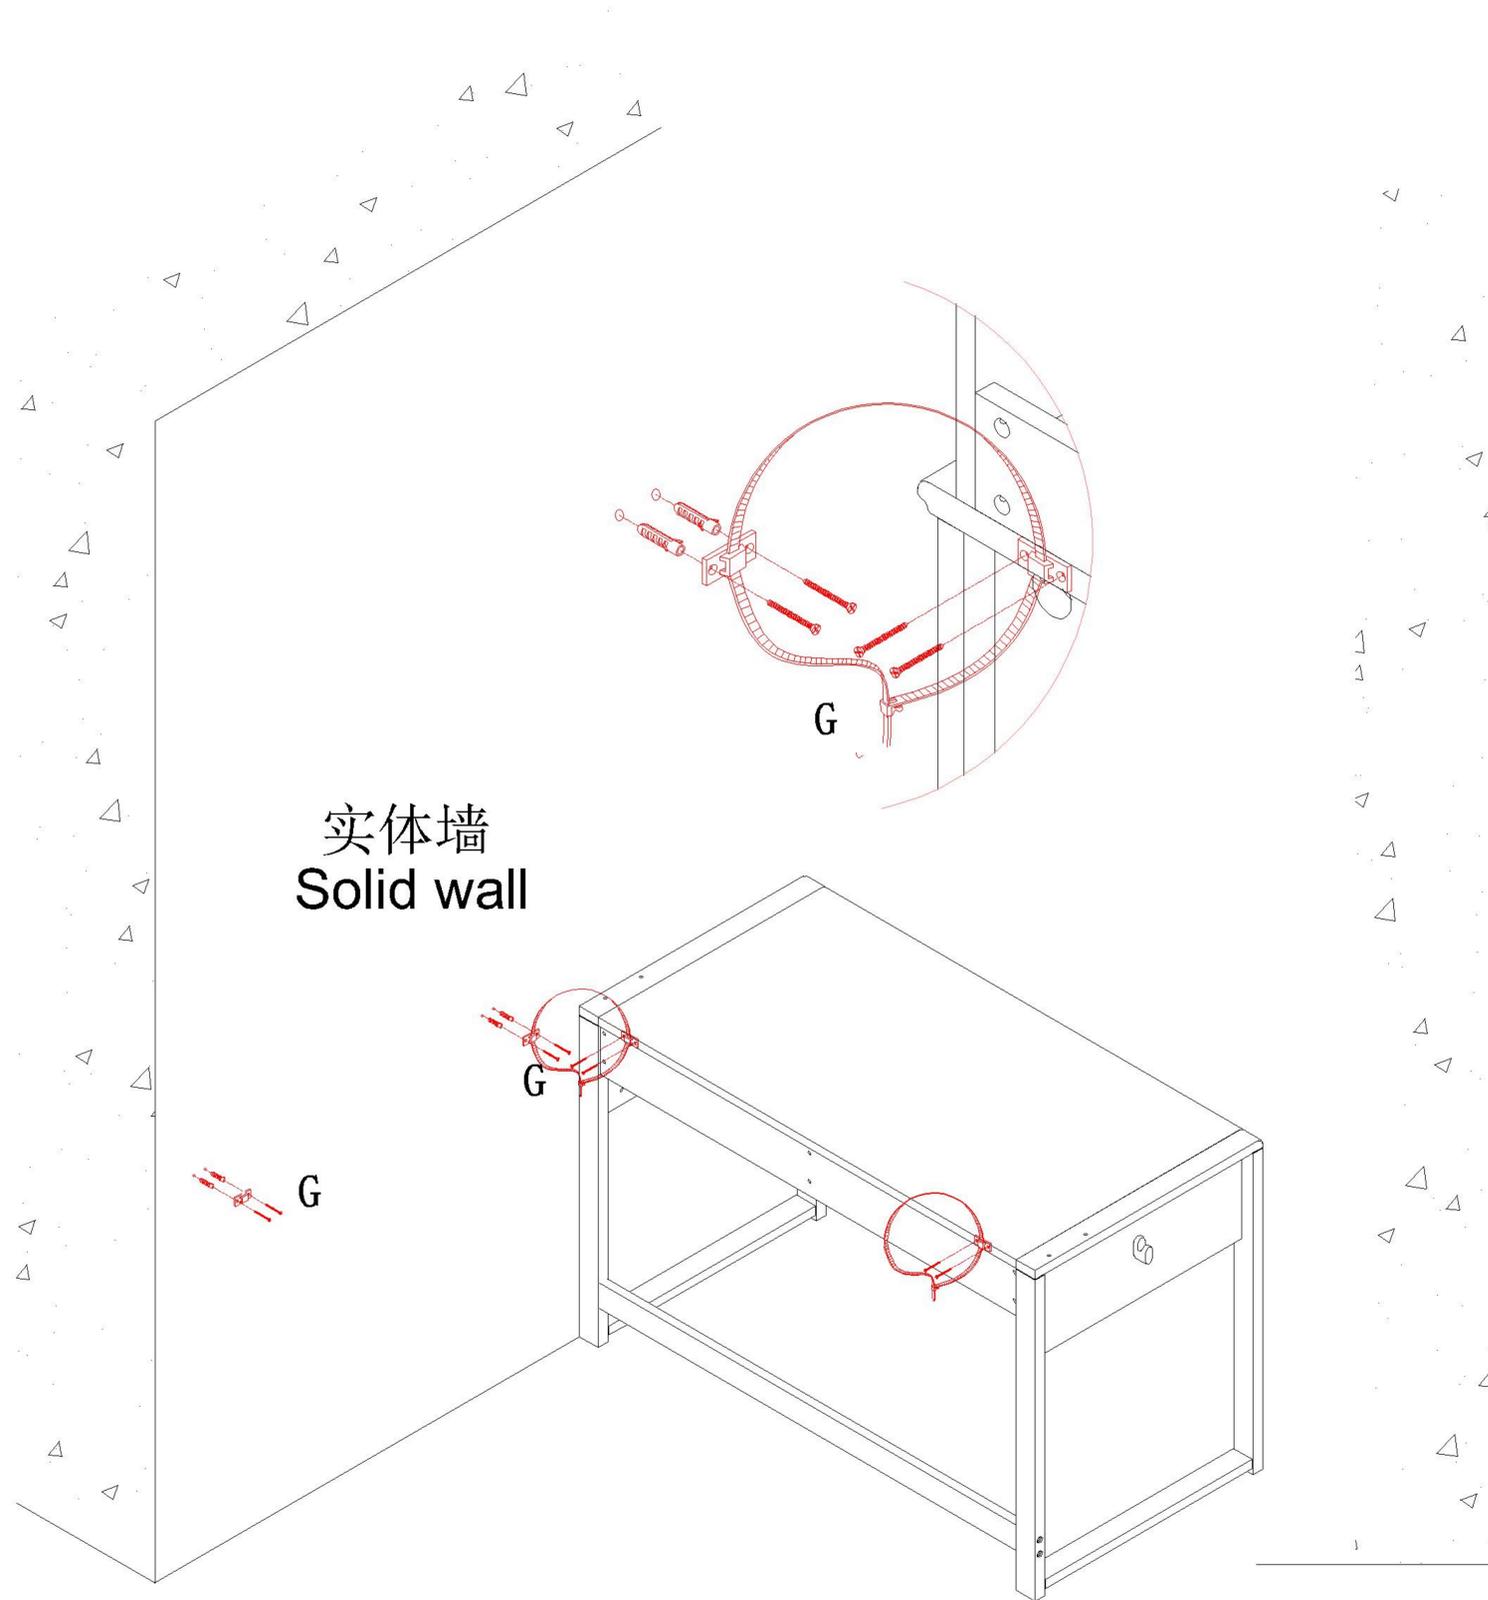

实体墙
Solid wall

