

LINSY林氏家居

部件表/Parts list

安装示意图/Assembly Instruction

编号 NO.	名称 Name	数量 QTY	材质 Material
①	五星椅脚 Five-star chair legs	1	塑胶 Plastic Cement
②	座垫Cushion	1	三防布+定型棉+塑胶+五金 Three proof fabric+Plastic Cement+Hardware
③	椅背Back	1	三防布+定型棉+塑胶 Three proof fabric +Plastic+Cement
④	气杆 Air Pole	1	五金 Hardware
⑤	扶手Armrest*L/R	2	塑胶 Plastic Cement
⑥	背支架 Back brace	1	塑胶 Plastic Cement
⑦	轮子Wheel	5	塑胶+五金 Plastic Cement+Hardware

产品名称 Model NO: LH006W6-A/B

产品规格 Specification: 615*615*800-900mm


安装工具 Tool: 安装工具 Installers

五金表/Hardware list

(A) 内六角扳手X1 (M6) WrenchX1 (M6)

(B) 扶手螺丝X6 (M6*40) Armrest screw*6 (M6*40)

(C) 手轮X1 (M12*75) Handwheel*1 (M12*75)

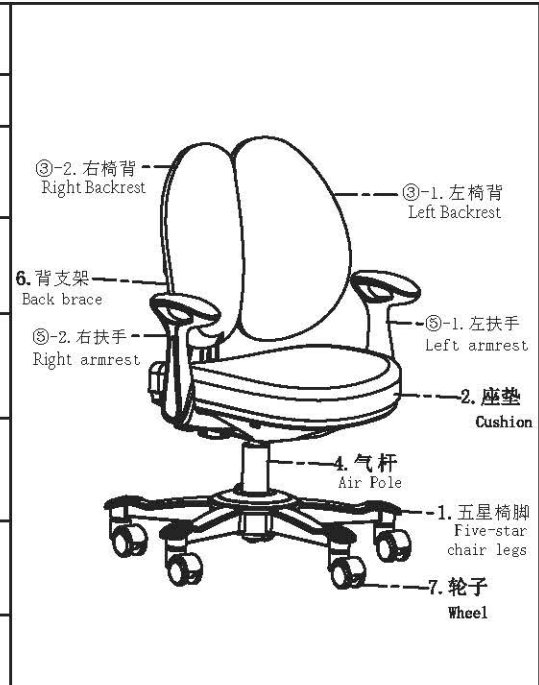

注意!只允许成人安装,儿童勿近。
be careful! Adult only, keep away from children.

安装方法/Installation method

1


将5个轮子插入到椅脚的孔位上并且用力插紧到位后,再将气压杆装入椅脚。
Insert the 5 wheels into the holes of the chair foot and firmly insert them in place, and then install the air pressure rod into the chair foot.

2

将左右扶手安装在坐垫上,分别锁上三颗螺丝扭紧,将支架固定在坐垫后,并用手轮拧紧。
Install the left and right armrests on the seat cushion, respectively lock three screws and tighten them, fix the bracket behind the seat cushion and tighten with the hand wheel.

将5个轮子插入到椅脚的孔位上并且用力插紧到位后,再将气压杆装入椅脚。
Insert the 5 wheels into the holes of the chair foot and firmly insert them in place, and then install the air pressure rod into the chair foot.

将左右扶手安装在坐垫上,分别锁上三颗螺丝扭紧,将支架固定在坐垫后,并用手轮拧紧。
Install the left and right armrests on the seat cushion, respectively lock three screws and tighten them, fix the bracket behind the seat cushion and tighten with the hand wheel.

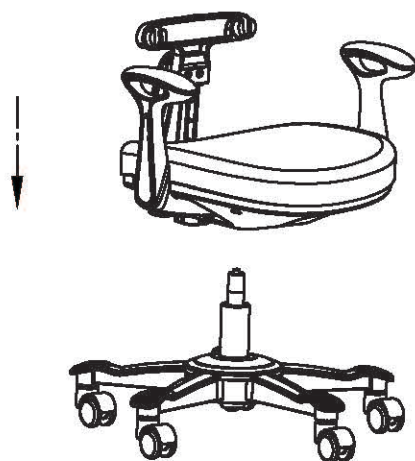


将座垫插入到椅脚的气压杆里面后即可。

Insert the seat cushion into the upper end of the air pressure lever of the seat foot.



将左右椅背分别插入到支架对应的槽内即可。

Insert the left and right backrest into the corresponding assembly positions of the bracket.

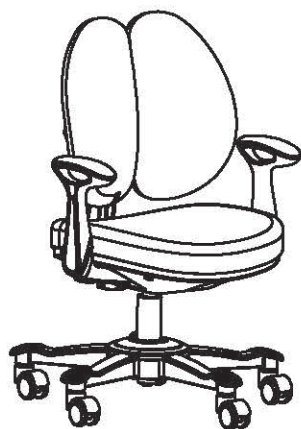

到此已经安装完毕，请再次检查确认各部位是否全部拧紧到位即可。

Now that the installation has been completed, please check again to confirm whether all parts are tightened in place.

使用说明！

Directions for use!

此扳扣往上扳时，可将座垫调节升降达到您想要的高度后，再松开锁定！

When this trigger is on the upper plate, you can adjust and lift the seat cushion to the height you want, and then release the lock!

此旋钮放松后靠背可以前后深度调节，达到想要的深度后适当拧紧旋钮锁定！

After this knob is loosened, the seat cushion can be adjusted back and forth in depth. When the desired depth is reached, properly tighten the knob to lock it!

