
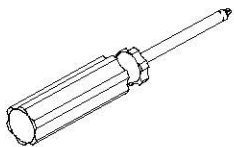
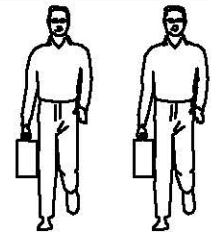
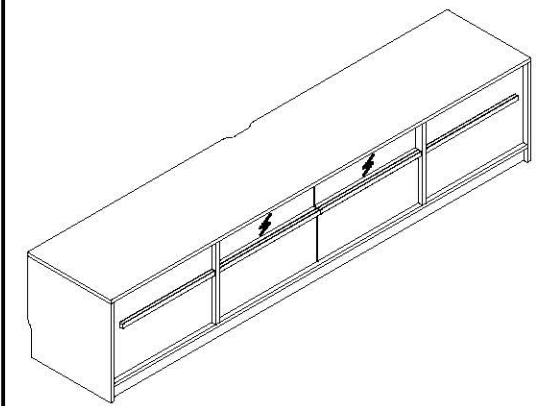














安装示意图/Assembly Instruction	
产品名称 Model NO.	矮电视柜2.0米
产品型号 Product Model	YZ1M-0
尺寸规格 Specification	(2005*398*428)mm
安装工具 Tool	安装人数 Installer
	

注：为保证设计效果，部分尺寸为定制尺寸，不影响使用。







 (A)* 56 二合一螺杆 2-in-1-screw	 (B)* 56 大三合一锁饼 Three-in-one large lock	 (C)* 21 木榫Ø8x30mm wood tenon	 (D)* 16 层板托 shelf support	 (E)* 8 背板扣 Back Plate Buckle-White	 (F)* 34 自攻螺丝M3.5x14mm Self-tapping screw	 (G)* 2 透气孔盖 Vent cover	 (H)* 2 穿线孔盖 Plastic cover
 (I)* 14 脚垫-灰色 Footrest - Grey	 (J)* 4 缓冲门铰大弯-杯径Ø35 Hinge-big bends-diameter 35	 (K)* 8 镜钉 Mirror nail	 (L)* 8 透明塑料垫片 Transparent plastic gasket	 (M)* 8 自攻螺丝M4x16mm Self-tapping screw	 (N)* 2 玻璃:482*137*5 Glass	 (O)* 2 三节滚珠导轨-10" three-section ball rail	

YZ1M-0(矮电视柜2.0米)		部件表/Parts List					部件表/Parts List				
安装方法/ Installation method		编号NO.	名称Name	规格 (mm) Specification	数量QTY	材质Material	编号NO.	名称Name	规格 (mm) Specification	数量QTY	材质Material
		①	面板Top panel	2005*398*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	⑮	抽屉后板Drawer Back panel	452*142*15	2	无醛定向刨花板 Aldehyde-free directional particleboard
		②	底板Bottom board	1973*382*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	⑯	抽屉底板Drawer Bottom panel	432*305*5	2	无醛添加中纤板 Formaldehyde free addition of fiberboard
		③	左侧板Side board(L)	410*397*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		④	右侧板Side board(R)	410*397*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑤	左中侧板 Middle side board(L)	337*356*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑥	中中侧板 Middle side board	337*318*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑦	右中侧板 Middle side board(R)	337*356*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑧	边活动层板 Movable shelf	485*324*15	2	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑨	中活动层板 Middle movable shelf	477*318*15	2	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑩	长脚条 Long foot slat	1973*58*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑪	短脚条 Short foot strip	350*58*15	3	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑫	背板 Back board	1983*347*5	1	无醛添加中纤板 Formaldehyde free addition of fiberboard					
		⑬	左门板组立 Door board assembly(L)	482*333*30	1	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood					
		13-1	左门板 Door board(L)	482*333*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		13-2	短拉手 Short Handle	442*15*20	1	橡胶木 Rubber wood					
		⑭	右门板组立 Door board assembly(R)	482*333*30	1	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood					
		14-1	右门板 Door board(R)	482*333*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		14-2	短拉手 Short Handle	442*15*20	1	橡胶木 Rubber wood					
		⑮	左抽屉面板组立 Drawer's board assembly(L)	482*222*30	1	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood					
		15-1	左抽屉面板 Drawer's panel(L)	482*222*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		15-2	长拉手 Long Handle	481*15*20	1	橡胶木 Rubber wood					
		⑯	右抽屉面板组立 Drawer's board assembly(R)	482*222*30	1	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood					
		16-1	右抽屉面板 Drawer's panel(R)	482*222*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		16-2	长拉手 Long Handle	481*15*20	1	橡胶木 Rubber wood					
		⑰	抽屉侧板 Drawer side board	295*142*15	4	无醛定向刨花板 Aldehyde-free directional particleboard					

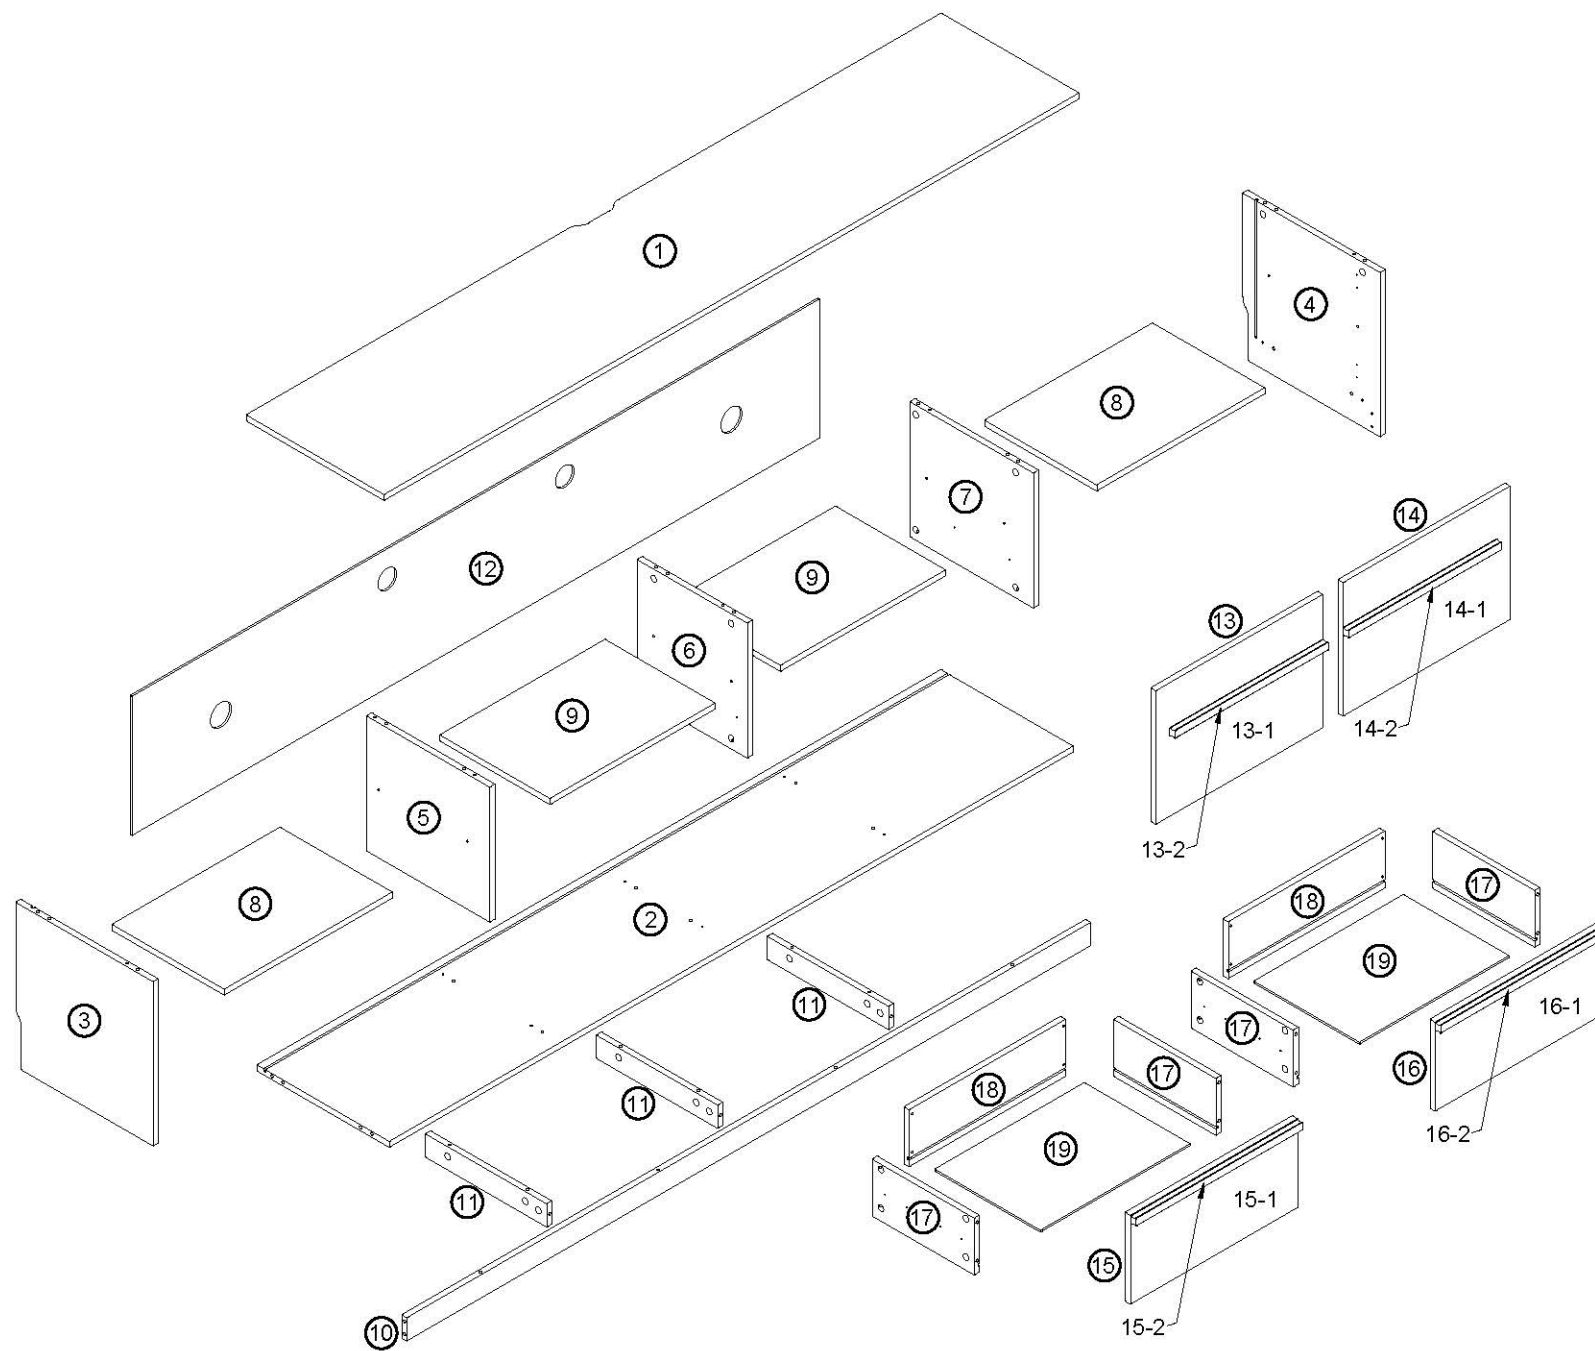



YZ1M-0(矮电视柜2.0米)

安装方法/
Installation method

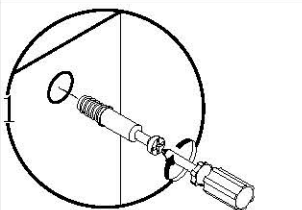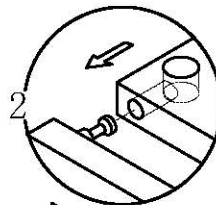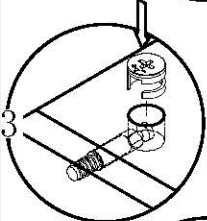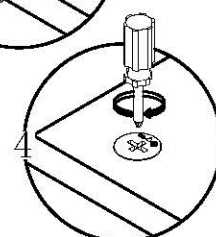

大二合一
two-in-one


- (A)*16
- (B)*16
- (F)*12
- (K)*8
- (L)*8
- (M)*8
- (N)*2
- (O)*2
- (A)*10
- (B)*10

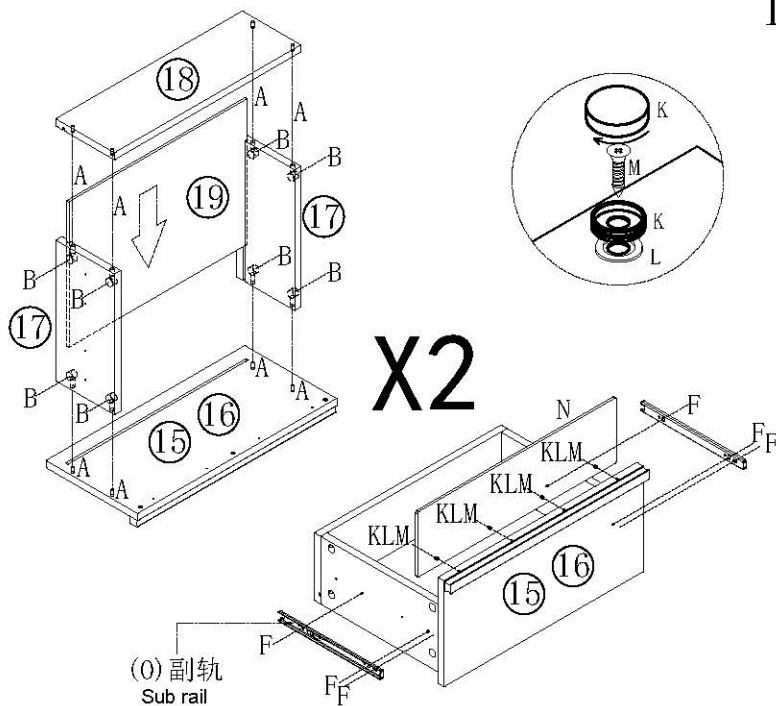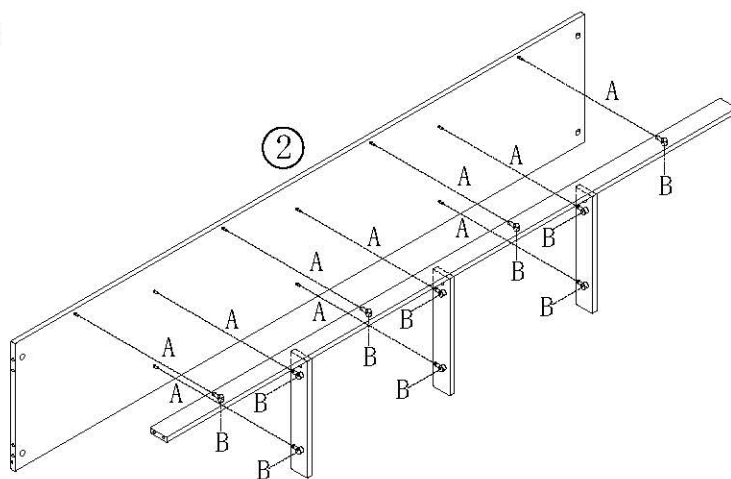

1

3


- (A)*3
- (B)*3

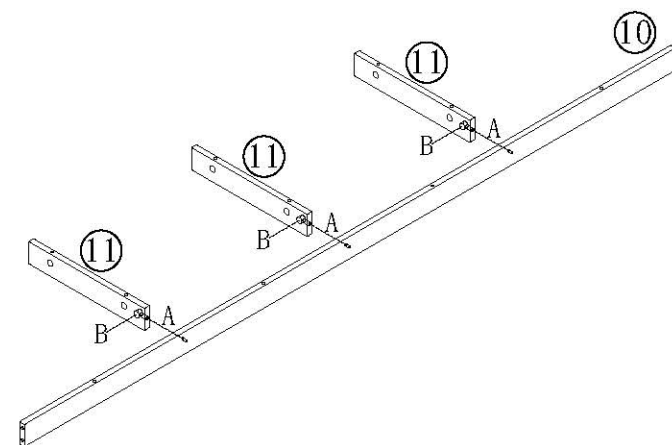

2



4

- (A)*14
- (B)*14
- (C)*10
- (I)*14






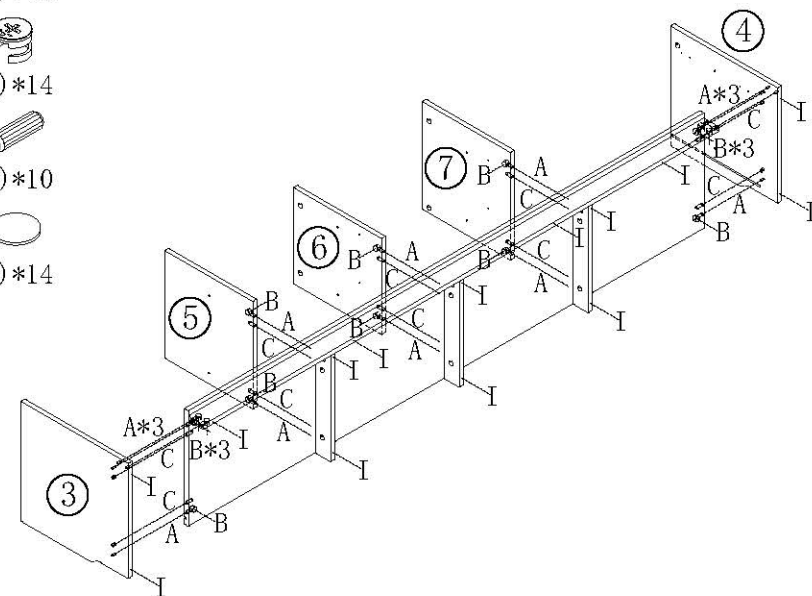


YZ1M-0(矮电视柜2.0米)

安装方法/
Installation method

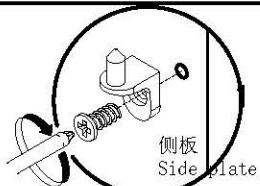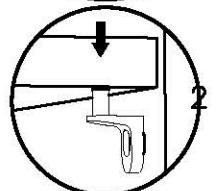


大弯big bend

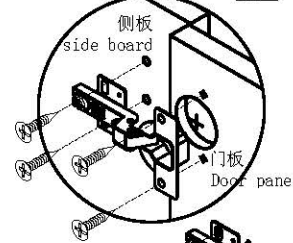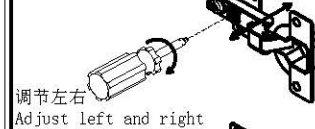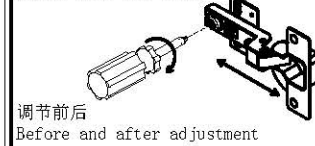


门铰
Hinge

- (A)*10
- (B)*10
- (C)*10
- (G)*2
- (H)*2

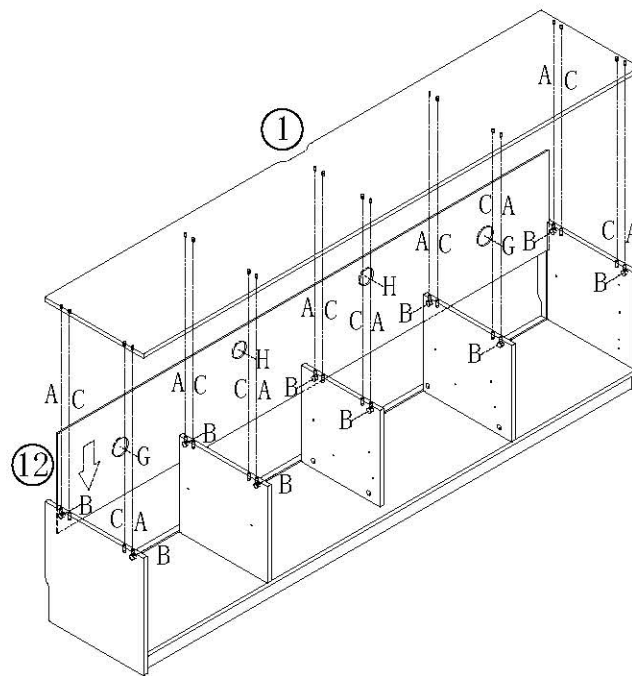

5


- (D)*16
- (F)*12
- (O)*2

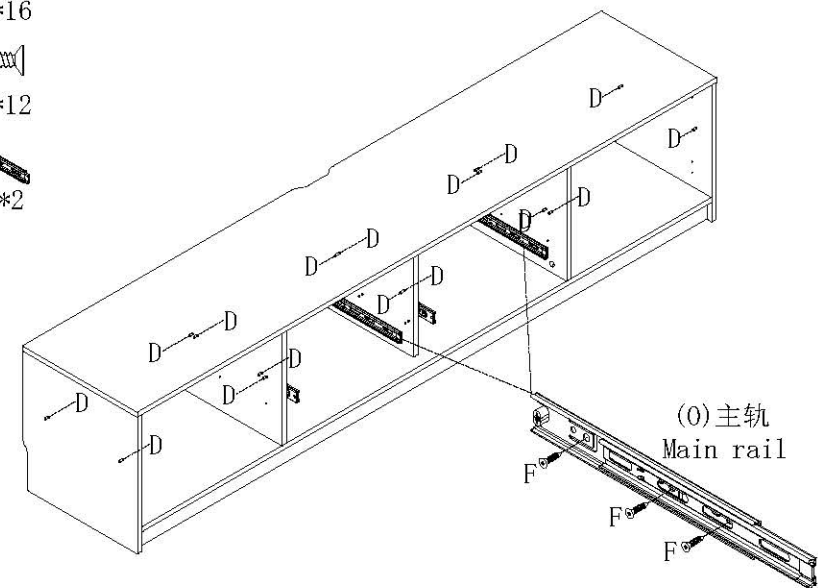


6

7

- (J)*4

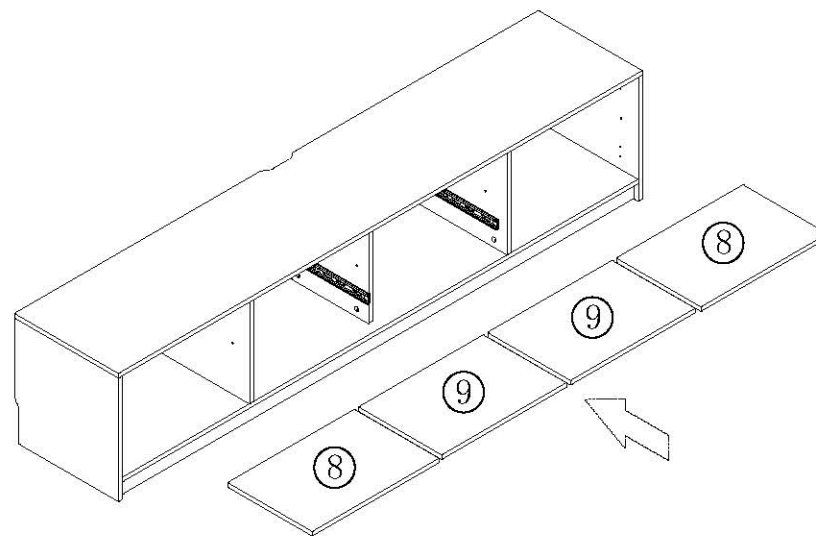

8

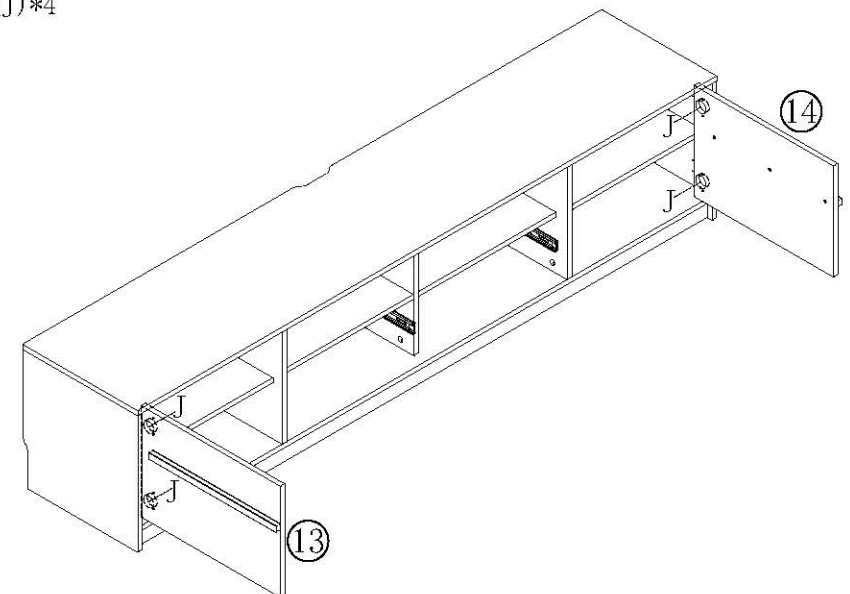


YZ1M-0(矮电视柜2.0米)


安装方法/ Installation method

阀门开关(下压为开)
Valve switch
(press down to open)


1

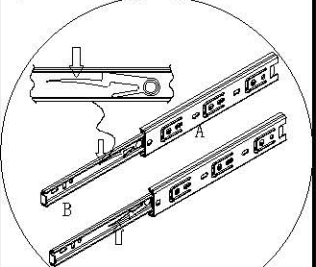


注: 先将A与B拆下来
Note: remove a and B first

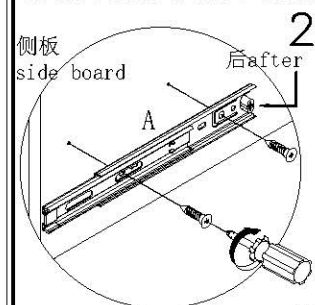

2

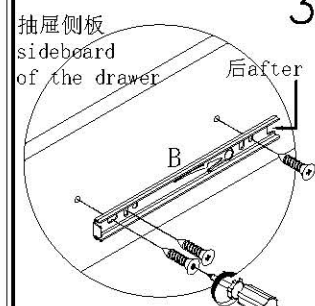


3

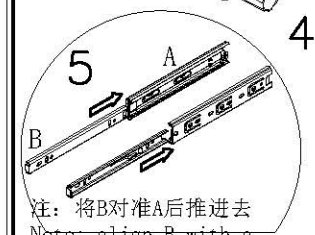

4

注: 将B对准A后推进去
Note: align B with a
and push it in

三节滚珠导轨
three-section ball rail

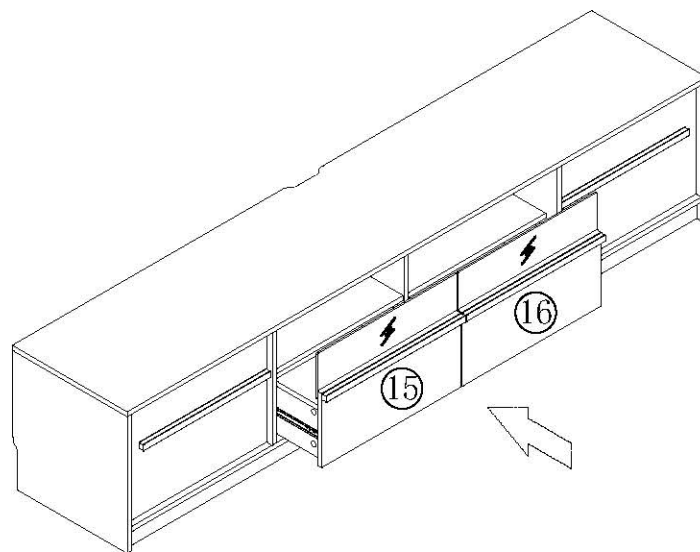


9




(E)*8



(F)*8


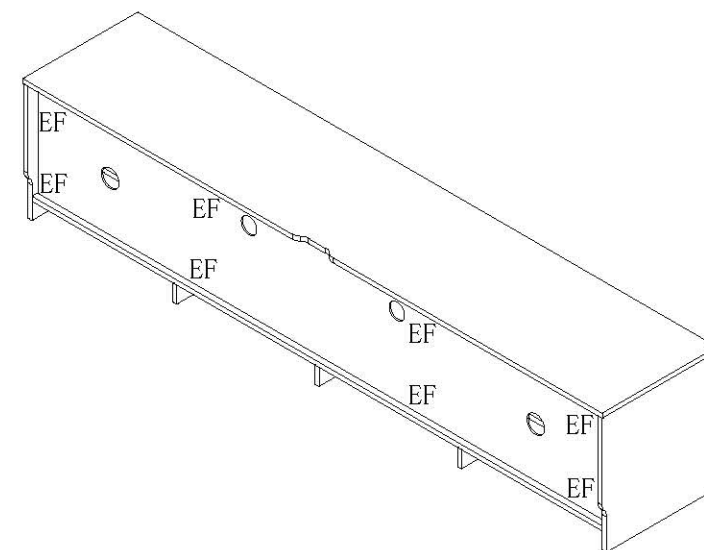


10

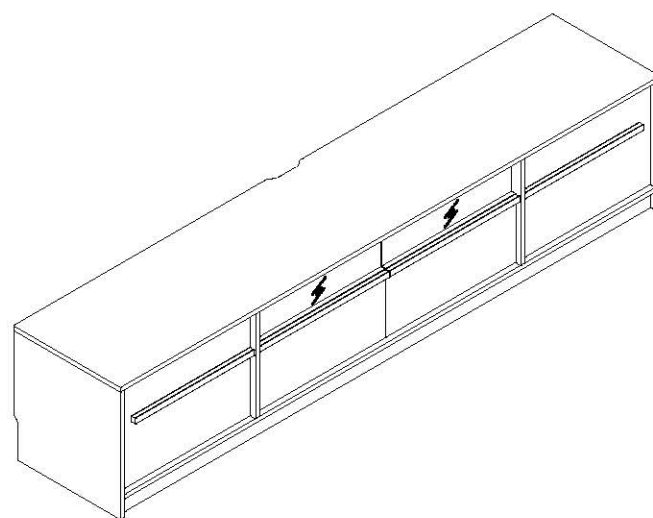






11

安装示意图/Assembly Instruction

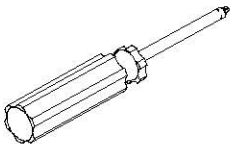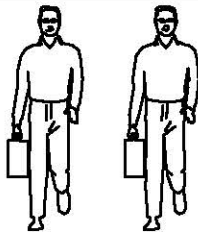
产品名称 Model NO.	矮电视柜2.4米
产品型号 Product Model	YZ1M-0
尺寸规格 Specification	(2357*398*428)mm
安装工具 Tool	安装人数 Installer
	

注：为保证设计效果，部分尺寸为定制尺寸，不影响使用。

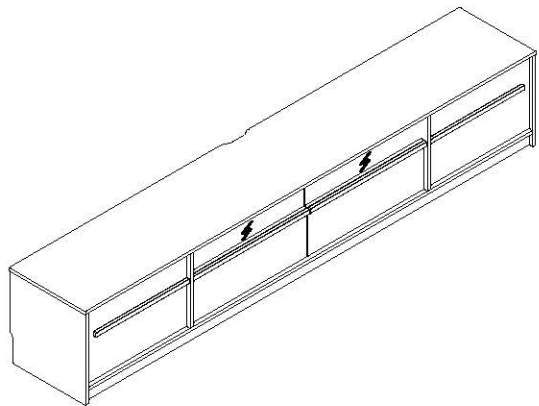


 (A)* 56 二合一螺杆 2-in-1-screw	 (B)* 56 大三合一锁饼 Three-in-one large lock	 (C)* 21 木棒Ø8x30mm wood tenon	 (D)* 16 层板托 shelf support	 (E)* 8 背板扣 Back Plate Buckle-White	 (F)* 34 自攻螺丝M3.5x14mm Self-tapping screw	 (G)* 2 透气孔盖 Vent cover	 (H)* 2 穿线孔盖 Plastic cover
 (I)* 14 脚垫-灰色 Footrest - Grey	 (J)* 4 缓冲门铰大弯-杯径Ø35 Hinge-big bends-cup diameter 35	 (K)* 8 镜钉 Mirror nail	 (L)* 8 透明塑料垫片 Transparent plastic gasket	 (M)* 8 自攻螺丝M4x16mm Self-tapping screw	 (N)* 2 玻璃:610*137*5 Glass	 (O)* 2 三节滚珠导轨-10" three-section ball rail	 (P)* 2 古铜色消音磁碰 magnetic catch

YZ1M-0(矮电视柜2.4米)		部件表/Parts List					部件表/Parts List				
安装方法/ Installation method		编号NO.	名称Name	规格 (mm) Specification	数量QTY	材质Material	编号NO.	名称Name	规格 (mm) Specification	数量QTY	材质Material
		①	面板Top panel	2357*398*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	⑮	抽屉后板Drawer Back panel	580*142*15	2	无醛定向刨花板 Aldehyde-free directional particleboard
		②	底板Bottom board	2325*382*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	⑯	抽屉底板Drawer Bottom panel	560*305*5	2	无醛添加中纤板 Formaldehyde free addition of fiberboard
		③	左侧板Side board(L)	410*397*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		④	右侧板Side board(R)	410*397*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑤	左中侧板 Middle side board(L)	337*356*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑥	中中侧板 Middle side board	337*318*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑦	右中侧板 Middle side board(R)	337*356*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑧	边活动层板 Movable shelf	533*324*15	2	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑨	中活动层板 Middle movable shelf	605*318*15	2	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑩	长脚条 Long foot slat	2325*58*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑪	短脚条 Short foot strip	350*58*15	3	无醛定向刨花板 Aldehyde-free directional particleboard					
		⑫	背板 Back board	2335*347*5	1	无醛添加中纤板 Formaldehyde free addition of fiberboard					
		⑬	左门板组立 Door board assembly(L)	530*333*30	1	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood					
		13-1	左门板 Door board(L)	530*333*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		13-2	短拉手 Short Handle	490*15*20	1	橡胶木 Rubber wood					
		⑭	右门板组立 Door board assembly(R)	530*333*30	1	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood					
		14-1	右门板 Door board(R)	530*333*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		14-2	短拉手 Short Handle	490*15*20	1	橡胶木 Rubber wood					
		⑮	左抽屉面板组立 Drawer's board assembly(L)	610*222*30	1	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood					
		15-1	左抽屉面板 Drawer's panel(L)	610*222*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		15-2	长拉手 Long Handle	609*15*20	1	橡胶木 Rubber wood					
		⑯	右抽屉面板组立 Drawer's board assembly(R)	610*222*30	1	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood					
		16-1	右抽屉面板 Drawer's panel(R)	610*222*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
		16-2	长拉手 Long Handle	609*15*20	1	橡胶木 Rubber wood					
		⑰	抽屉侧板 Drawer side board	295*142*15	4	无醛定向刨花板 Aldehyde-free directional particleboard					

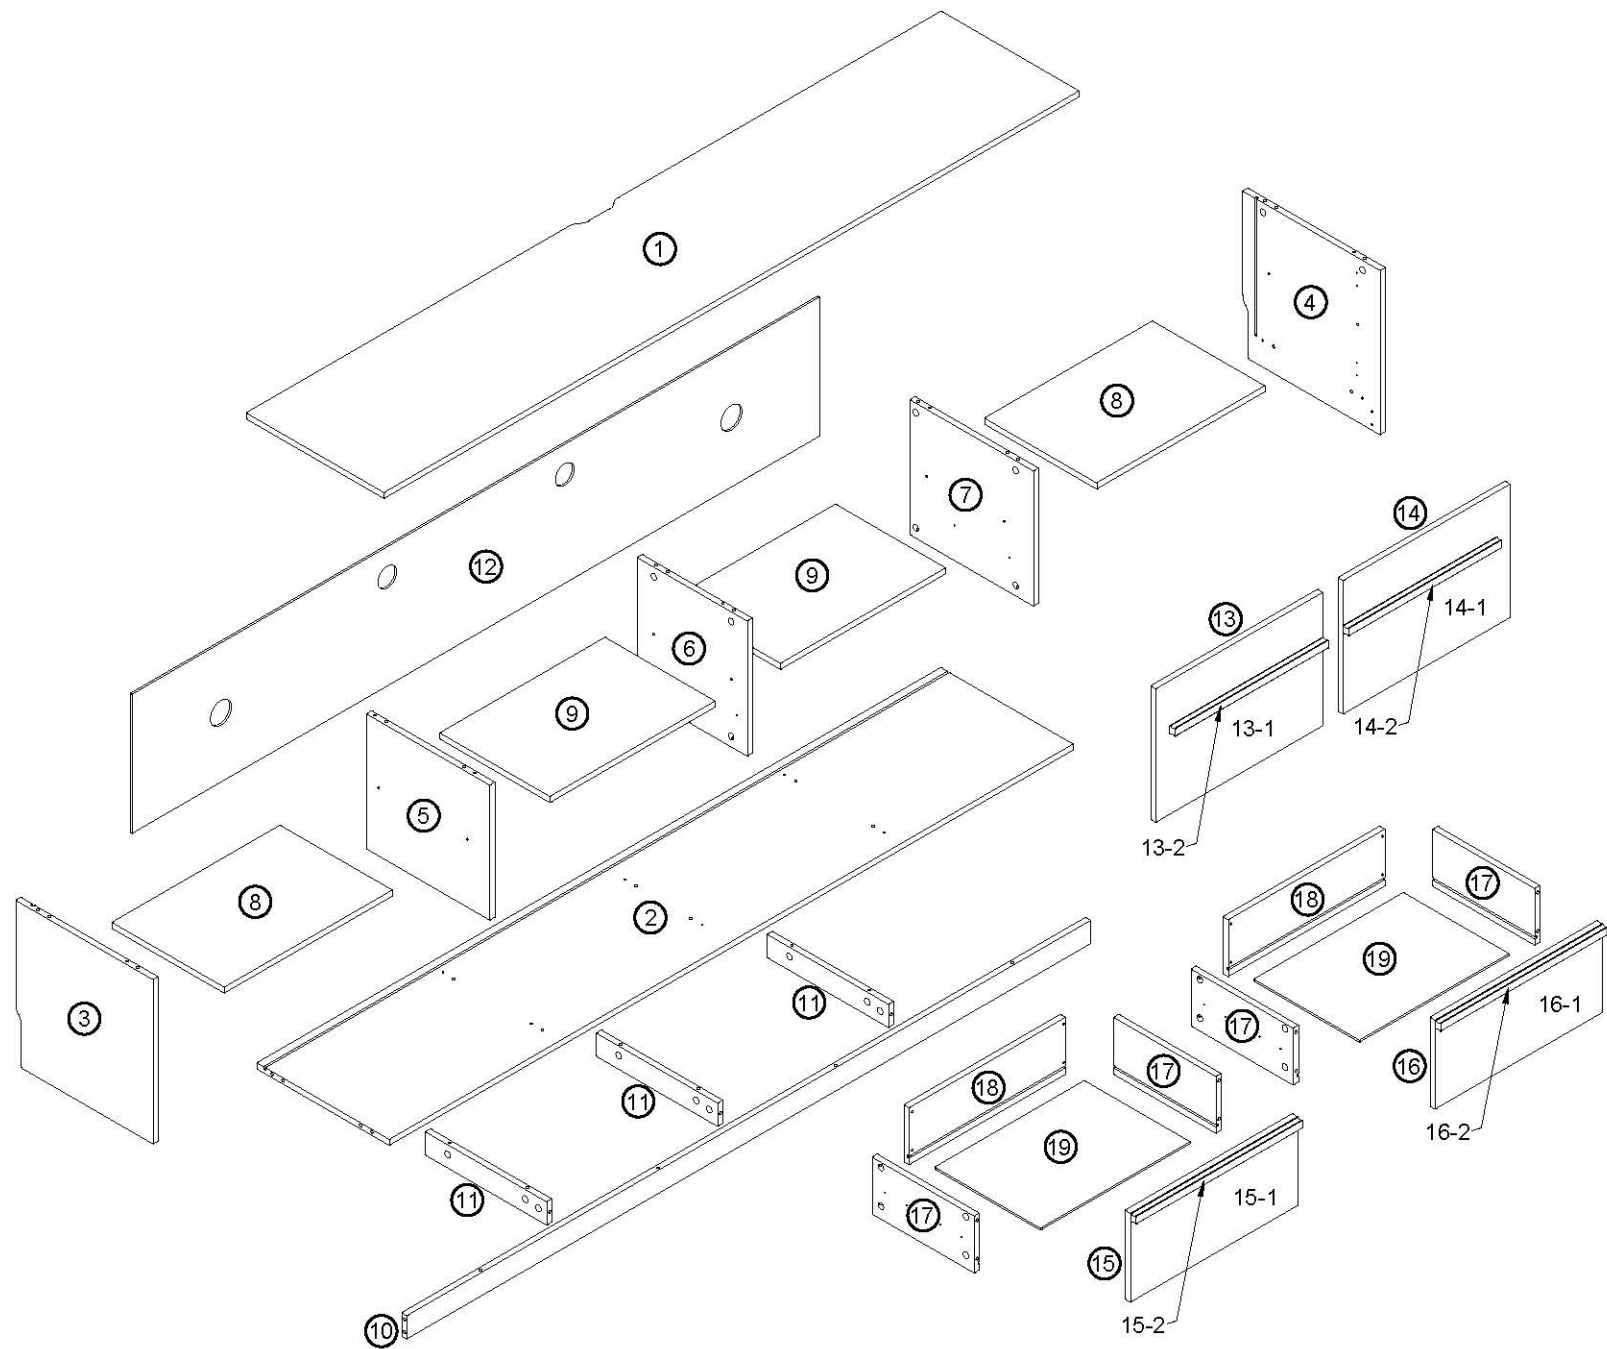


YZ1M-0(矮电视柜2.4米)

安装方法/
Installation method

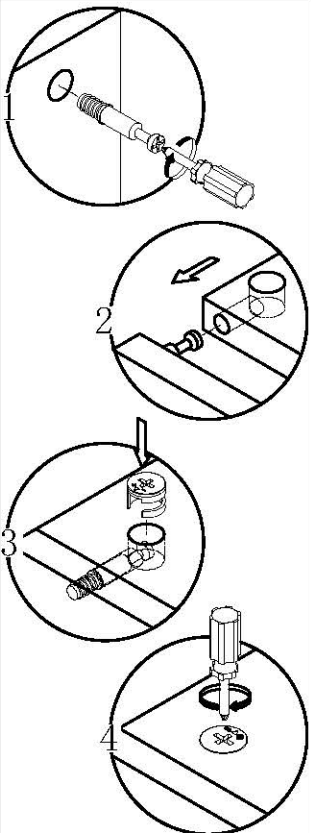

大二合一
two-in-one


- (A)*16
- (B)*16
- (F)*12
- (K)*8
- (L)*8
- (M)*8
- (N)*2
- (O)*2
- (A)*10
- (B)*10

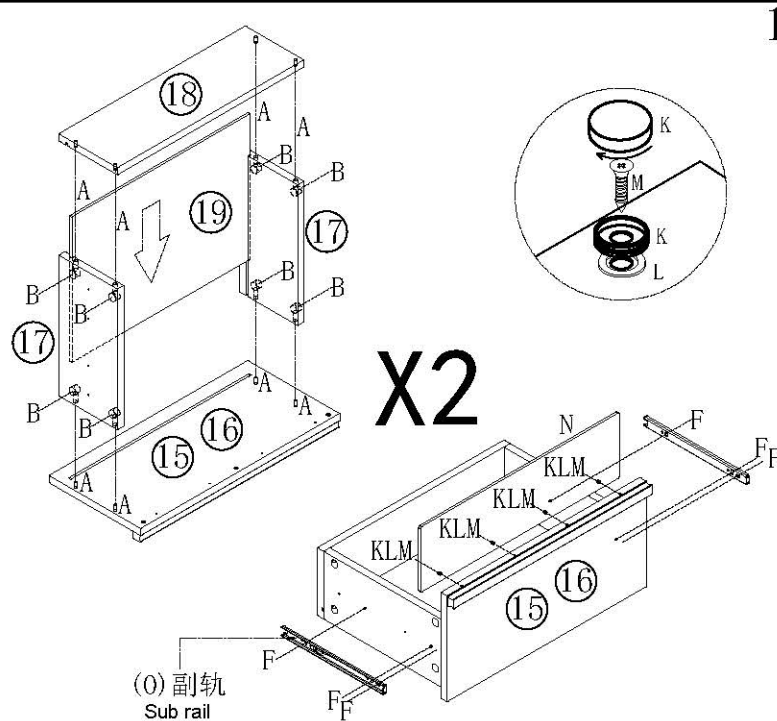


X2

1

- (A)*3
- (B)*3

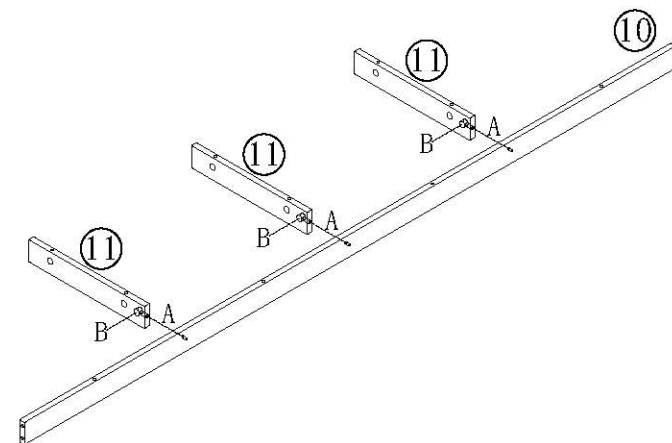


2

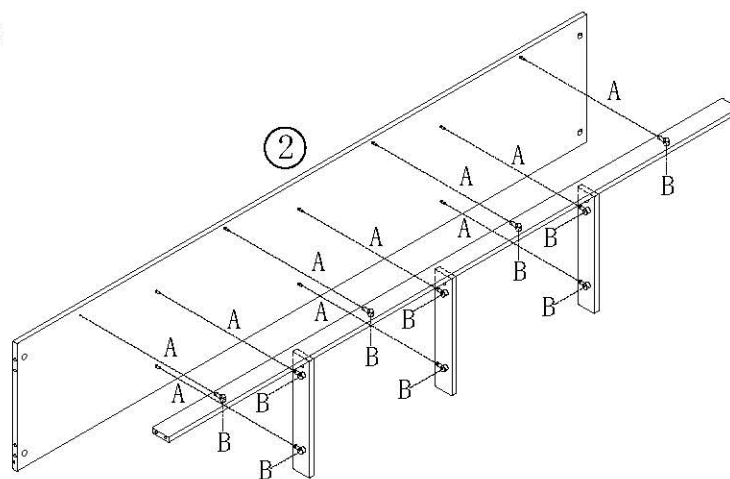

3



- (A)*14
- (B)*14
- (C)*10
- (I)*14

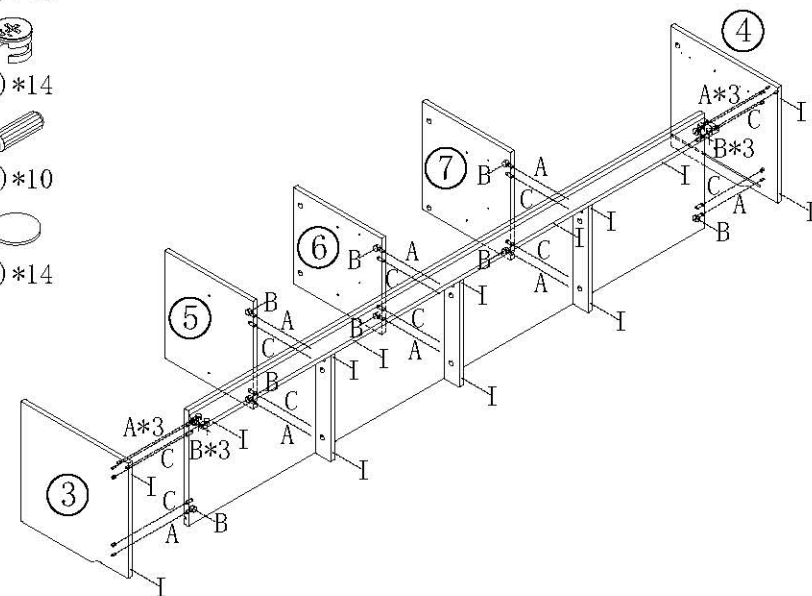


4

YZ1M-0(矮电视柜2.4米)



安装方法/
Installation method

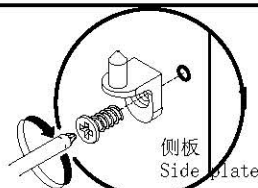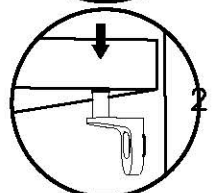

大弯big bend



直弯straight bending

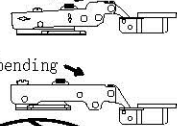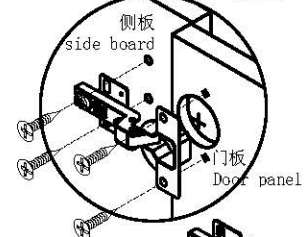


调节上下
Adjust up and down

调节左右
Adjust left and right

调节前后
Before and after adjustment


门铰
Hinge

- (A)*10
- (B)*10
- (C)*10
- (G)*2
- (H)*2

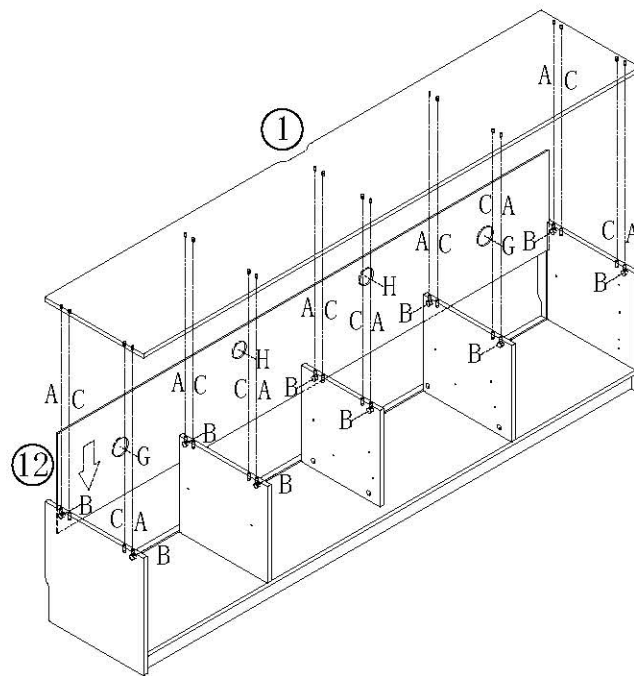

5


- (D)*16
- (F)*12
- (O)*2

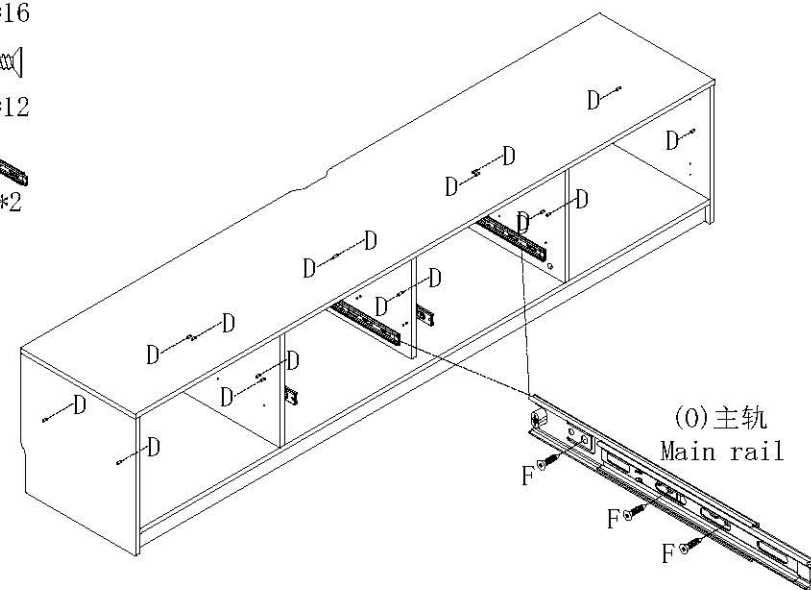


6

7

- (J)*4
- (P)*2

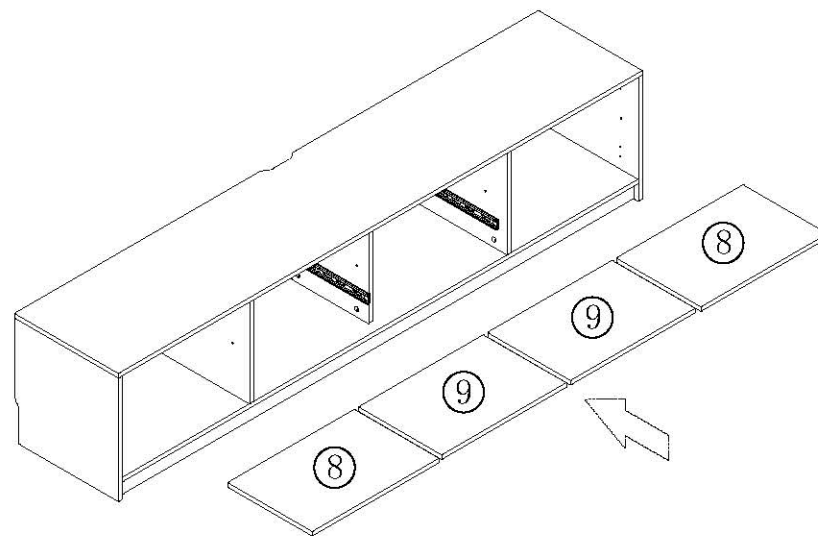

8

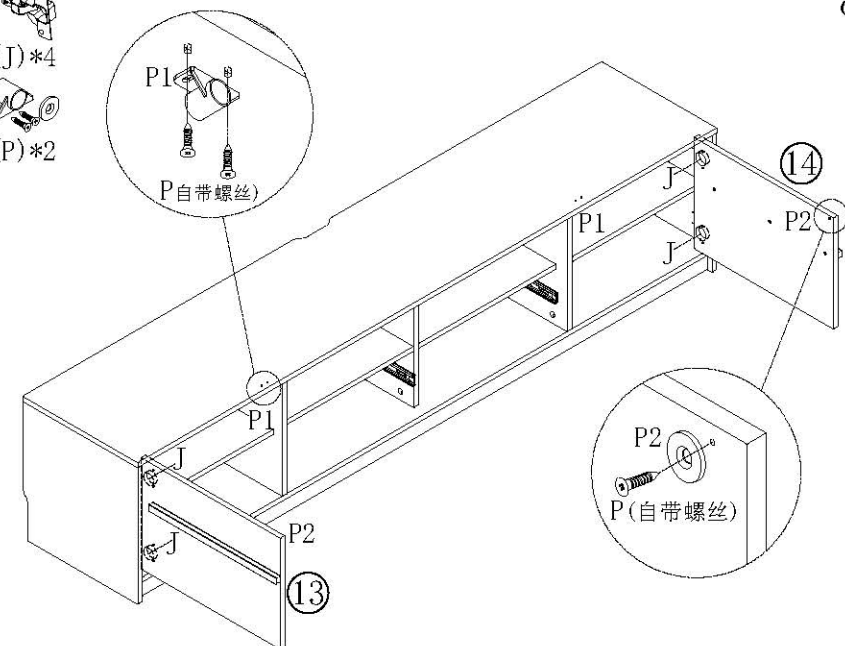


YZ1M-0(矮电视柜2.4米)

安装方法/ Installation method


阀门开关(下压为开)
Valve switch
(press down to open)

1

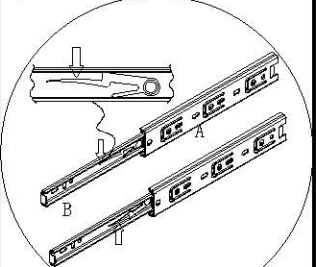


注: 先将A与B拆下来
Note: remove a and B first


2

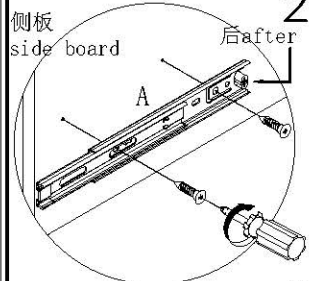

3

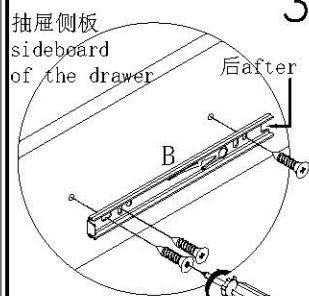


4

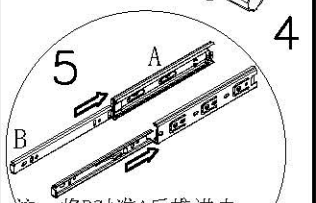


注: 将B对准A后推进去
Note: align B with a
and push it in

三节滚珠导轨
three-section ball rail

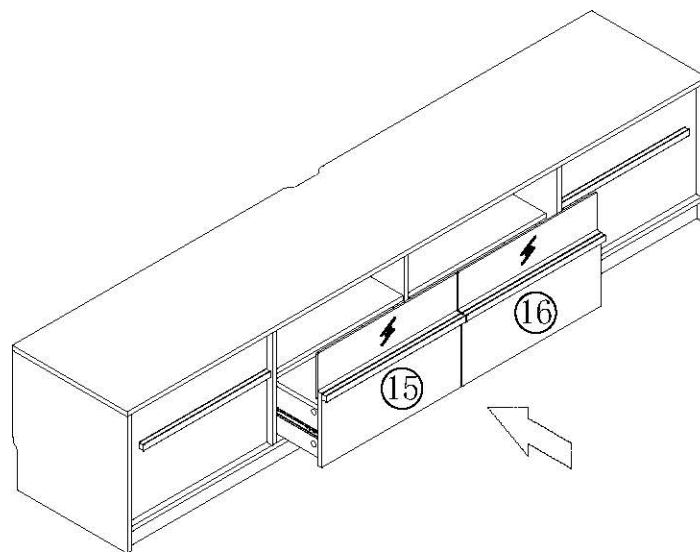


9

(E)*8
(F)*8


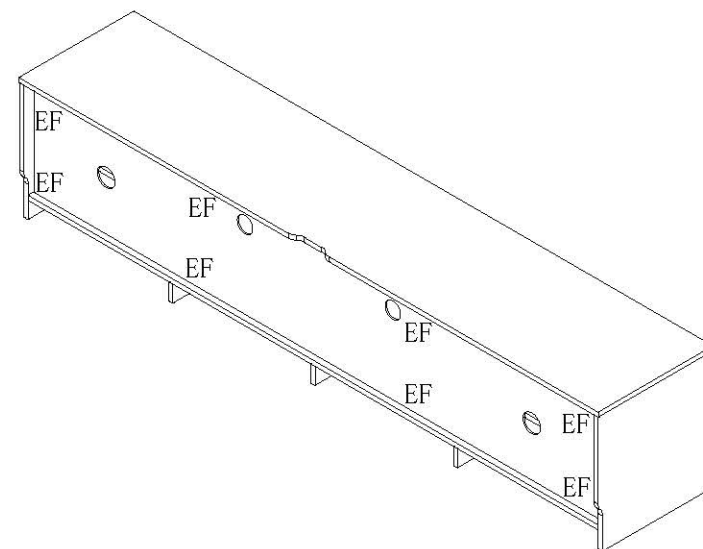


10


11







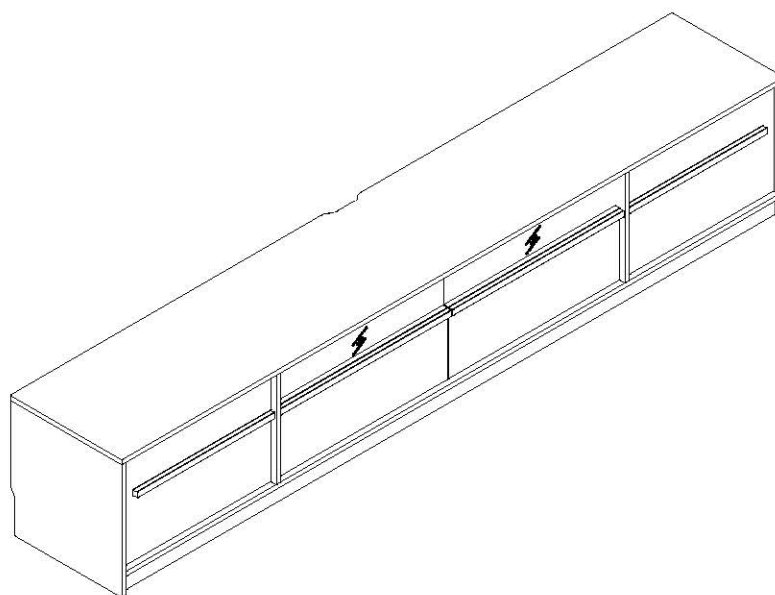


安装示意图/Assembly Instruction

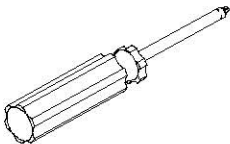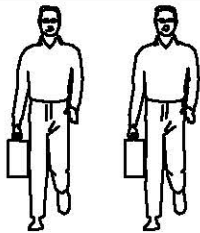
产品名称 Model NO.	矮电视柜3米
产品型号 Product Model	YZ1M-0
尺寸规格 Specification	(2993*398*428)mm
安装工具 Tool	安装人数 Installer
	

注：为保证设计效果，部分尺寸为定制尺寸，不影响使用。

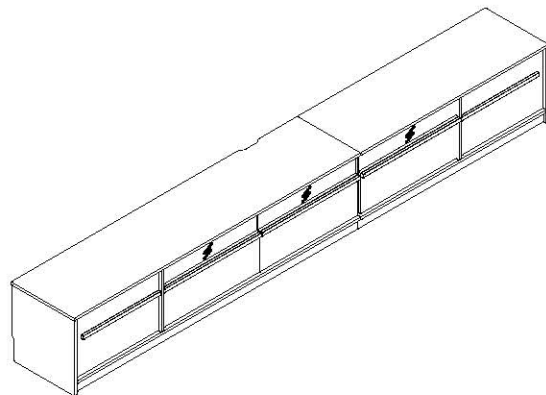


 (A)* 81 二合一螺杆 2-in-1-screw	 (B)* 81 大三合一锁饼 Three-in-one large lock	 (C)* 29 木棒Ø8x30mm wood tenon	 (D)* 20 层板托 shelf support	 (E)* 13 背板扣 Back Plate Buckle-White	 (F)* 51 自攻螺丝M3.5x14mm Self-tapping screw	 (G)* 3 透气孔盖 Vent cover	 (H)* 2 穿线孔盖 Plastic cover
 (I)* 20 脚垫-灰色 Footrest - Grey	 (J)* 4 缓冲门铰大弯-杯径Ø35 Hinge-big bends-cup diameter 35	 (K)* 12 镜钉 Mirror nail	 (L)* 13 透明塑料垫片 Transparent plastic gasket	 (M)* 13 自攻螺丝M4x16mm Self-tapping screw	 (N)* 3 玻璃:618*137*5 Glass	 (O)* 3 三节滚珠导轨-10" three-section ball rail	 (P)* 2 古铜色消音磁碰 magnetic catch
 (Q)* 4 夹板丝-M6x15mm Splint screw	 (R)* 4 斜边内六角螺杆M6x25 Beveled hexagon socket head screw	 (S)* 1 内六角扳手4mm spanner-(4mm) hex					

YZ1M-0(矮电视柜3米)	部件表/Parts List					部件表/Parts List				
安装方法/ Installation method	编号NO.	名称Name	规格 (mm) Specification	数量QTY	材质Material	编号NO.	名称Name	规格 (mm) Specification	数量QTY	材质Material
	①	左面板 Top panel(L)	1807*398*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	21-1	左抽屉面板 Drawer's panel(L)	618*222*15	2	无醛定向刨花板 Aldehyde-free directional particleboard
	②	左底板 Bottom board(L)	1791*382*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	21-2	长拉手 Long Handle	617*15*20	2	橡胶木 Rubber wood
	③	右面板 Top panel(R)	1186*398*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	22	右抽屉面板组立 Drawer's board assembly(R)	618*222*30	1	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood
	④	右底板 Bottom board(R)	1170*382*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	22-1	右抽屉面板 Drawer's panel(R)	618*222*15	2	无醛定向刨花板 Aldehyde-free directional particleboard
	⑤	左侧板Side board(L)	410*397*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	22-2	长拉手 Long Handle	617*15*20	3	橡胶木 Rubber wood
	⑥	右侧板Side board(R)	410*397*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	23	抽屉侧板 Drawer side board	295*142*15	6	无醛定向刨花板 Aldehyde-free directional particleboard
	⑦	左中侧板 Middle side board(L)	337*356*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	24	抽屉后板Drawer Back panel	580*142*15	3	无醛定向刨花板 Aldehyde-free directional particleboard
	⑧	中中侧板 Middle side board	337*318*15	1	无醛定向刨花板 Aldehyde-free directional particleboard	25	抽屉底板Drawer Bottom panel	560*305*5	3	无醛添加中纤板 Formaldehyde free addition of fiberboard
	⑨	右中侧板 Middle side board(R)	337*356*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
	⑩	左外侧板 Outer sideboard(L)	337*360*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
	⑪	右外侧板 Outer sideboard(R)	337*360*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
	⑫	边活动层板 Movable shelf	533*324*15	2	无醛定向刨花板 Aldehyde-free directional particleboard					
	⑬	中活动层板 Middle movable shelf	605*318*15	3	无醛定向刨花板 Aldehyde-free directional particleboard					
	⑭	左脚条 Foot slat(L)	1791*58*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
	⑮	右脚条 Foot slat(R)	1170*58*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
	⑯	短脚条 Short foot strip	350*58*15	5	无醛定向刨花板 Aldehyde-free directional particleboard					
	⑰	左背板 Back board(L)	1786*347*5	1	无醛添加中纤板 Formaldehyde free addition of fiberboard					
	⑱	右背板 Back board(R)	1165*347*5	1	无醛添加中纤板 Formaldehyde free addition of fiberboard					
	⑲	左门板组立 Door board assembly(L)	530*333*30	1	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood					
	19-1	左门板 Door board(L)	530*333*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
	19-2	短拉手 Short Handle	490*15*20	1	橡胶木 Rubber wood					
	20	右门板组立 Door board assembly(R)	530*333*30	1	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood					
	20-1	右门板 Door board(R)	530*333*15	1	无醛定向刨花板 Aldehyde-free directional particleboard					
	20-2	短拉手 Short Handle	490*15*20	1	橡胶木 Rubber wood					
	21	左抽屉面板组立 Drawer's board assembly(L)	618*222*30	2	无醛定向刨花板+橡胶木 Aldehyde-free directional particleboard+Rubber wood					

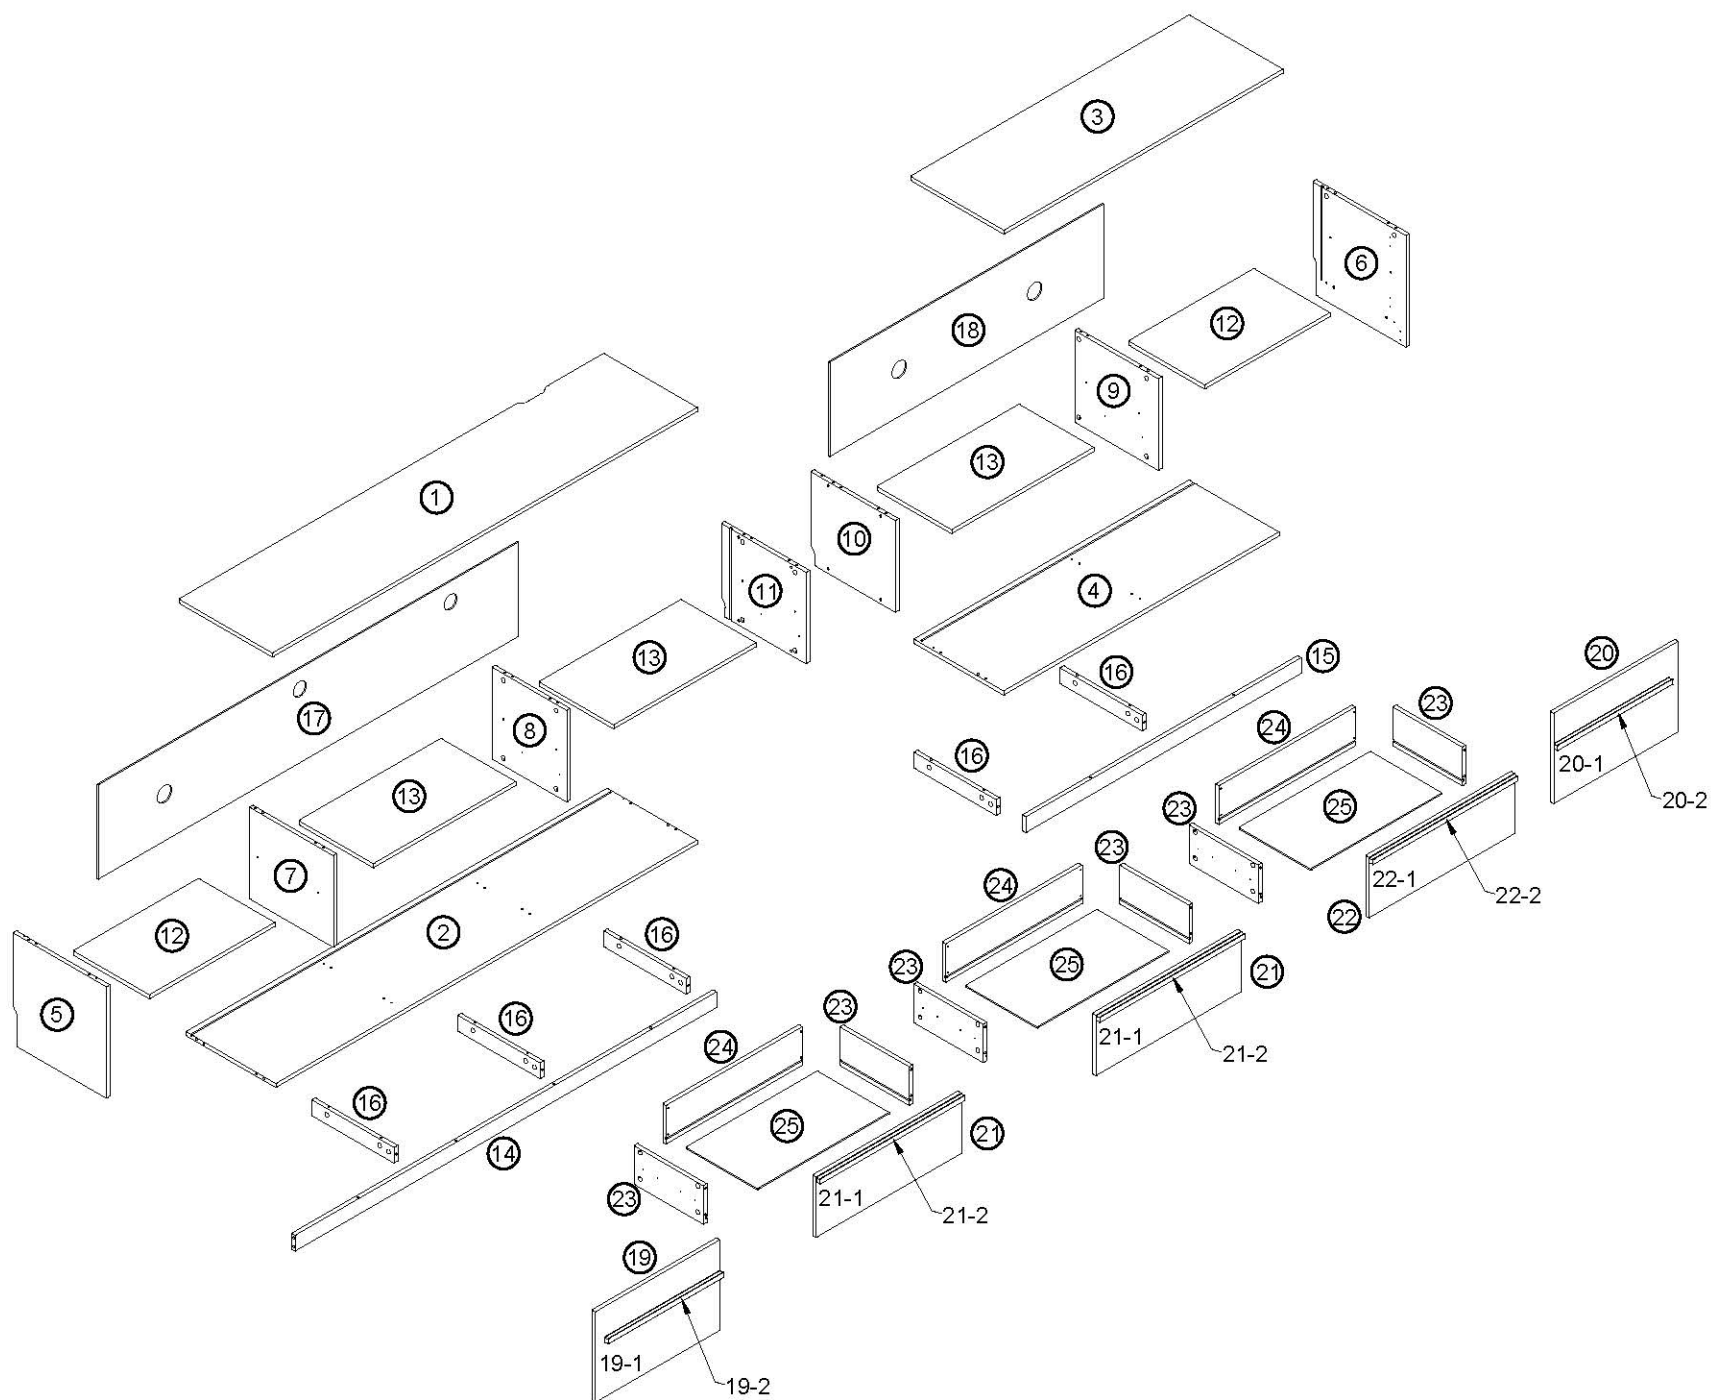


YZ1M-0 (矮电视柜3米)

安装方法/
Installation method

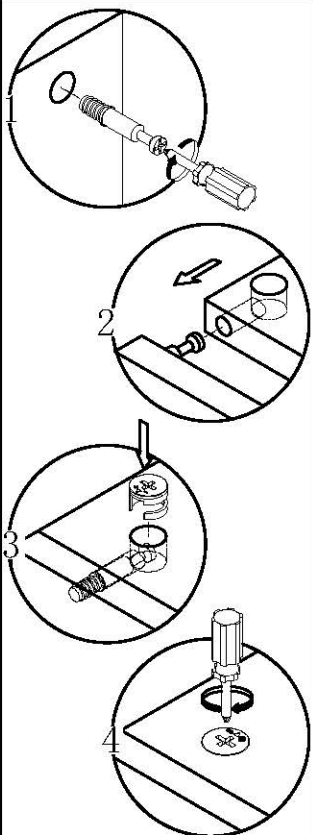


大二合一
two-in-one

- (A)*24
- (B)*24
- (F)*18
- (K)*12
- (L)*12
- (M)*12
- (N)*3
- (O)*3
- (A)*10
- (B)*10

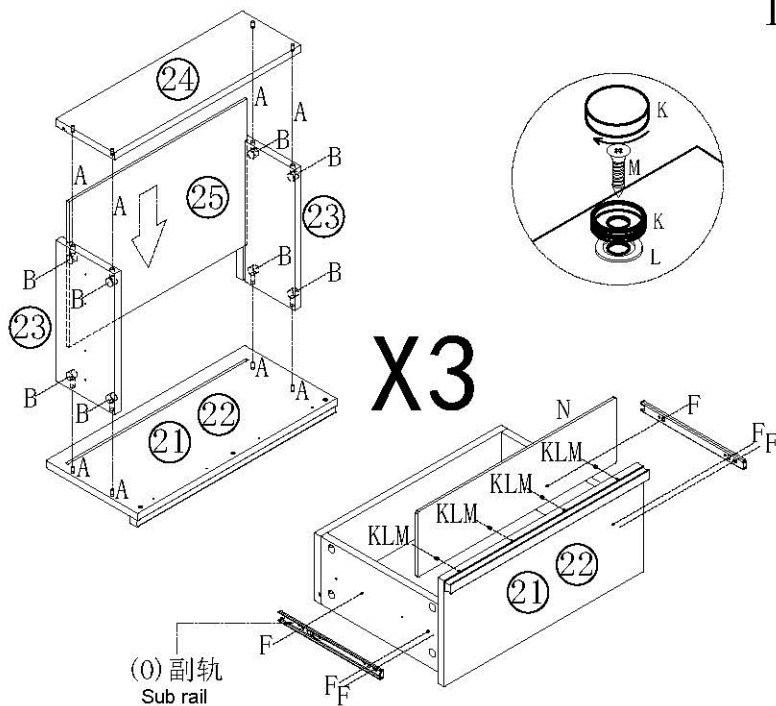


X3

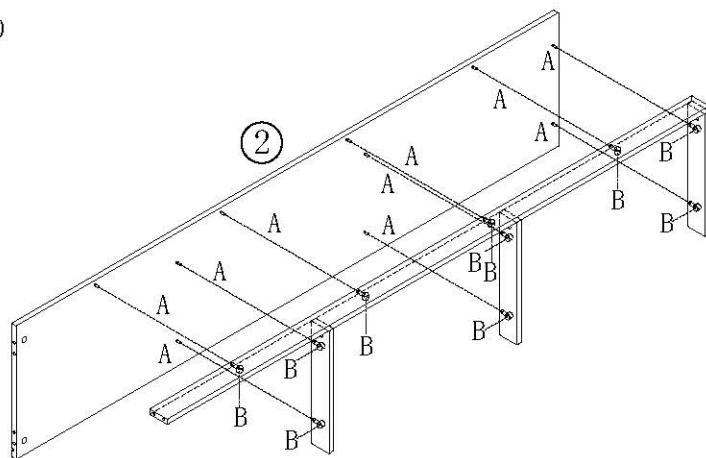


3

- (A)*10
- (B)*10
- (C)*8
- (I)*10

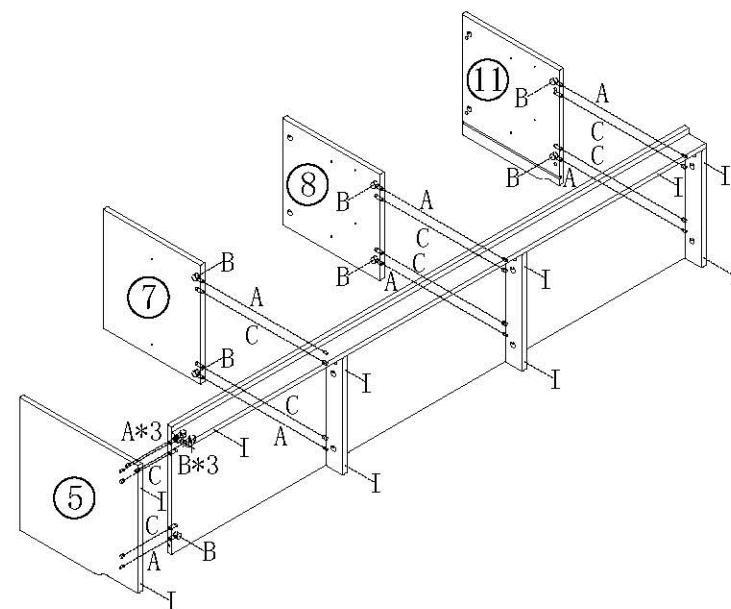

1

- (A)*3
- (B)*3




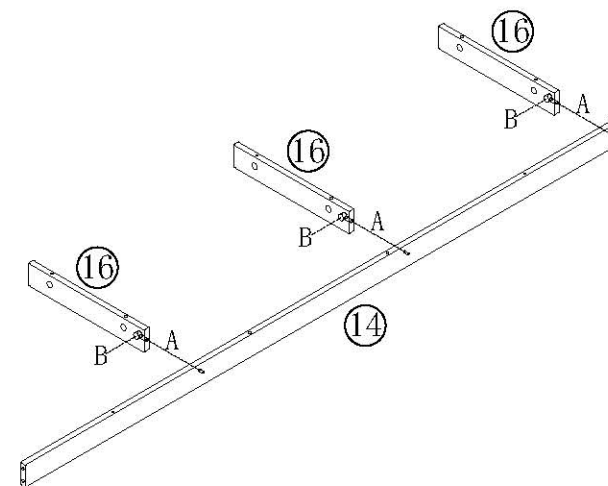


4

2


YZ1M-0 (矮电视柜3米)

安装方法/
Installation method

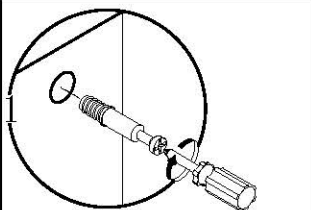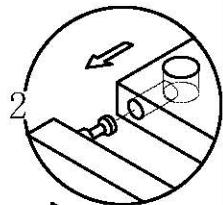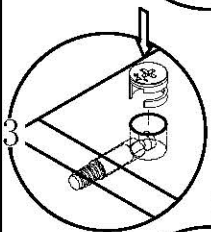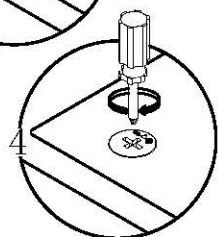


大二合一
two-in-one

- (A)*8
- (B)*8
- (C)*8
- (G)*1
- (H)*2

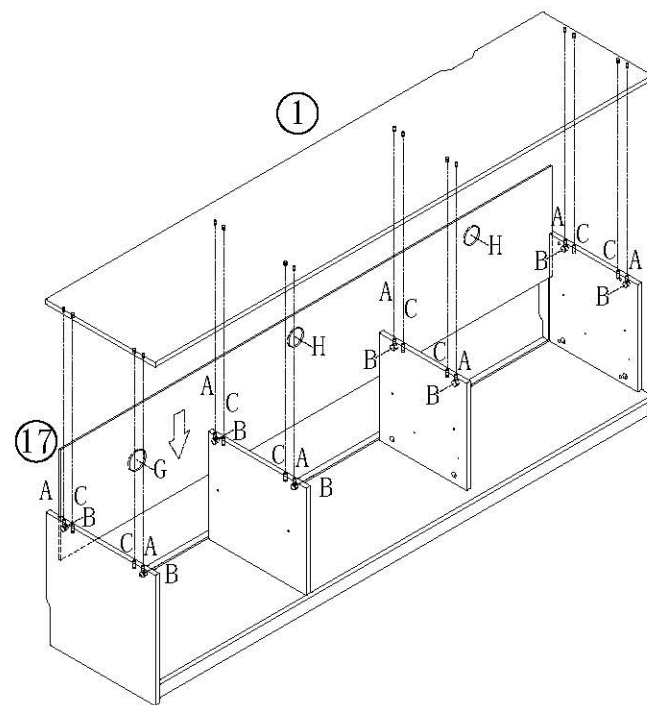


5

- (A)*2
- (B)*2

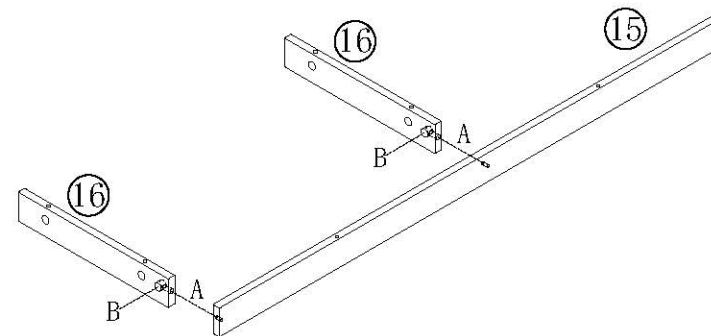


6

- (A)*6
- (B)*6

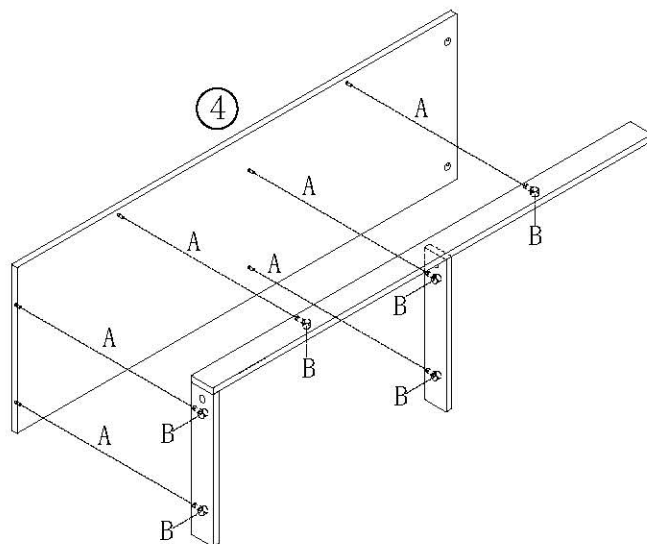

7


- (A)*8
- (B)*8
- (C)*6
- (I)*8

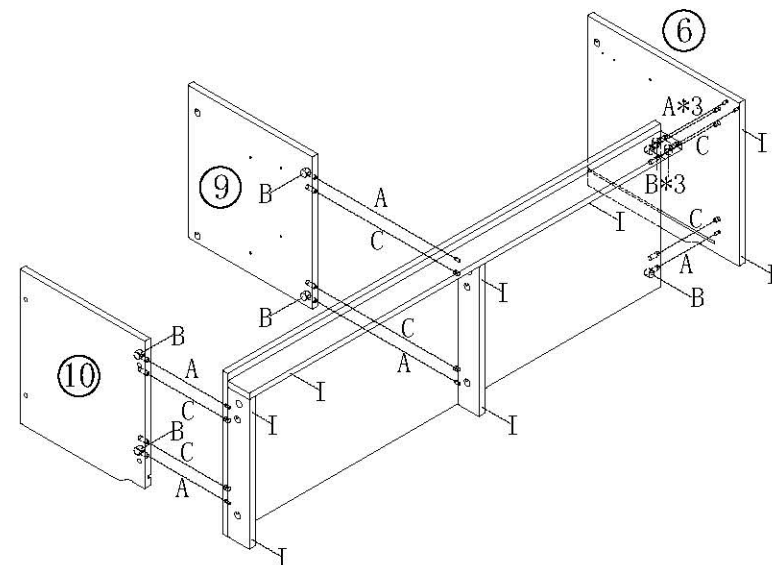


8

YZ1M-0 (矮电视柜3米)


安装方法/ Installation method

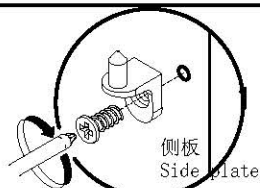

侧板
Side plate

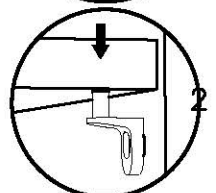

层板托5mm
shelf support

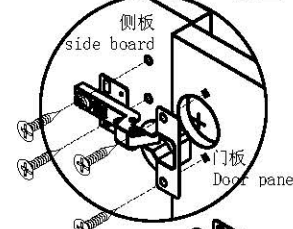

侧板
side board

门板
Door panel


调节上下
Adjust up and down

调节左右
Adjust left and right

调节前后
Before and after adjustment


门铰
Hinge

- (A) *6
- (B) *6
- (C) *6
- (G) *2

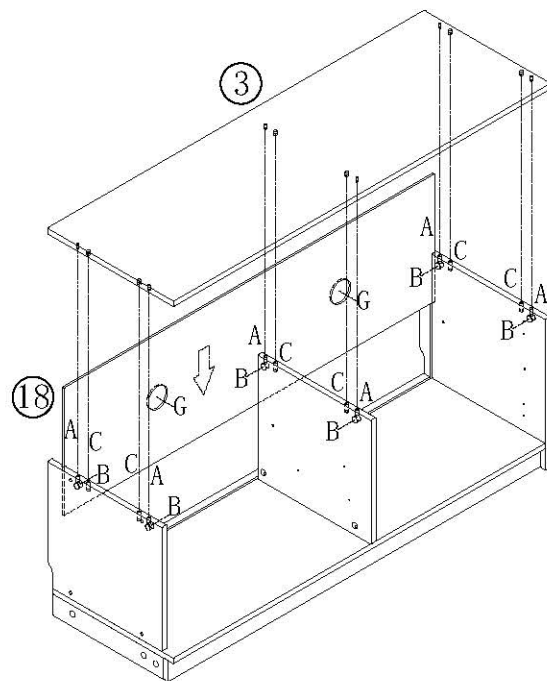

9


- (D) *20
- (F) *18
- (O) *3
- (Q) *4
- (R) *4
- (S) *1

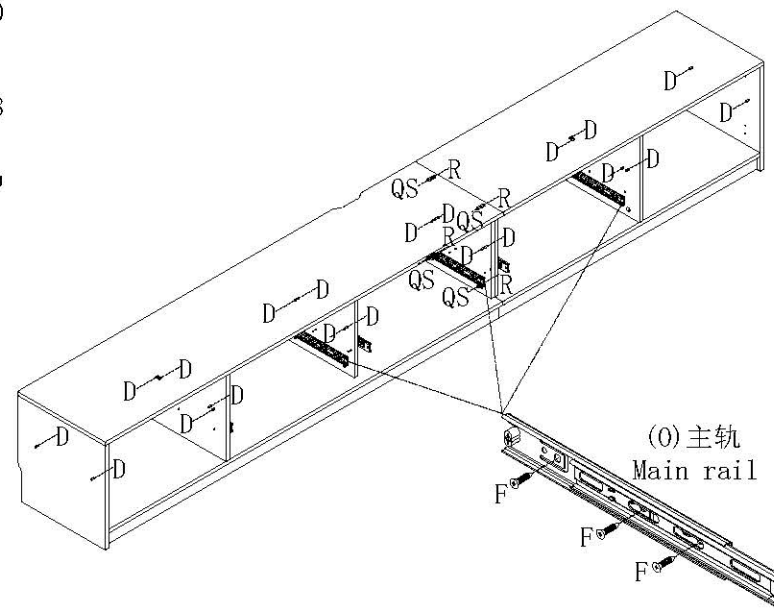


10

11

- (J) *4
- (P) *2

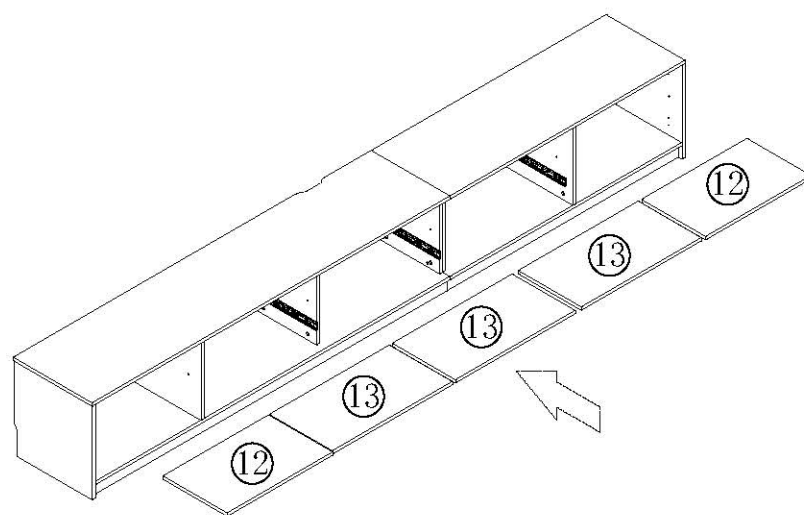

12

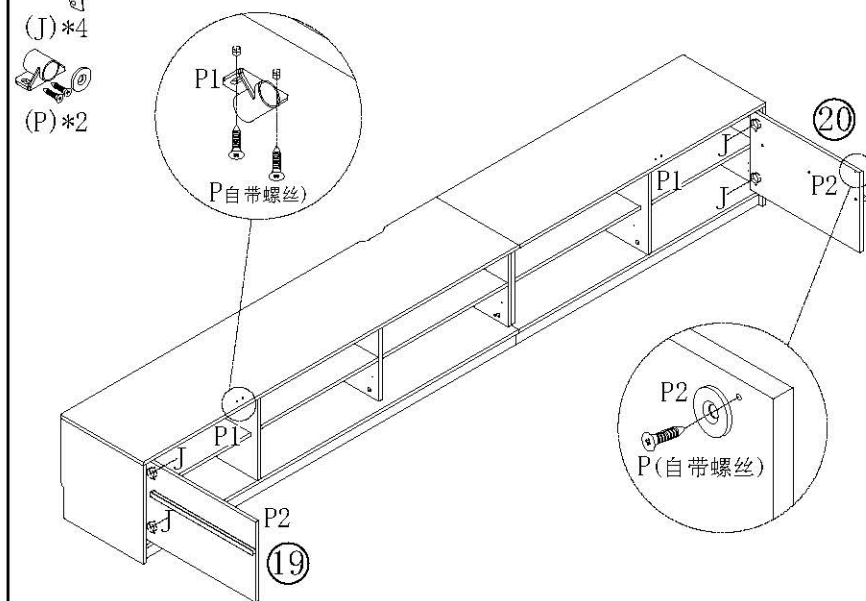


12

YZ1M-0(矮电视柜3米)


安装方法/ Installation method

阀门开关(下压为开)
Valve switch
(press down to open)

1

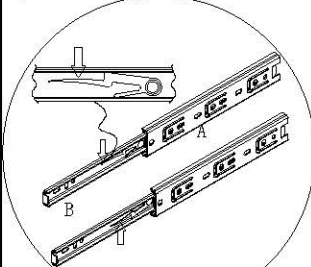

注: 先将A与B拆下来
Note: remove a and B first

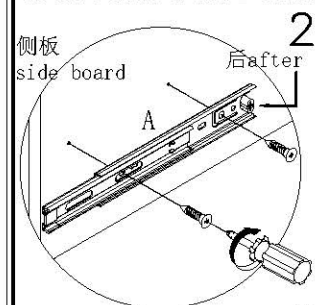

侧板
side board


后after

2


抽屉侧板
sideboard
of the drawer

后after

3

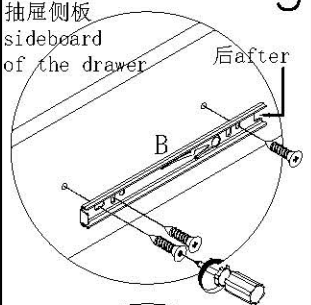


4

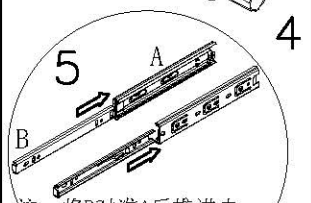

注: 将B对准A后推进去
Note: align B with a
and push it in

三节滚珠导轨
three-section ball rail

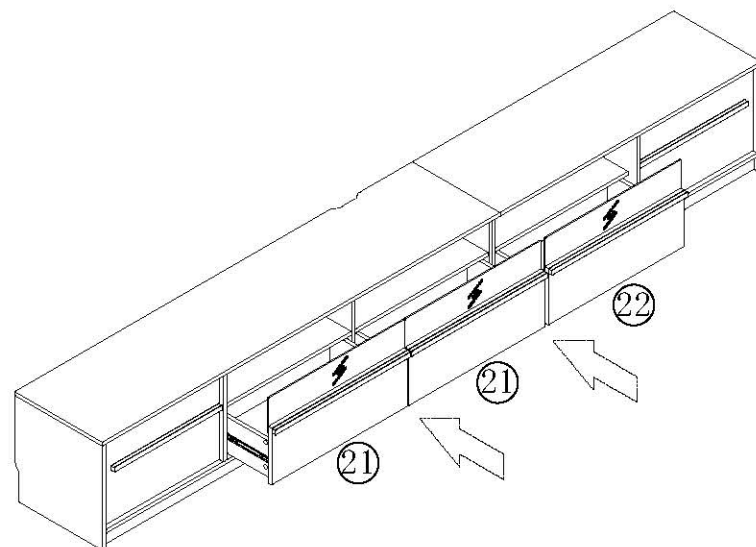


13




(E)*12



(F)*12

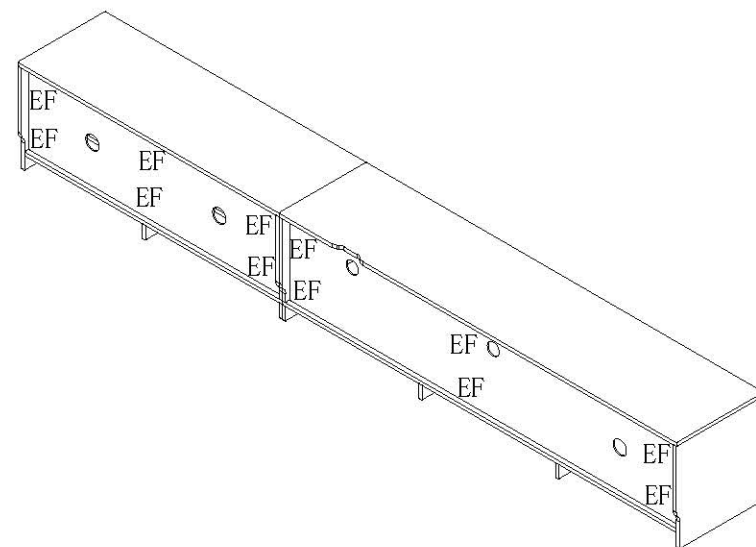

14

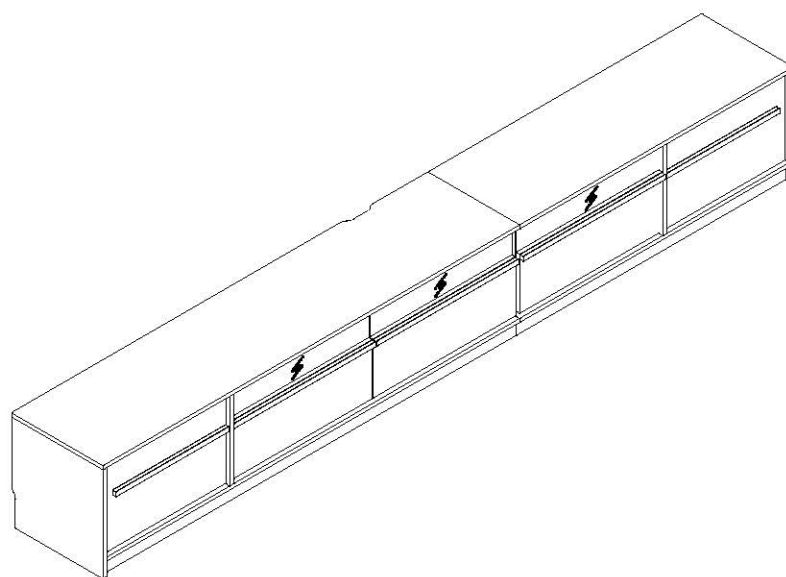

15